

October 18, 1946

EXHIBIT "D"

Repair Parts List

for


COCKSHUTT PLOW COMPANY, Limited

W. A. Shawson

Secretary

COCKSHUTT "30" TRACTOR

Standard and Row Crop

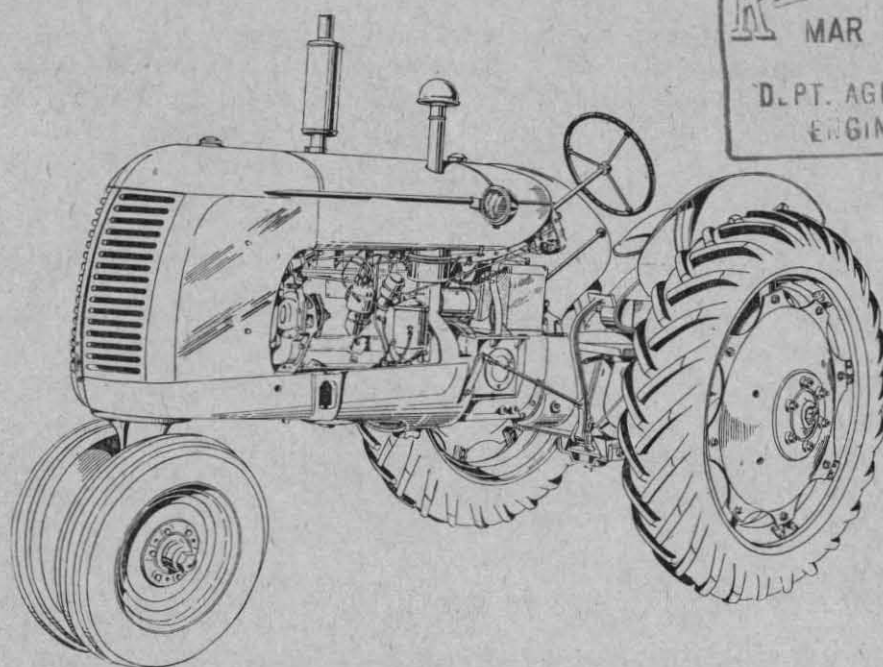

COCKSHUTT

PLOW COMPANY LIMITED

TRURO • MONTREAL
SMITHS FALLS

BRANTFORD
CANADA

WINNIPEG • REGINA • SASKATOON
CALGARY • EDMONTON

NOTE THE FOLLOWING EXPLANATIONS

1. Under the serial number column appears (1-) indicating the part used on that serial number tractor and up.
2. Under the serial number column appears (-1) indicating the part used **UP TO AN INCLUDING THAT SERIAL NUMBER.**
3. "O" appearing in the part number (ex. TO-7541) denotes the part is an assembly.
4. "W" appearing after part number (ex. TO-8332W) denotes the part is a welded construction and will be supplied only as listed.

Always remember when ordering parts, give number of part with any prefix and suffix, give full description, serial number. Always use only our number, by using cross reference list on pages 23, 24, 25 and 26. **NEVER ORDER FROM ILLUSTRATION. CHECK NUMBER WITH DESCRIPTION.**

WHY YOU SHOULD GIVE THE ENGINE SERIAL NUMBER OF THE TRACTOR.

Tractor serial number—**Stamped on the Left side of tractor frame, or on Left side of cylinder block.**

If the particular part you are ordering has been changed at any time, unless you give the serial number there is danger of our shipping you the wrong part. For your protection, **always give the serial number of tractor and engine serial number.**

RIGHT AND LEFT

Right and left is determined by looking toward the radiator from the operator's seat.

This Company reserves the right to make changes in the construction of its products when such changes are deemed an improvement or refinement. Without incurring obligation to add them to any tractor already sold.

I N D E X

	Plate No.	Page No.
AIR CLEANER	A-38	8
BATTERY	A-37	6
Battery box	B-39	11
Ground wire	B-38	8
Starter cable	B-38	8
BELT PULLEY	A-41	14
Belt pulley throw out lever	A-41	14
BOLTS, NUTS, CAP SCREWS, LOCKWASHERS		27 to 33
Are listed on Pages from 27 to 33 inclusive, except those that carry part numbers.		
BRAKES	A-39	10
Brake housing	A-39	10
Brake lining	A-39	10
Brake gasket	A-39	10
Brake toggle	A-39	10
Brake drum	A-39	10
Brake pedals	B-39	11
Brake pedal lock	A-37	6
CARBURETOR	B-37	7
CLUTCH ENGINE	A-44	18
Clutch release shaft arm	A-44	18
Clutch lining	A-44	18
Clutch pedal	A-39	10
COIL	A-38	8
Wire, coil to distributor	A-38	8
Wire, ammeter to ignition	A-38	8
CRANK STARTING	B-41	15
CREEPER GEAR	A-45	20
Creeper gear case	A-45	20
Creeper gears	A-45	20
Creeper gear shift lever	A-45	20
CROSS REFERENCE — Manufacturing number to part number		23 to 26
DIFFERENTIAL	A-39	Inclusive 10
Differential pinion	A-39	10
Differential bearing	A-39	10
DISTRIBUTOR	A-38	8
ENGINE	B-41	15
Air cleaner connections	A-42	16
Breather cap	B-42	17
Cam	B-42	17
Cam gear driver on crankshaft	A-42	16
Cam gear on crankshaft	B-41	15
Carburetor gasket	A-43	22
Cooling outlet	A-42	16
Crank case	A-42	16
Crank case pan	A-42	16
Crankshaft	A-43	22
Cylinder block	A-42	16
Cylinder head gasket	A-42	16
Cylinder head studs	A-42	16
Dip stick	A-42	16
Engine replacement kit	B-40	13
Exhaust gasket	B-41	15
Exhaust pipe	B-41	15
Fan belt	B-41	15

I N D E X — Continued

	Plate No.	Page No.
Fan blade	B-41	15
Fan pulley on crankshaft	A-42	16
Felt for clutch cover	A-41	14
Flywheel	B-42	17
Flywheel housing	B-42	17
Front support	A-43	22
Gasket, exhaust manifold	B-42	17
Gasoline line	A-41	14
Gear case cover	A-43	22
Governor	A-43	22
Governor spring	A-43	22
Governor hand control rod	A-38	8
Governor bracket	A-38	8
Intake and exhaust manifold	B-42	17
Main bearings	A-42	16
Muffler	B-37	7
Oil pump	A-42	16
Rocker arm	B-42	17
Sleeves	A-42	16
Valves	A-42	16
Valve cover	A-42	16
Valve push rods	B-42	17
Valve springs	A-42	16
Water pump	A-43	22
FENDERS (Under optional equipment, page 53)	B-39	11
FLOORBOARDS	A-39, B-39	10 & 11
FRONT AXLE STANDARD TRACTOR	B-41	15
Bearing for front wheels	A-38	8
Bushings, bronze	B-41	15
Dust disc	B-41	15
Pivot post	B-41	15
Spindle bolts on king pin	B-41	15
Tie rods	B-41	15
FRONT AXLE ROW CROP	A-38	8
Bearings for front wheels	A-38	8
Pedestal	A-38	8
FRONT WHEELS	A-38	8
Bearings	A-38	8
Bolts	A-38	8
Hub	A-38	8
Tires	A-38	8
GENERATOR	A-37	6
HITCH	A-39, B-39	10 & 11
HEAD LAMPS	B-40	13
Bolt for rim	B-40	13
Bulb	B-40	13
Lens	B-40	13
Rim	B-40	13
Shell and reflector	B-40	13
INSTRUMENT PANEL	B-39	11
Amperes gauge	B-39	11
Dash light bulb	B-39	11
Key	B-39	11
Oil pressure gauge	B-39	11
Starter control	B-39	11
Temperature gauge	B-39	11
Wire harness	B-39	11

I N D E X — Continued

	Plate No.	Page No.
LIVE POWER TAKE-OFF	B-44	19
Clutch	B-44	19
Front section	A-44	18
Rear section	B-44	19
OIL FILTER	B-38	9
RADIATOR	B-41	15
Hose clamps	B-41	15
Hose connections	B-41	15
Lower connections	B-41	15
Upper connections	B-41	15
RADIATOR GRILL	A-37	6
REAR AXLE	B-39	11
Rear axle bearing outer	B-39	11
Rear axle bearing inner	A-39	10
Rear axle bearing nut	B-39	11
Rear axle main gear	A-39	10
Rear axle housing left	A-39	10
Rear axle housing right	B-39	11
REAR LIGHT BRACKET	A-40	12
REAR WHEELS	B-39	11
Disc	B-39	11
Hub bolts	B-39	11
Hub bolt nuts	B-39	11
Rear wheel hub	B-39	11
Tires	A-38	8
RUBBER STRIPS UNDER GAS TANK	A-40	12
STARTER	B-38	8
SEAT	A-40	12
SEAT SUPPORT	A-40	12
SEDIMENT BOWL	A-37	6
SOCKET WRENCH	B-37	7
STEER WHEEL	A-40	12
STEER WHEEL SHAFT	A-40	12
STEER WHEEL BEARING BRACKET	A-40	12
STANDARD POWER TAKE-OFF	B-44	19
STEERING GEAR	B-40	13
Universal joint	B-40	13
THROTTLE LEVER	A-41	14
TOOL BOX	B-39	11
TRANSMISSION SHIFT	B-45	21
Transmission cover	A-39	10
Transmission gears	B-45	21
Transmission forks	B-45	21
Transmission shaft	B-45	21
Transmission tower	B-45	21
Transmission case	B-45	21
WHEEL WEIGHTS	B-39	11


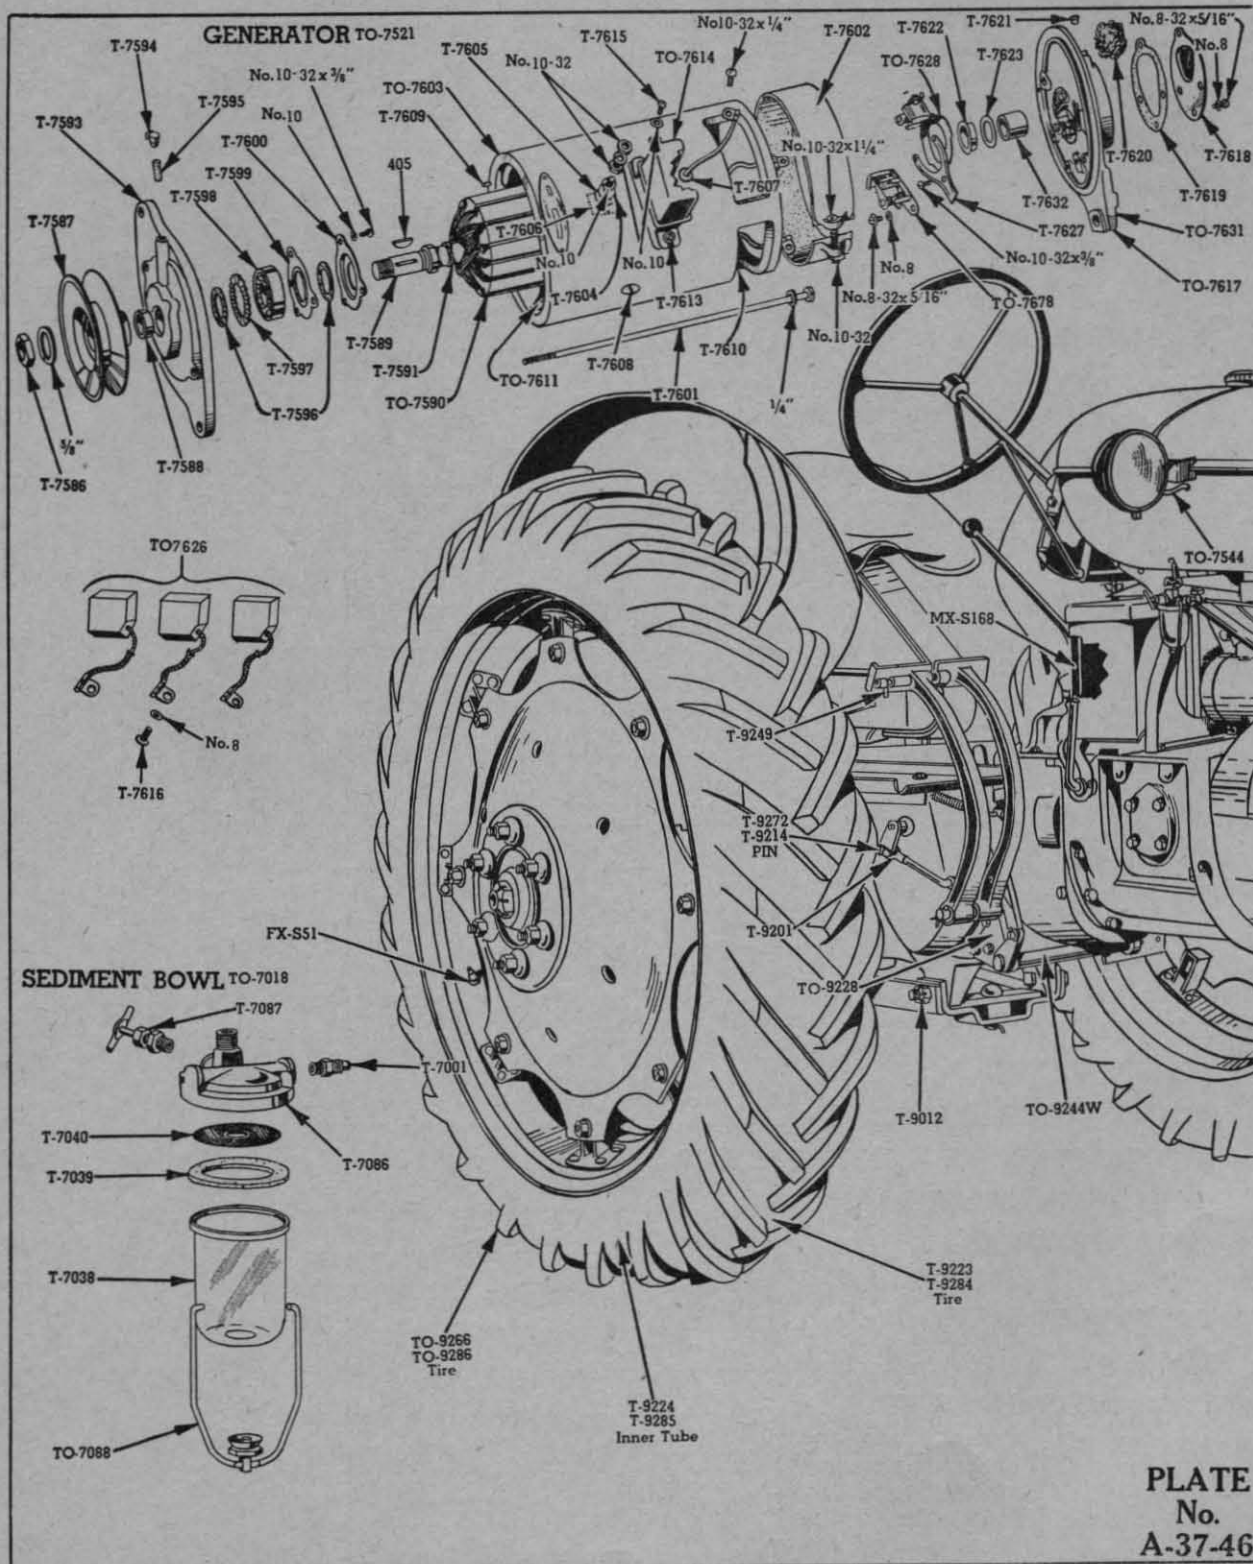


PLATE
No.
A-37-46

NOTE — Never order from Illustrations alone, always look up printed list

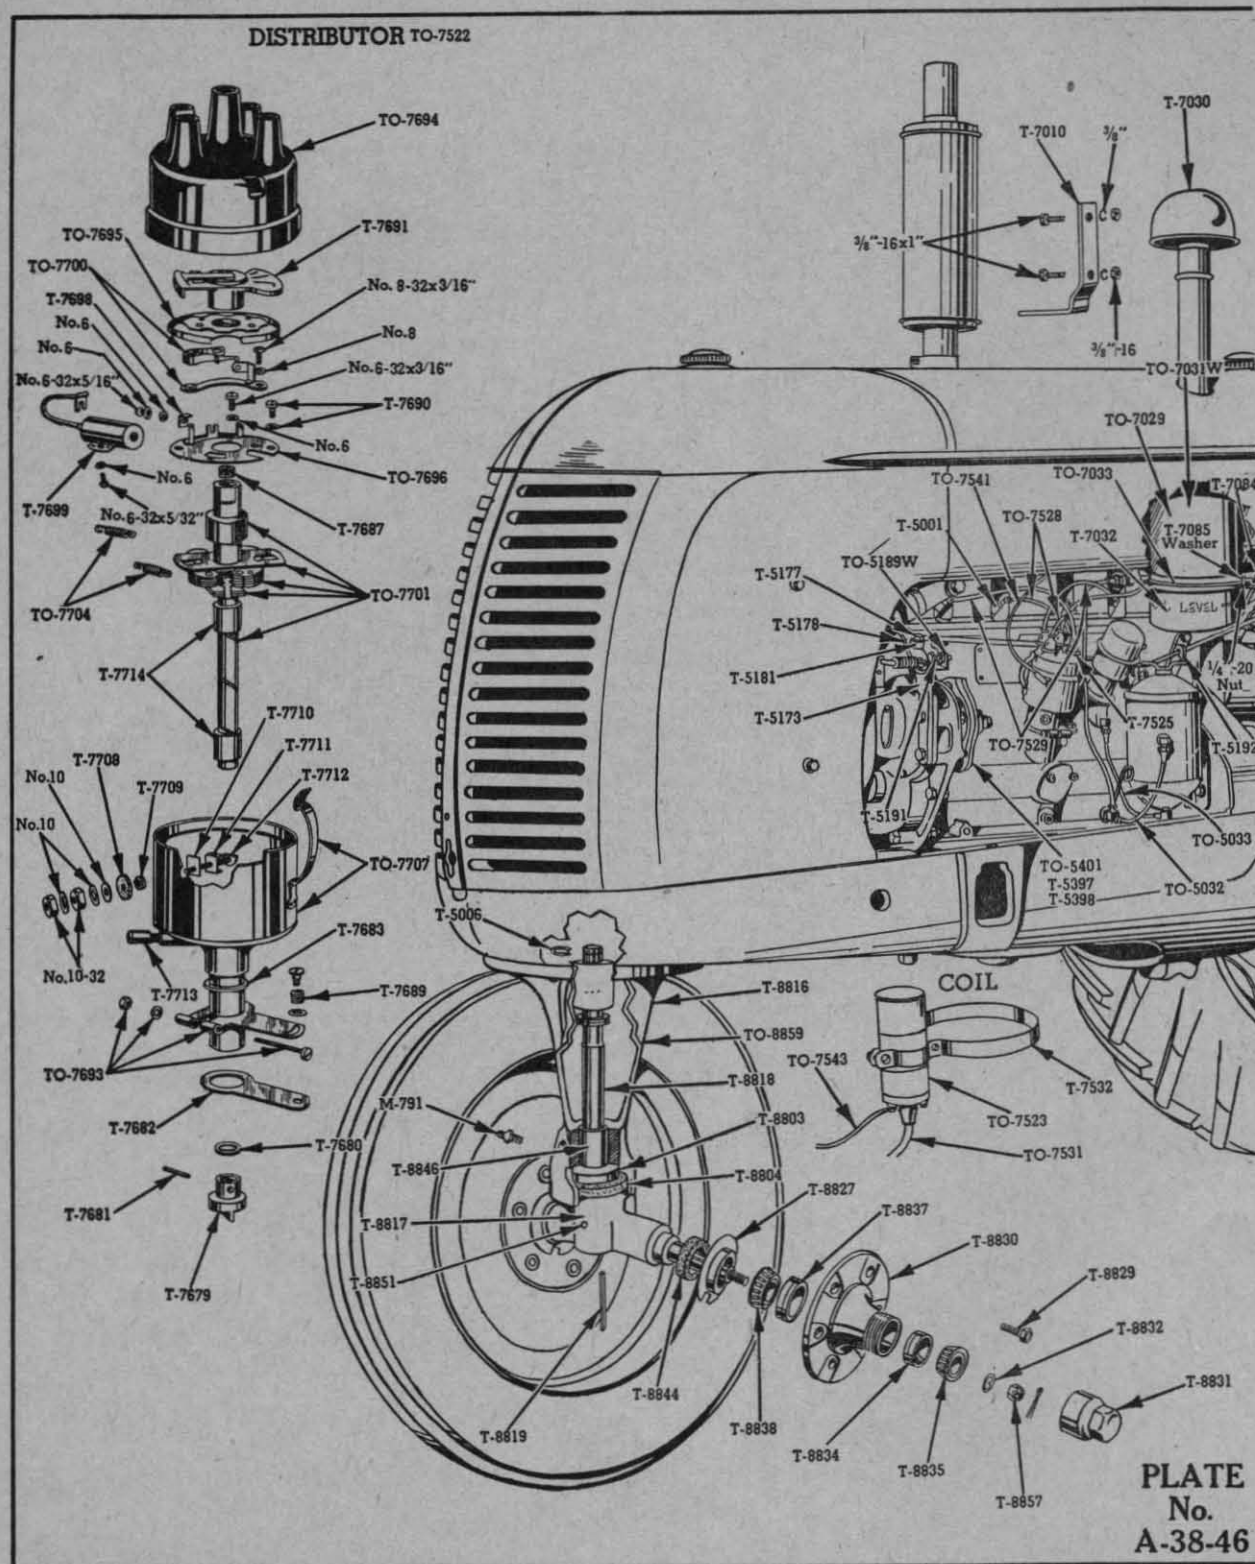

NOTE — Never order from Illustrations alone, always look up printed list


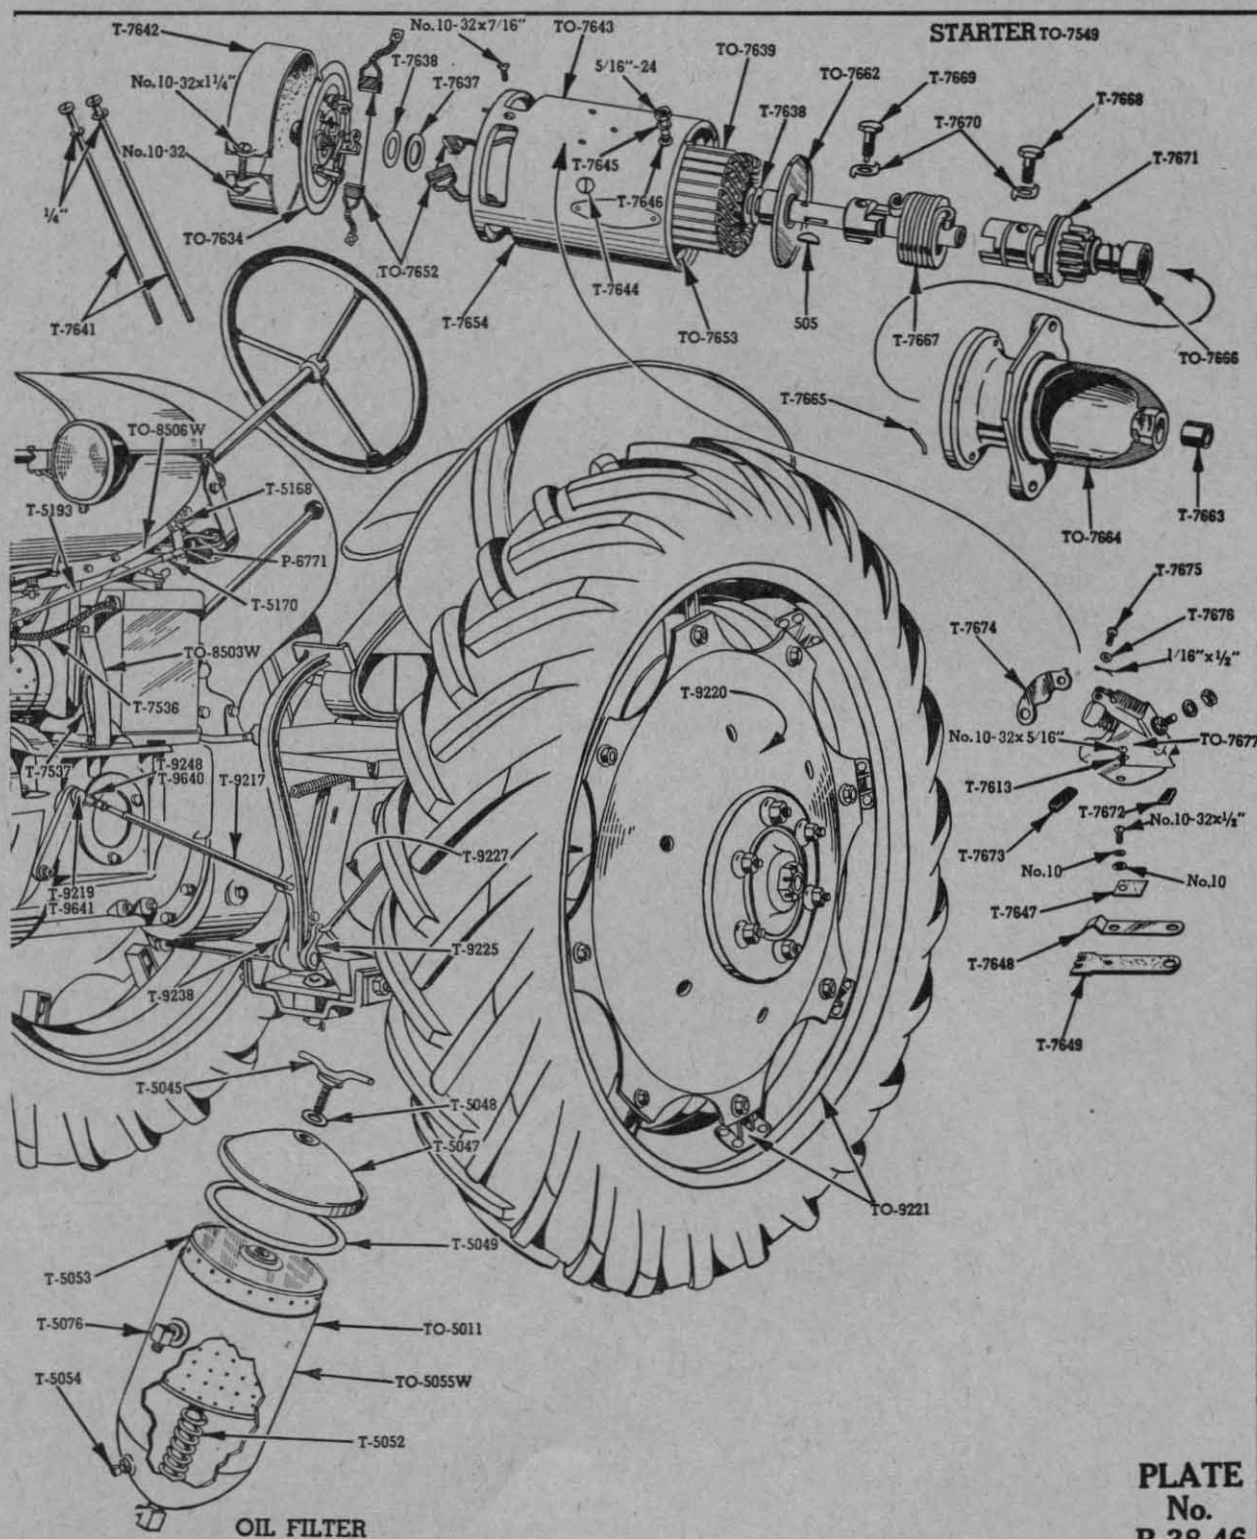


PLATE
No.
B-38-46

NOTE — Never order from Illustrations alone, always look up printed list

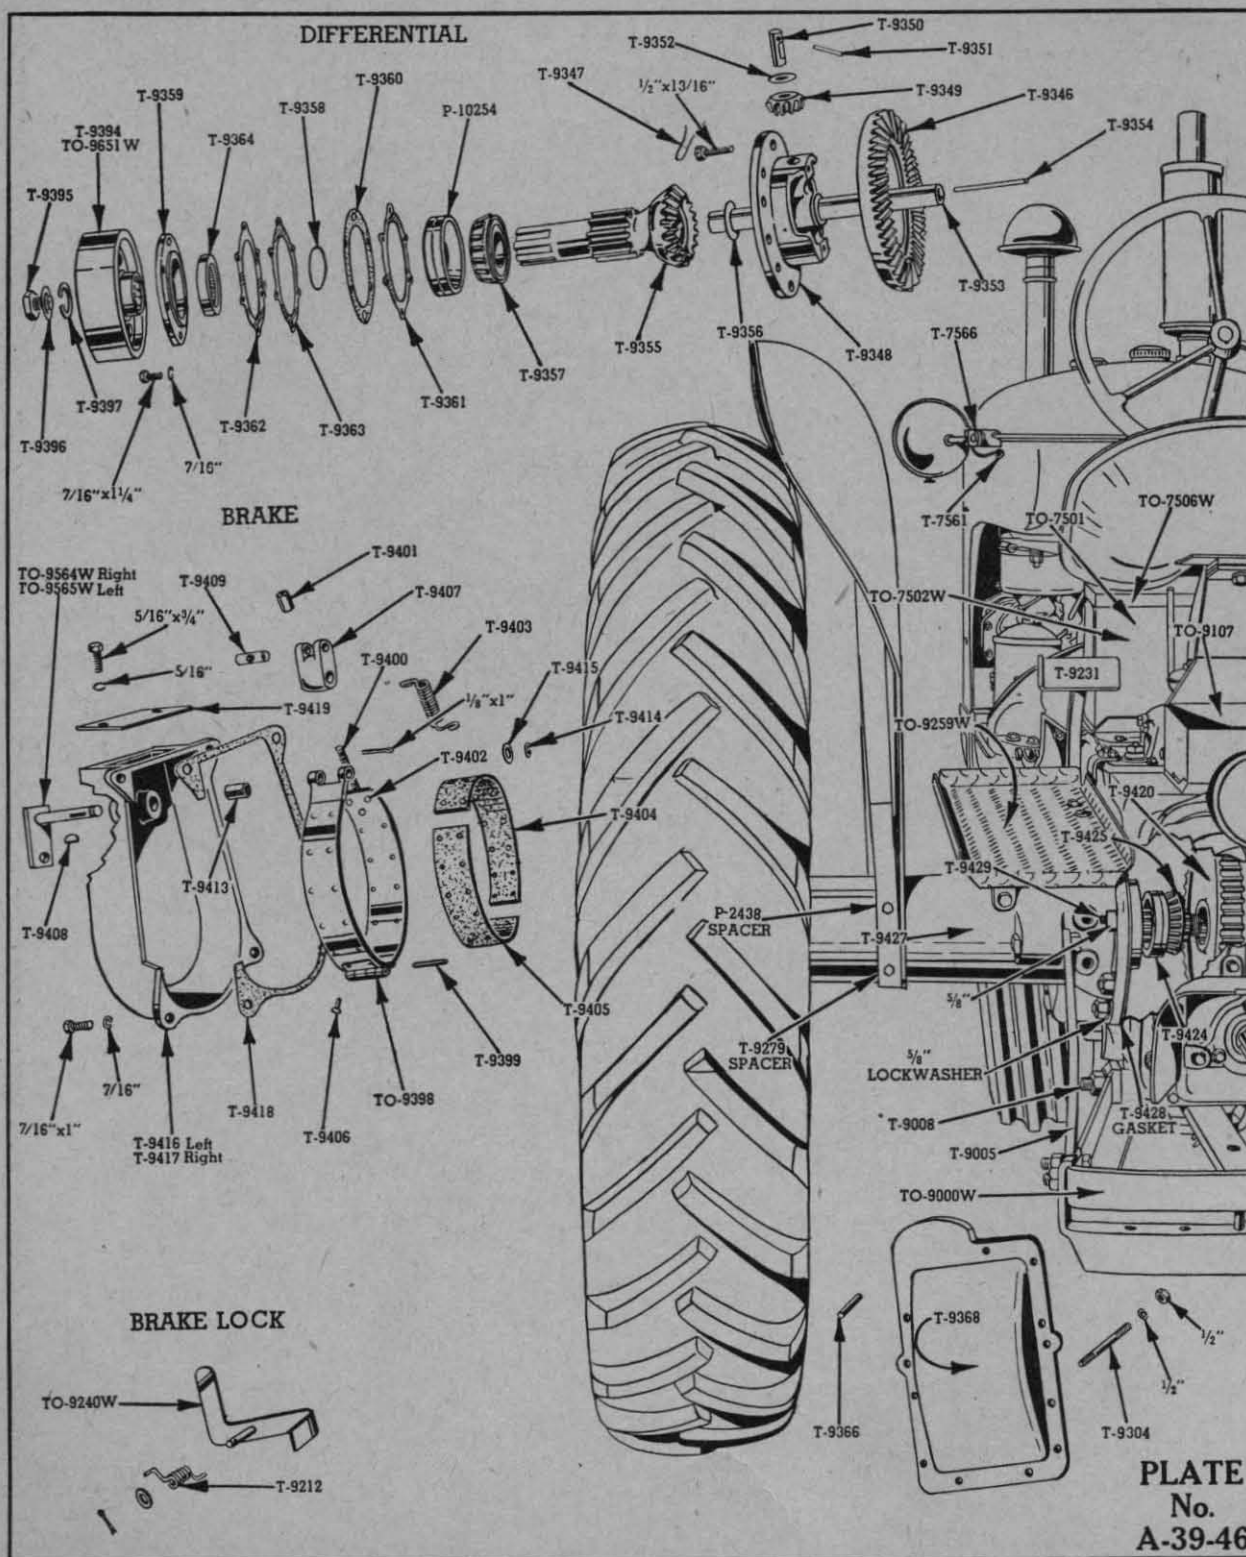

NOTE — Never order from Illustrations alone, always look up printed list

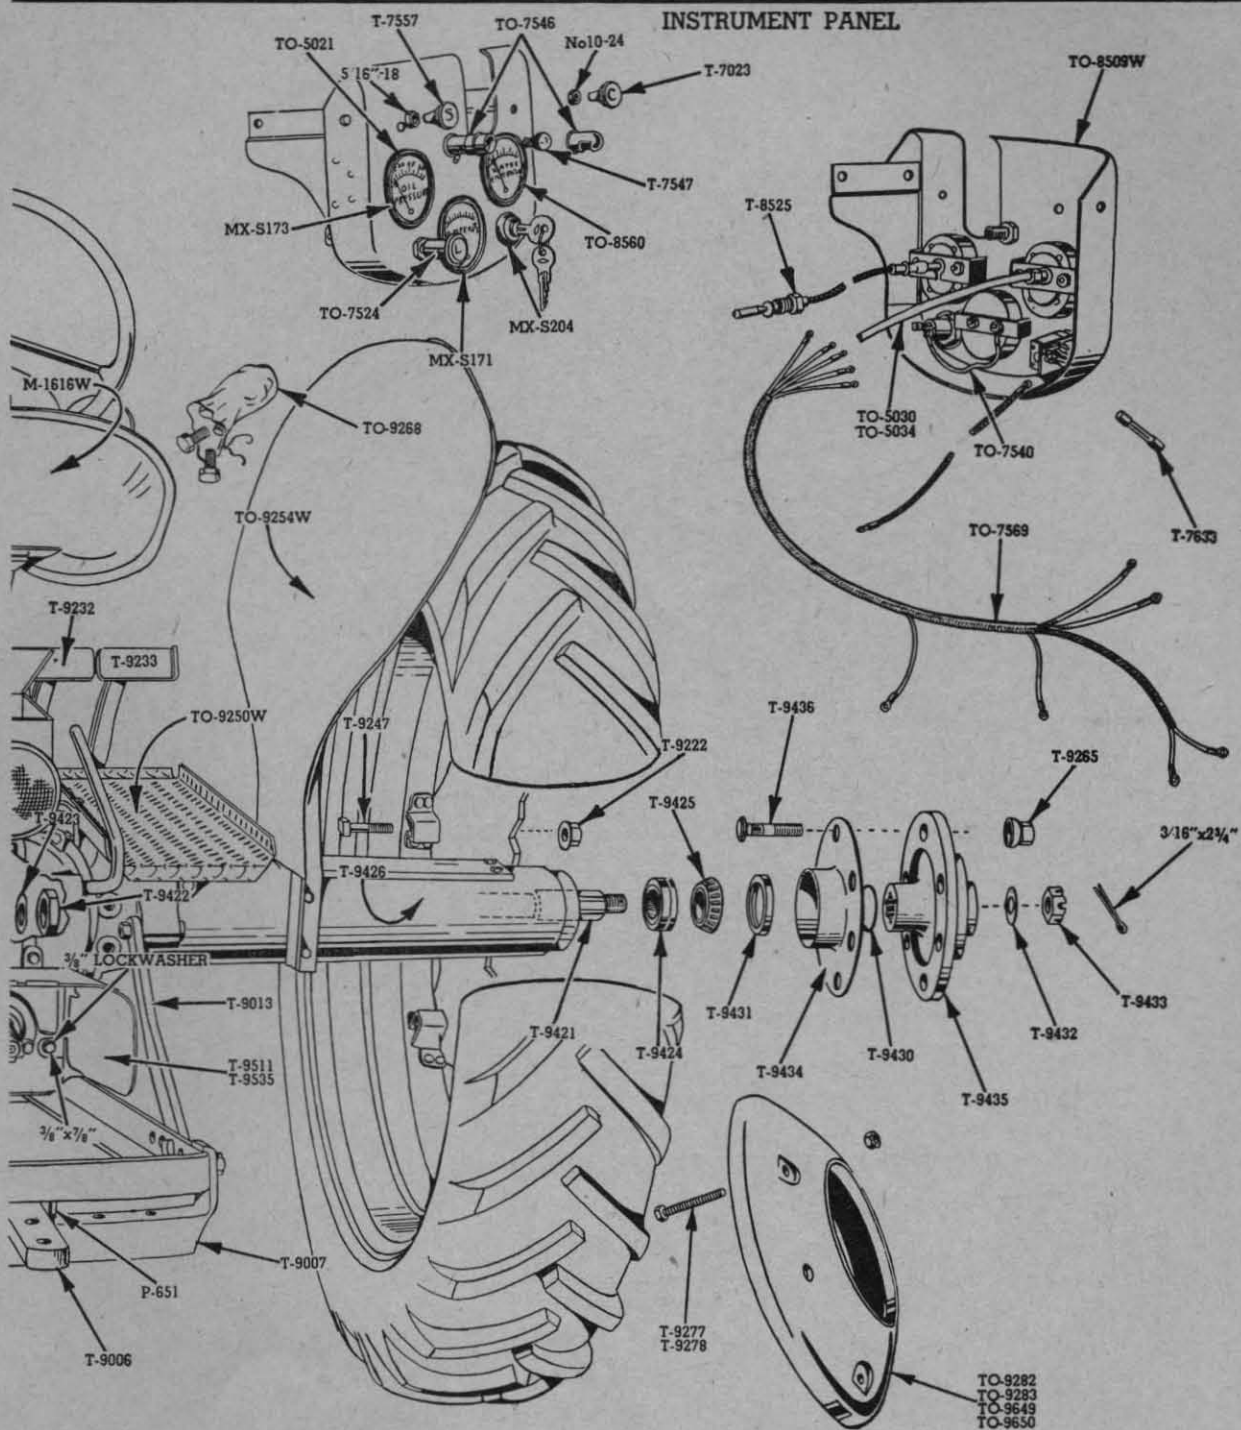


PLATE
No.
B-39-46

NOTE — Never order from Illustrations alone, always look up printed list



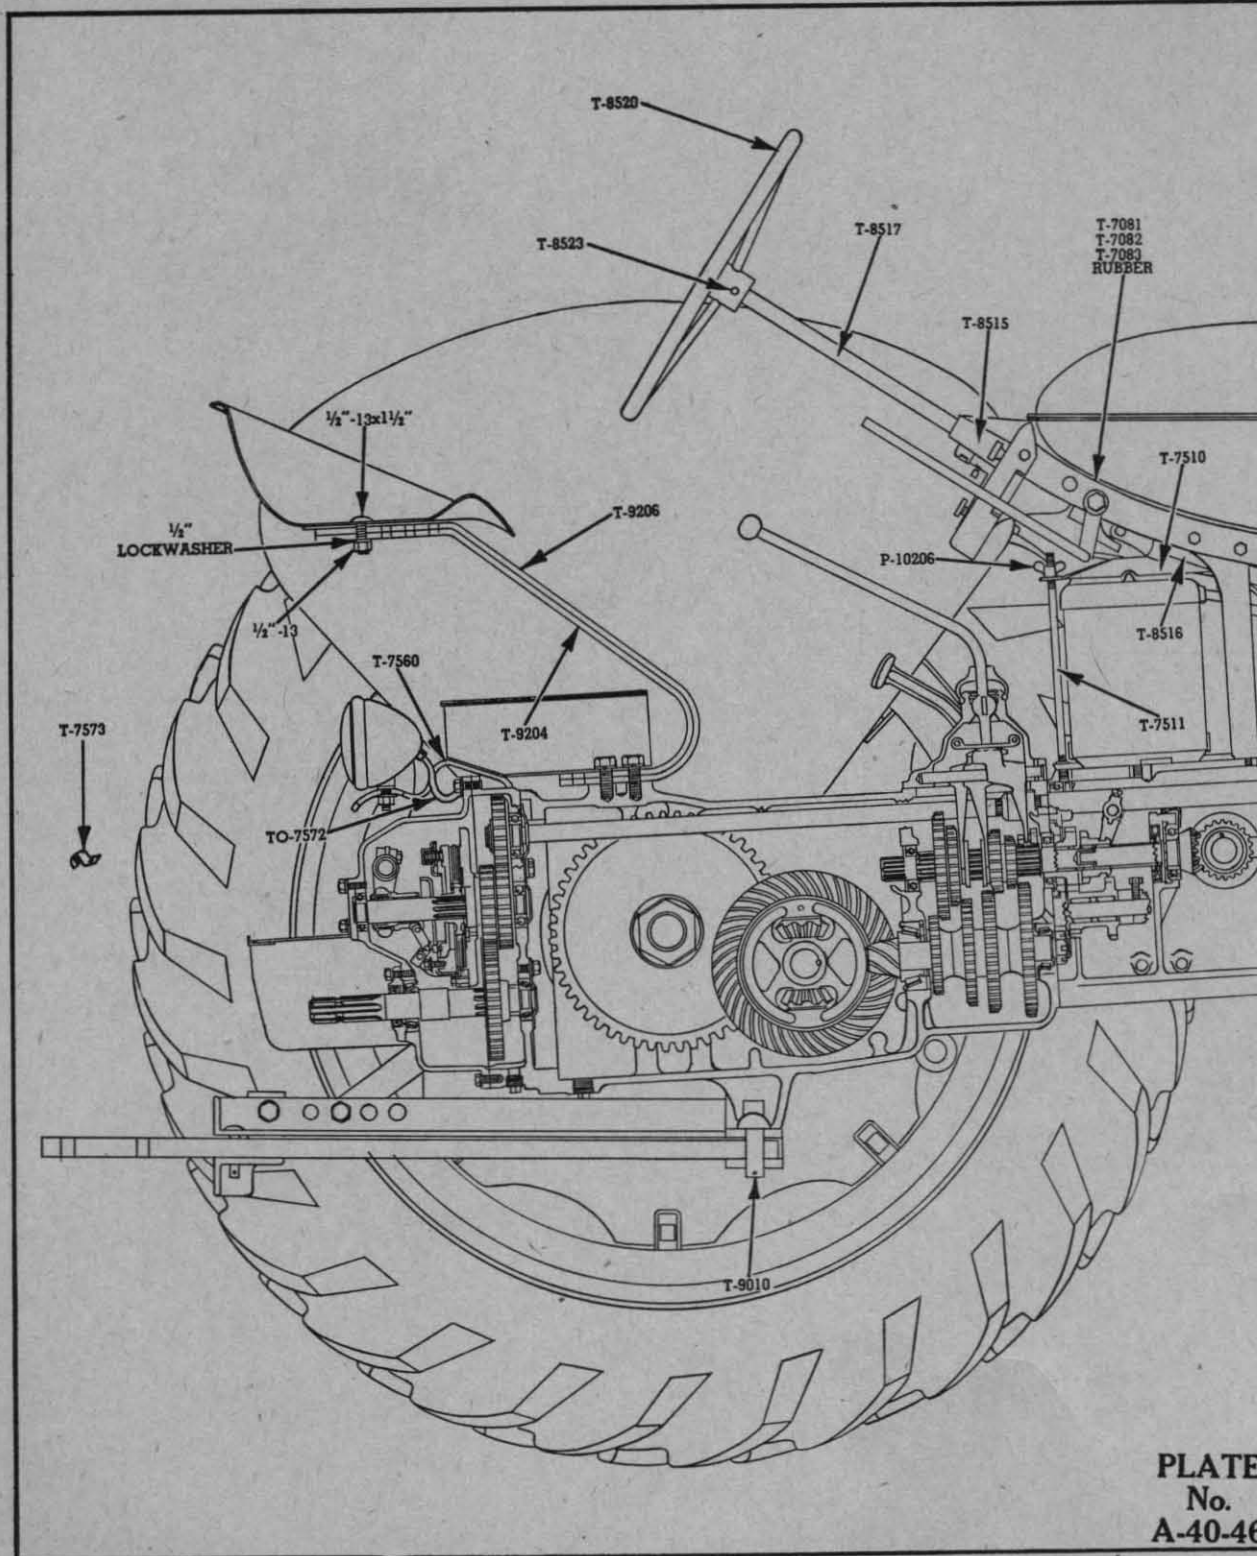


PLATE
No.
A-40-46

NOTE — Never order from Illustrations alone, always look up printed list

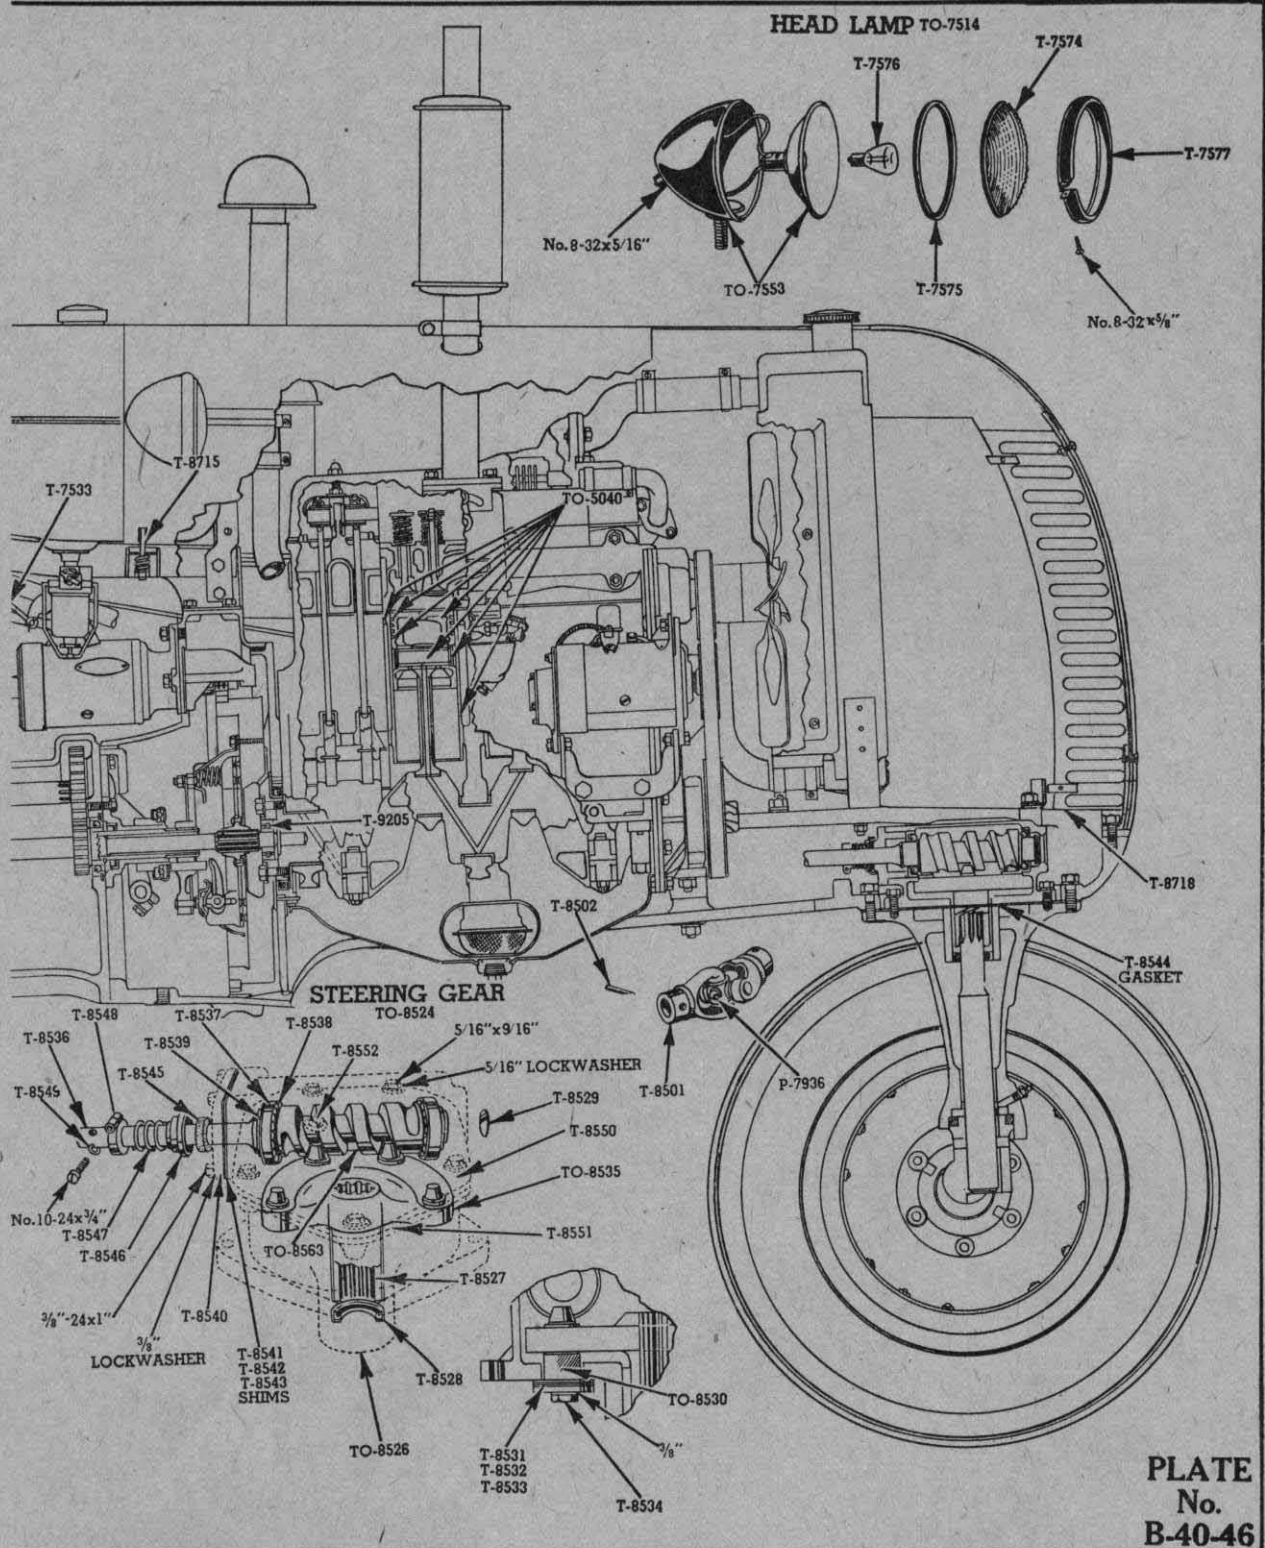

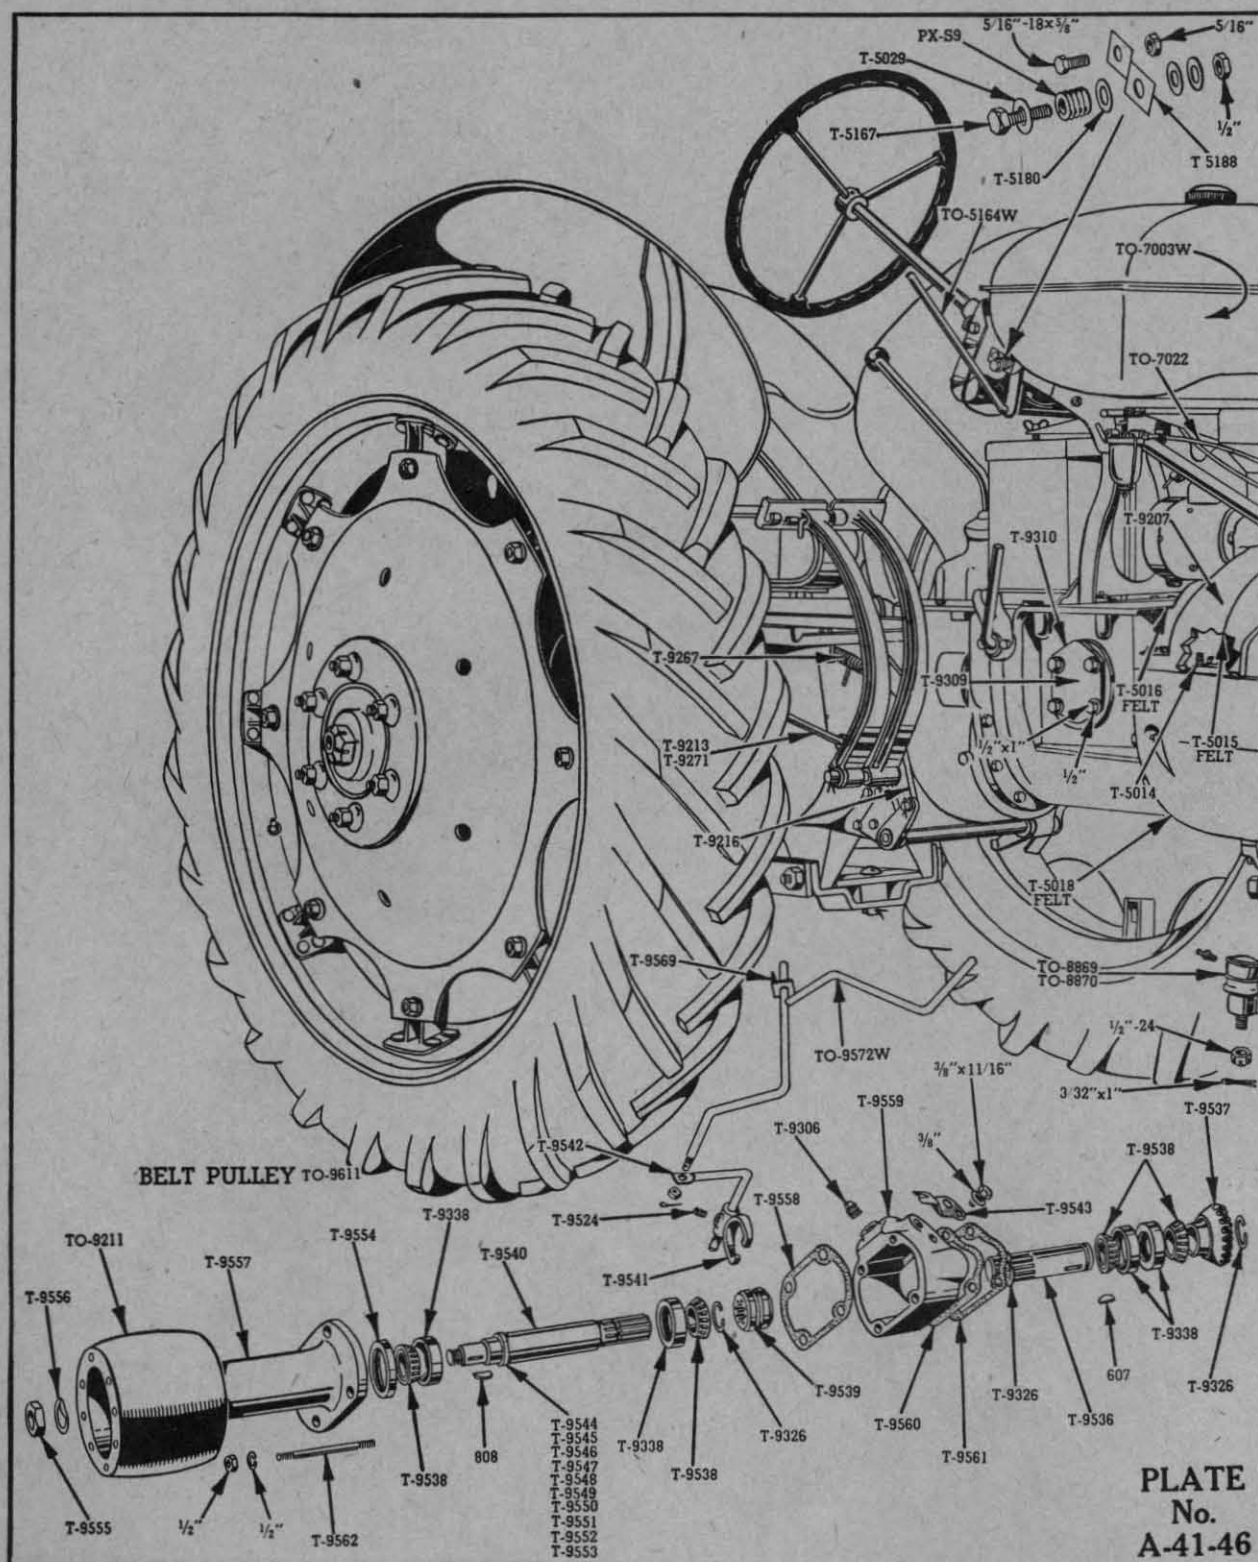

NOTE — Never order from Illustrations alone, always look up printed list


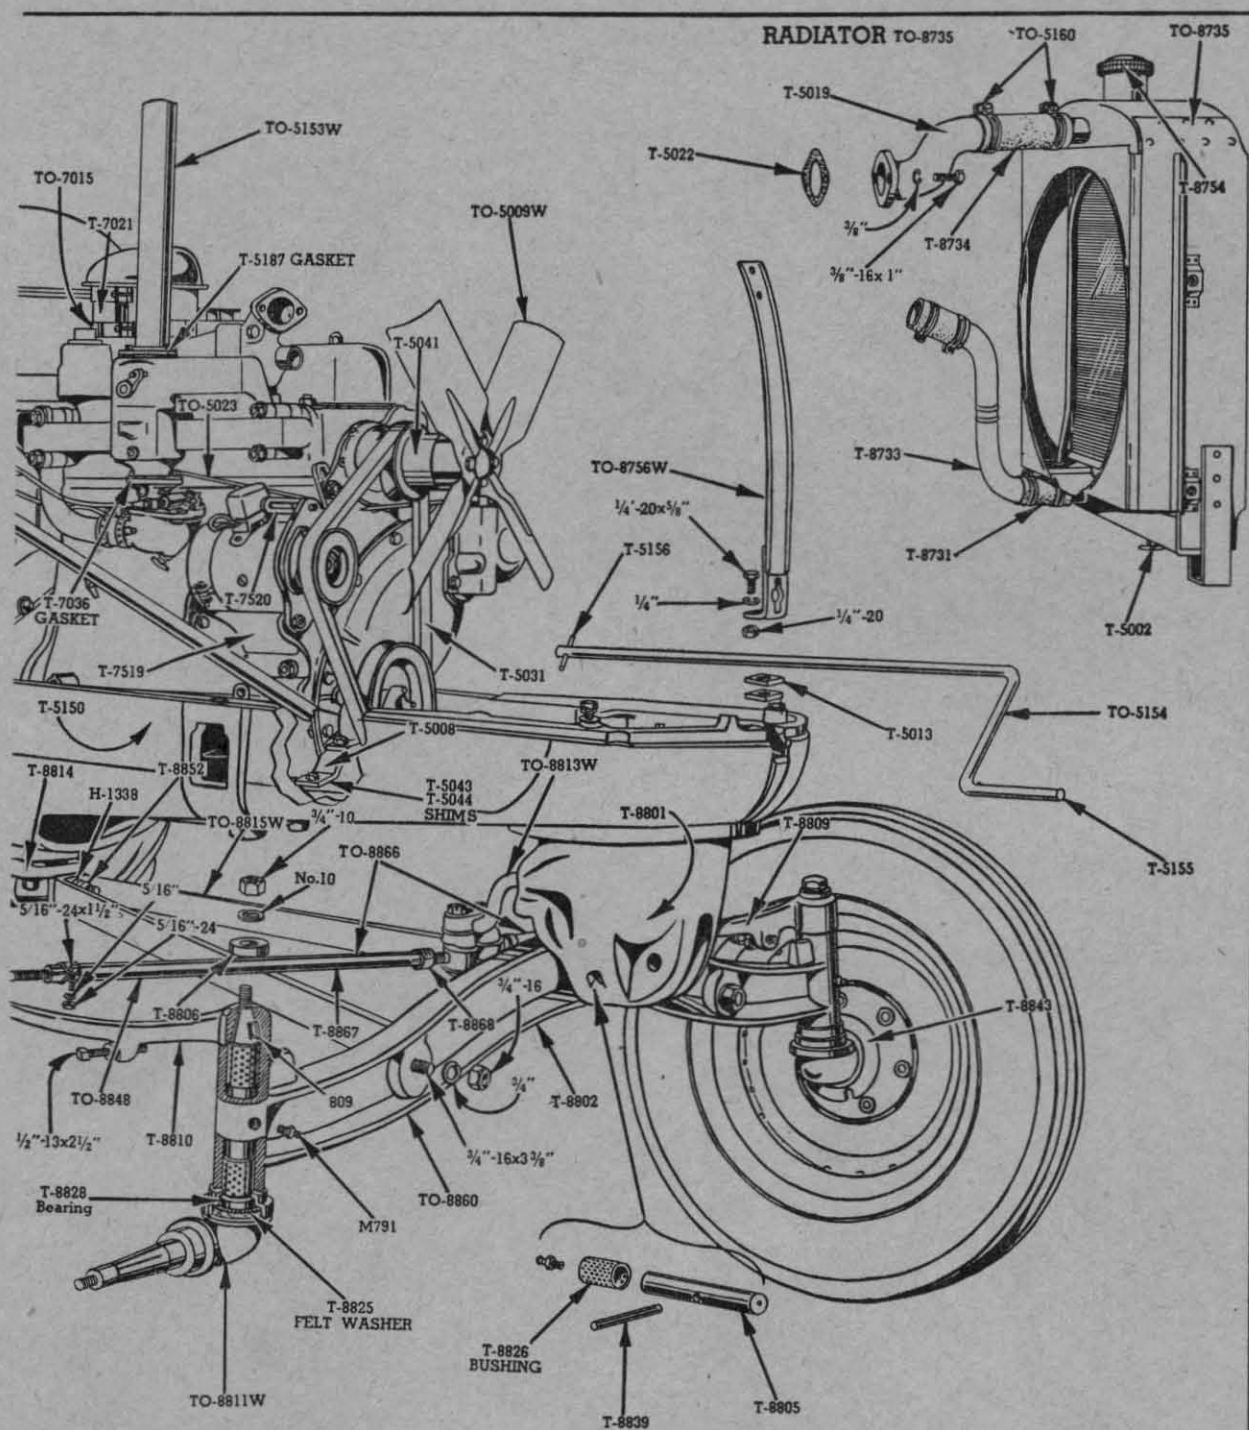



PLATE
No.
B-41-46

NOTE — Never order from Illustrations alone, always look up printed list


VALVE OPERATING MECHANISM

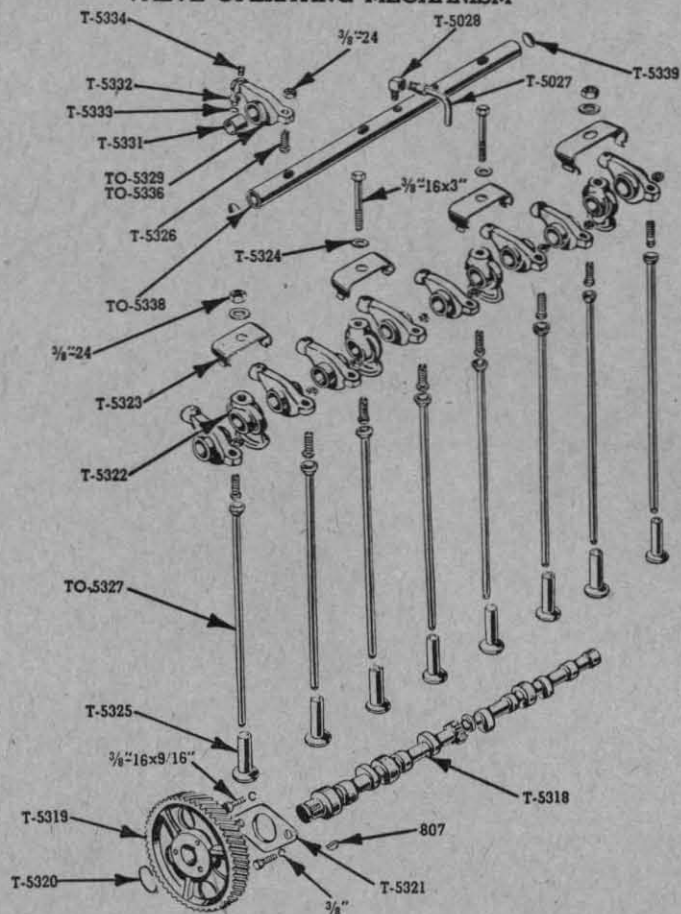


PISTON AND CONNECTING ROD

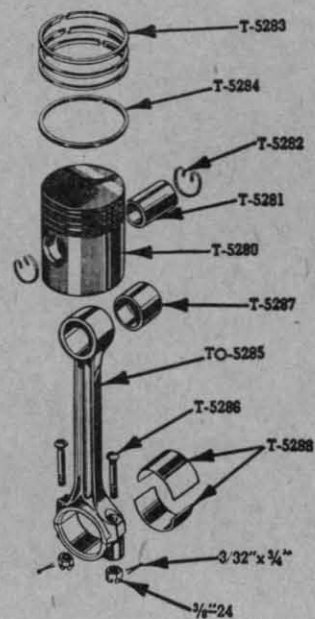

FLYWHEEL AND HOUSING

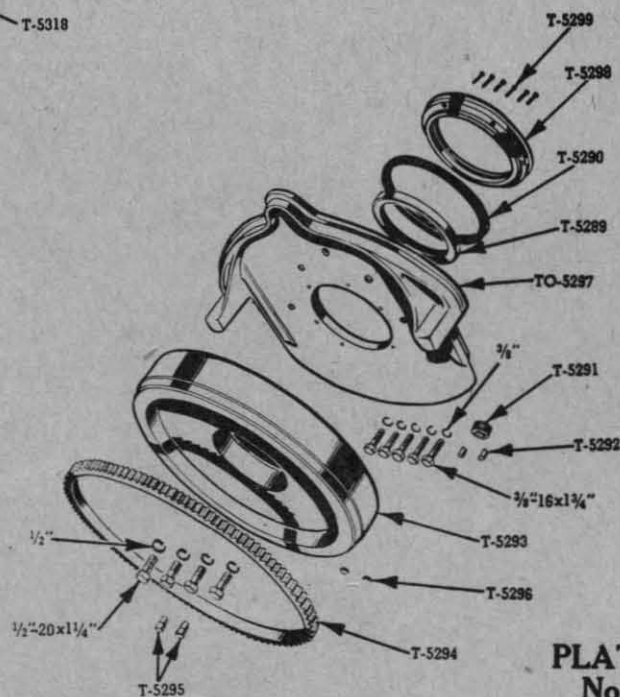

AIR INTAKE AND EXHAUST MANIFOLD

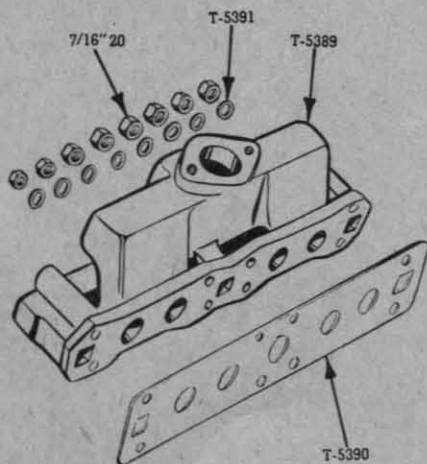

**PLATE
No.
B-42-46**

NOTE — Never order from Illustrations alone, always look up printed list


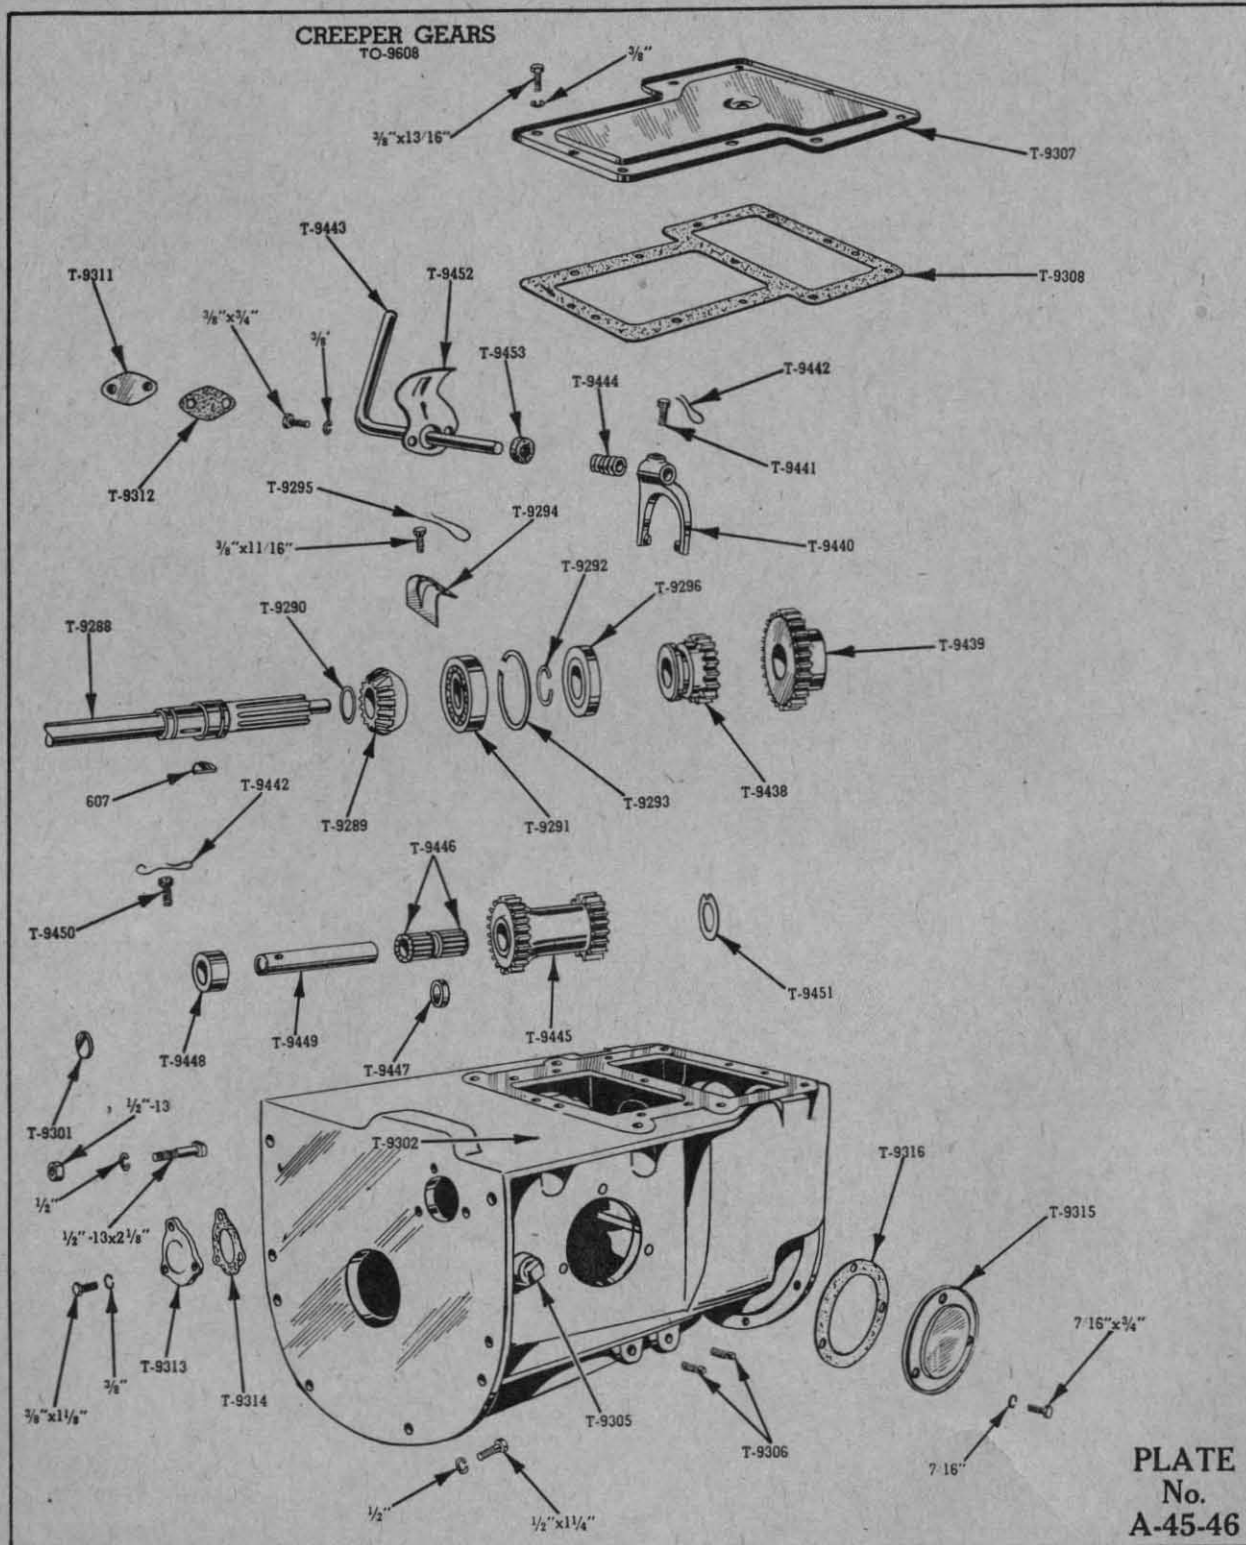



PLATE
No.
A-45-46

NOTE — Never order from Illustrations alone, always look up printed list


COOLING SYSTEM

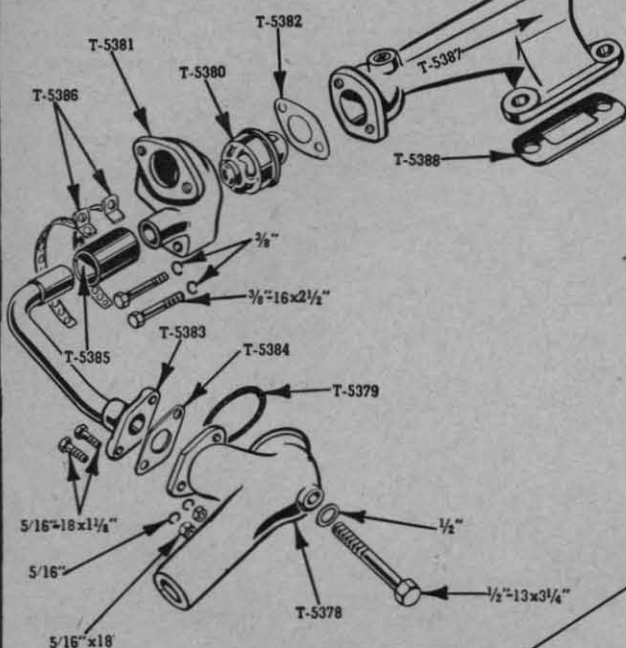


COOLING SYSTEM AND WATER PUMP

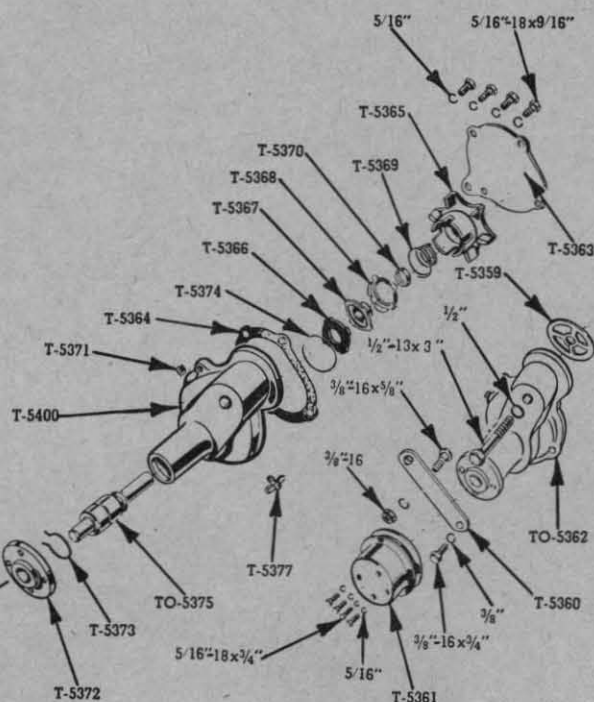

TO-5000

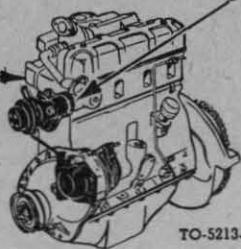

GEAR COVER AND FRONT SUPPORT

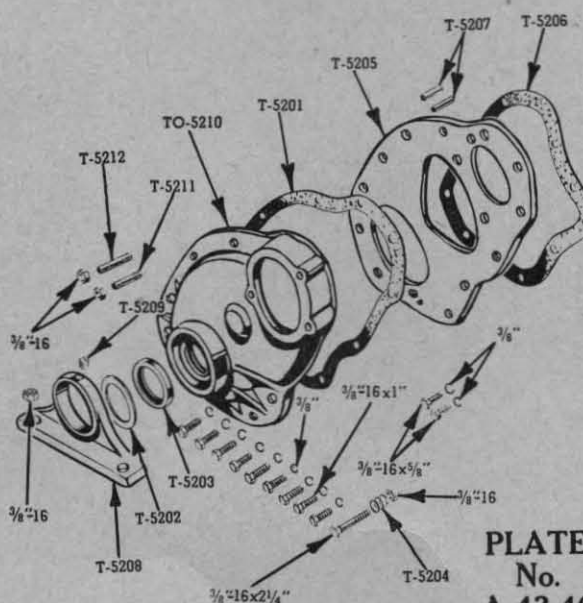

GOVERNOR

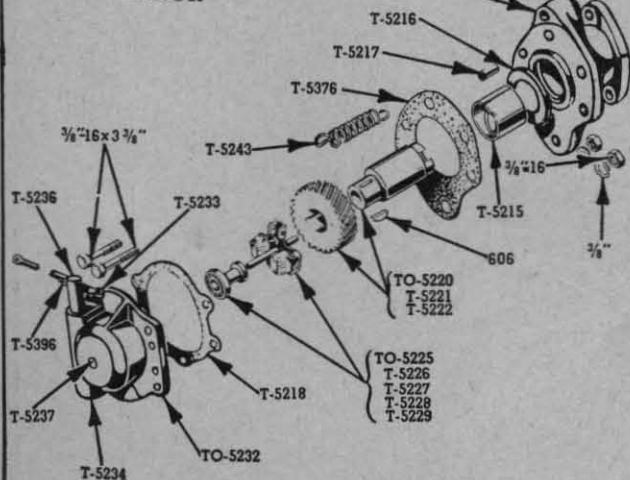


PLATE
No.
A-43-46

NOTE — Never order from Illustrations alone, always look up printed list

CROSS REFERENCE MANUFACTURING NUMBERS TO PART NUMBERS

Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.
021123	T-8534	3721	T-5063	117612	T-5339	49-264	T-7060
029047	T-8546	3813	T-5393	118831	T-5371	55-230	T-7053
032084	T-8545	3920	P-10254	137421	T-5028	55-231	T-7055
032085	T-8528	3943	T-5272	141236	T-5292	55-243	T-7063
033036	T-8541	3979	T-9357	141244	T-5207	69-5	T-7051
033037	T-8542	4187	T-5069	142309	T-7576	78-299	T-7047
033042	T-8543	4308	T-5068	172332	T-5299	95-40	T-7065
033072	T-8531	4386	T-5067	178685	T-5305	99-7	T-7067
033073	T-8532	7506	T-9325	251367	T-5204	179-35	T-7066
033074	T-8533	10621	T-5077	251877	T-5302	227-1088	TO-7073
063993	TO-8564	10937	TO-5070	400005	T-8539	233-536	TO-7068
071004	T-8527	11144	TO-5064	400014	T-8538	286-785	TO-7080
387	T-9425	11385	T-5270	400020	T-8537	41468-2	T-7086
626	T-9578	11645	TO-5062	401108	T-8547	8843-14-3/16	T-8536
929	T-9588	14276	T-9338	402093	T-8530	8844-14-3/16	T-8563
937	T-9583	15520	T-9503	475114	T-8548	2-x-1674-1	T-7030
939	T-9581	15578	T-9504	502566	TO-8256	3-X-146	T-9527
941	T-9577	25854	T-7040	924188	T-7577	4-B-153	T-5000
942	T-9589	25857	T-7039	924639	T-7575	4-X-517	T-9429
945	T-9580	25858	T-7038	925514	TO-7514	4-X-797	T-9304
946	T-9579	25904	T-7087	5932150	T-7574	4-X-870	T-9436
949	TO-9592	39543	TO-7088	10-2992	TO-7013	4-X-873	T-9562
981	T-5061	43206	T-9475	10-3056	TO-7078	5-X-349	T-9498
1022	T-8549	43208	T-9461	13-957	TO-7070	5-X-394	T-9358
1130	T-9582	43304	T-9463	14-169	T-7041	5-X-399	T-9453
1193	T-5294	46150	T-9342	16-4	T-7069	14-M N-7	T-8868
1264	T-9573	46368	T-9341	16-80	T-7057	14-X-58	T-9433
1342	T-9585	47507	T-9319	16-449	T-7059	15-A-91	T-7042
1344	T-9587	93420	T-9446	16-491	T-7048	15-A-92	T-7061
1346	TO-9586	103647	T-5273	16-592	T-7079	16-R T-151	T-8867
1347	T-9593	103688	T-5217	24-262	T-7052	16-S V-183-A-1	TO-8870
1360	T-5211	103866	T-5269	24-30	T-7044	16-S V-184-A-1	TO-8869
1410	T-9574	103869	T-5345	24-489	T-7046	16-T-188	TO-8848
1450	T-9575	103883	T-5209	24-501	TO-7072	16-X-83	T-9673
1544	T-9584	103890	T-5296	26-730	TO-7076	16-X-87	T-9408
1575	TO-9591	103894	T-5267	27-539	TO-7075	16-X-88	T-9672
1576	TO-9590	103895	T-5317	30-600	TO-7074	16-X-91	T-9354
1595	TO-7018	103896	T-5268	32-27	T-7058	17-X-132	T-9487
2204	T-5282	105451	T-5318	43-33	T-7043	17-X-137	T-9595
2827	T-9576	106263	T-5324	43-554	TO-7071	24-A-128	T-7064
3205	T-9490	106749	T-5331	44-38	T-7054	26-X-52	T-9524
3206	T-9468	106751	T-5223	44-39	T-7062	26-X-54	T-9441
3207	T-9291	111991	T-5354	46-448	T-7056	1229-C-1017	T-9596
3305	T-9480	112139	T-5276	47-589	TO-7077	1229-F-422	T-9383
3695	T-5066	113185	T-5270	49-165	T-7049	1805-S-201	T-9430
3696	T-5065	113186	T-5291	49-178	T-7050	1805-W-75	T-9497
		113897	T-5251			1825-H-112	T-9329
		114981	T-5377				

CROSS REFERENCE MANUFACTURING NUMBERS TO PART NUMBERS

Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.
1825-J-114	T-9413	1850-F-58	T-9300	2808-D-498	T-9474	2858-S-45	T-9525
1825-P-146	T-9676	1850-H-60	T-9301	2808-E-499	T-9312	3802-X-596	T-9421
1825-Z-130	T-9485	1854-C-107	T-9414	2808-F-500	T-9308	3835-L-272	T-9343
1827-B-80	T-9337	1854-D-108	T-9378	2808-G-423	T-9310	3855-H-86	T-9368
1827-H-138	T-9422	1854-G-137	T-9519	2808-H-424	T-9372	3855-K-88	T-9315
1827-K-141	T-9555	1854-L-90	T-9339	2808-M-455	T-9428	3855-N-92	T-9481
1827-K-167	T-9395	1854-N-118	T-9293	2808-N-456	T-9418	3855-P-94	T-9473
1827-Y-103	T-9401	1854-P-120	T-9343	2808-U-489	T-9316	3855-Q-95	T-9311
1828-A-53	T-9202	1854-Q-121	T-9318	2808-W-491	T-9492	3855-R-96	T-9307
1828-X-50	T-9203	1854-R-122	T-9292	2808-X-492	T-9369	3855-V-74	T-9309
1829-A-495	T-9423	1854-S-123	T-9478	2808-X-518	T-9558	3855-X-76	T-9419
1829-D-498	T-9356	1854-T-124	T-9460	2808-Y-493	T-9513	3866-G-449	T-9313
1829-E-499	T-9483	1854-U-125	T-9464	2808-Z-494	T-9507	3866-J-452	T-9491
1829-F-500	T-9451	1854-V-126	T-9298	2808-Z-520	T-9530	3866-K-453	T-9506
1829-G-267	T-9415	1854-W-101	T-9326	2833-E-31	T-9349	3866-L-454	T-9454
1829-G-449	T-9352	1854-W-127	T-9501	2840-M-143	T-9405	3866-M-455	T-9276
1829-G-501	T-9448	1854-X-102	T-9290	2840-P-146	T-9404	3866-N-456	T-9359
1829-G-527	T-9345	1874-R-44	T-9486	2843-A-131	T-9384	3866-Z-468	T-9529
1829-H-502	T-9495	1874-S-45	T-9297	2843-B-132	T-9385	3870-K-63	T-9435
1829-J-478	T-9396	1898-R-70	T-9392	2843-C-133	T-9386	3870-N-66	T-9645
1829-M-507	T-9397	1905-S-201	T-9430	2847-A-391	T-9469	3875-A-209	T-9534
1829-R-460	T-9340	2803-G-761	T-9560	2847-B-392	T-9470	3875-D-212	T-9669
1829-T-462	T-9556	2803-H-762	T-9561	2847-F-344	T-9375	3875-H-190	T-9302
1829-U-463	T-9320	2803-H-866	T-9508	2847-K-11	T-9407	3875-L-194	T-9365
1829-V-100	T-9336	2803-J-868	T-9509	2847-L-12	T-9400	3875-N-196	T-9512
1829-V-464	T-9381	2803-K-869	T-9510	2847-L-402	T-9373	3875-Q-199	T-9515
1829-V-490	T-9432	2803-L-714	T-9361	2847-R-330	T-9379	3880-B-418	T-9531
1829-W-257	T-9528	2803-L-1130	T-9544	2847-R-382	T-9294	3880-C-393	T-9322
1829-Y-467	T-9377	2803-M-715	T-9362	2847-U-411	T-9542	3880-G-397	T-9479
1844-G-241	T-9502	2803-M-1131	T-9545	2847-V-386	T-9496	3880-H-398	T-9499
1844-H-242	T-9447	2803-N-716	T-9363	2847-V-412	T-9546	3880-J-400	T-9466
1844-J-244	T-9317	2803-N-1132	T-9546	2847-W-387	T-9443	3880-K-401	T-9288
1844-K-245	T-9563	2803-P-1134	T-9547	2847-Y-389	T-9452	3880-M-403	T-9449
1844-N-248	T-9533	2803-Q-1135	T-9548	2847-Z-390	T-9321	3880-R-408	T-9353
1845-Q-121	T-9318	2803-R-1136	T-9549	2848-A-105	T-9539	3880-V-412	T-9540
1846-B-158	T-9366	2803-S-1137	T-9550	2849-C-133	T-9388	3880-W-413	T-9536
1846-D-4	T-9409	2803-T-202	T-9025	2849-D-134	T-9389	3880-X-440	T-9676
1846-D-186	T-9459	2803-T-1138	T-9551	2849-E-135	T-9390	3887-W-75	T-9427
1846-E-57	T-9399	2803-U-203	T-9026	2849-F-136	T-9493	3887-Y-77	T-9426
1846-E-161	T-9351	2803-U-1139	T-9552	2849-G-137	T-9449	3889-E-187	T-9289
1846-K-115	T-9387	2803-V-204	T-9027	2849-K-141	T-9541	3889-F-188	T-9537
1846-L-168	T-9350	2803-V-1140	T-9553	2849-L-142	T-9253	3889-H-190	T-9346
1846-R-148	T-9380	2803-W-205	T-9028	2858-B-2	T-9403	3890-G-267	T-9335
1846-S-149	T-9376	2808-A-495	T-9303	2858-C-107	T-9391	3891-X-648	T-9355
1846-Z-78	T-9514	2808-B-418	T-9360	2858-C-133	T-9334	3892-D-914	T-9476
1847-Q-43	T-9472	2808-B-496	T-9314	2858-F-110	T-9382	3892-F-916	T-9432
		2808-C-497	T-9281	2858-M-117	T-9444	3892-K-921	T-9500

CROSS REFERENCE

MANUFACTURING NUMBERS TO PART NUMBERS

Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.
3892-M-793	T-9323	A-1805-R-200	T-9505	B-267	T-5349	B-1113	T-5352
3892-M-923	T-9462	A-1805-Y-103	T-9554	B-268	T-5356	B-1161	T-5388
3892-N-976	T-9520	A-3892-H-918	T-9484	B-270	T-5340	B-1165	T-5322
3892-P-796	T-9324	A-3897-T-592	T-9511	B-271	T-5341	B-1166	TO-5327
3892-P-900	T-9420	A3897-X-596	TO-9597	B-281	T-5307	B-1169	TO-5335
3892-P-978	T-9532	A-3897-Z-598	TO-9489	B-300	T-5295	B-1173	TO-5328
3892-Q-927	T-9465	AP 6081	T-5386	B-301	T-5256	B-1177	T-5332
3892-R-798	T-9328	B-101	T-5275	B-306	T-5279	B-1178	T-5333
3892-S-929	T-9445	B-126	T-5205	B-307	T-5203	B-1190	T-5387
3892-T-800	T-9330	B-127	T-5206	B-308	T-5202	B-1211	T-5331
3892-T-904	T-9439	B-137	T-5281	B-309	T-5358	B-1252	TO-5303
3892-V-802	T-9331	B-140	TO-5235	B-310	T-5352	B-1264	TO-5329
3892-V-906	T-9438	B-143	T-5256	B-313	T-5320	B-1265	TO-5336
3892-W-803	T-9332	B-144	T-5288	B-314	T-5316	B-1267	T-5280
3892-Y-805	T-9333	B-145	T-5287	B-315	T-5257	B-1267-P-	TO-5403
3897-A-651	T-9535	B-155	T-5259	B-316	T-5258	B-1273	T-5216
3897-F-630	T-9557	B-156	T-5260	B-319	T-5346	B-1415	T-5271
3897-G-631	T-9559	B-157	T-5261	B-325	T-5394	B-1434	T-5218
3897-M-663	T-9457	B-158	T-5321	B-327	T-5266	B-1446	T-5390
3897-N-664	T-9477	B-161	T-5308	B-328	T-5314	B-1698	T-5347
3897-R-434	T-9374	B-162	T-5310	B-332	T-5392	B-1776	T-5404
3897-R-590	T-9488	B-166	T-5309	B-354	T-5380	B-1864	T-5246
3897-S-617	T-9394	B-171	T-5331	B-504	T-5289	B-1865	T-5264
3897-T-618	T-9371	B-176	T-5223	B-535	T-5313	B-1875	T-5326
3897-V-516	T-9417	B-187	T-5201	B-582	T-5298	B-1998	T-5263
3897-W-517	T-9416	B-230	T-5248	B-586	T-5278	B-1999	T-5262
3897-X-596	T-9456	B-231	T-5249	B-590	TO-5362	B-2070	T-5319
3897-Y-597	T-9269	B-232	T-5250	B-663	T-5372	B-2073	T-5247
3905-F-32	T-9434	B-241	T-5400	B-664	T-5361	B-2076	T-5245
3905-J-36	T-9647	B-242	T-5363	B-786	T-5212	B-2097	T-5274
382-A	T-9424	B-243	T-5364	B-824	T-5283	B-2098	T-5265
14119-A	T-9538	B-244	T-5359	B-826	T-5284	B-2116	T-5389
14137-A	FX-S38	B-245	T-5365	B-836	T-5208	B-2128	TO-5254
159-J	TO-7018	B-246	TO-5375	B-839	T-5255	B-2180	TO-5224
47605-LY1C	T-9518	B-248	T-5366	B-877	T-5300	B-2195	T-5293
A-2428	TO-5230	B-250	T-5367	B-885	T-5290	B-2204	T-5282
A-2729	TO-5231	B-251	T-5368	B-1011	TO-5338	B-2218	TO-5297
A-3218	TO-5244	B-252	T-5369	B-1013	T-5318	B-2221	T-5243
A-5334	TO-7034	B-253	T-5370	B-1022	TO-5306	B-2234	T-5221
A-2-3832-N-14	TO-9398	B-254	T-5374	B-1022-A	T-5024	B-2242	T-5342
A-1205-D-368	T-9467	B-257	T-5360	B-1033	T-5361	B-2272	TO-5213
A-1805-D-4	T-9364	B-260	TO-5348	B-1034	T-5302	B-2273	T-5222
A-1805-G-85	T-9287	B-261	T-5399	B-1041	T-5315	B-2274	T-5215
A-3897-M-663	TO-9594	B-262	T-5357	B-1051	T-5381	B-2275	TO-5220
A-1805-N-196	T-9431	B-263	T-5350	B-1055	T-5343	B-2276	T-5214
A-1805-P-198	T-9296	B-264	T-5355	B-1057	T-5344	B-2278	T-5376
A-1805-Q-199	T-9455	B-265	T-5353	B-1104	T-5383	B-2326	TO-5219

CROSS REFERENCE

MANUFACTURING NUMBERS TO PART NUMBERS

Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.	Mfg. No.	Part No.
B-2395	T-5277	GBW-30-E	T-7618	IGS-104	T-7684	MBA-24	T-7672
B-2408	T-5027	GBW-34	T-7604	IGS-1020	TO-7693	MBA-31	T-7673
B-2597	TO-5225	GBW-67	T-7606	IGS-2053-RB	TO-7701	MBA-32	T-7674
B-2632	TO-5232	GBW-69	T-7619	IGT-70	T-7689	MPS-357	TO-9619
B-2684	TO-5040	GBW-72	T-7622	IGW-3139	T-7699	P-16	T-9306
B-4532	TO-5210	GBW-73	T-7623	JE-84	T-5391	P-28	T-9516
CB-4014	TO-7614	GBW-1024-L-S	T-7602	K-15-1002-B	T-5047	P-112	T-9305
DE-145	T-5382	GCIJ-51	T-7627	K-15-1004	T-5052	P116	T-9677
DE-5476	T-5223	GCIJ-1014	TO-7648	K-15-1005	T-5057	P-212	T-9370
DE-50299	T-5406	GCIJ-1023-R	TO-7678	K-15-1010	T-5048	P-2690	T-7084
DE-51688	T-5385	GCIJ-1087-E	TO-7631	K-15-1014	TO-5055W	P-2706	TO-7033
DE-55118	T-5311	GCIJ-2006-F	TO-7590	K-15-1021	T-5065	P-2903	T-7032
DE-56080	T-5312	GCIJ-2012-S	TO-7626	K-110-B	T-5045	P-2949	T-7085
EB-99	TO-7666	GCIJ-2087-D	TO-7617	K-55-P	T-5053	P-7344	TO-7031W
EB-108	T-7670	GCY-25	T-7605	K-111	T-5195	PS-1274	TO-7664
EB-7805	T-7667	GEO-1005-H	T-7611	K-157	T-5010	PW-212	T-9393
EB-7806	T-7668	GEO-2082	TO-7603	K-365	T-5050	PX-55	T-7615
EB-7807	T-7669	GFE-37	T-7607	K-418	T-5058	R-333½	T-9406
EB-8503	T-7671	H-11602	T-5373	K-487	T-5054	R-6370	TO-8735
EO-8657	TO-7521	IAD-7	T-7711	K-70401	T-5049	S-168-D	T-9450
EW-200	T-7676	IAD-8	T-7710	KT-15-B	TO-5011	S-169-D	T-9494
G-4070	T-5233	IAD-10	T-7709	LW-166	T-9295	S-5067-A	T-9402
G-8878	T-5226	IAD-1004	T-7697	LW-168	TO-9442	SK-15136	
G-9046	T-5234	IAD-1100-RE-1	T-7688	LW-1630	T-9347	SK-15143	
G-9431	T-5236	IAD-2001	TO-7707	MA-265	T-5384	SP-854	T-7587
G-9595	T-5237	IAD-2004	TO-7696	MN-21	T-7609	SW-213	T-7681
G-9820-2	T-5238	IAD-2015	TO-7695	MU-54	T-7633	SW-2916-B	TO-7677
G-9848	T-5227	IG-90	T-7680	MW-20-A	T-7641	TOR-B-912X	T-9299
G-9897	T-5235	IG-94	T-7692	MZ-170	T-7675	W-48-X-4	T-7001
G-13504	T-8754	IG-579-A	T-7714	MZ-197	T-7649	W-27021	TO-8524
GG-164	T-9576	IG-636-AS	TO-7704	MAB-30	T-7654	W-264000	T-8535
GK-20	T-7061	IG-644	T-7679	MAB-35	T-7640	W-265000	T-8550
GK-38	T-7644	IG-676	T-7698	MAB-85	T-7646	W-266000	T-8540
GR-32	T-7589	IG-680	T-7686	MAB-88	T-7665	W-269000	T-8551
GV-104	T-7588	IG-816-C	T-7683	MAB-1024-R	T-7642	X-74	T-5239
GAL-44	T-7610	IG-1324-C	TO-7694	MAB-2040	TO-7662	X-328	T-5240
GAM-34	T-7597	IG-1657-R	T-7691	MAK-61	T-7637	X-441	T-7598
GAM-110-S	T-9593	IG-4070	TO-7523	MAK-80	T-7645	X-490	T-7713
GAM-110-B	TO-7592	IGH-28	T-7687	MAW-12	T-7650	X-1021	T-5396
GAR-63	T-7600	IGL-8	T-7712	MAW-13	T-7651	X-1270	T-7613
GAR-64	T-7599	IGL-9	T-7708	MAW-2012-S	TO-7652	X-1287	T-5228
GAR-73	T-7620	IGP-34	T-7595	MAW-2105	TO-7639	X-1300	T-5229
GAR-98-A	T-7621	IGP-3028-FS	TO-7700	MAX-3059-E	TO-7634	X-1552	T-5241
GAR-171	T-7591	IGS-21	T-7682	MAX-3159	T-7643	X-1580	T-9437
GBF-79	T-7632	IGS-99	T-7685	MAX-4081	T-7549	X-1904	T-5242
GBM-21	T-7586			MBA-21	T-7647	X-2878	T-7690
				MBA-22	T-7648	X-2961	T-7594

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
AIR CLEANER					
1/4"-20	Nut on wing bolt.....	1	1	1-	A-38
3/8"-16 x 1"	Bolt, air cleaner to support.....	2	2	1-	A-38
3/8"-16	Nut, air cleaner to support.....	2	2	1-	A-38
3/8"	Lockwasher, air cleaner to support.....	2	2	1-	A-38
AIR INTAKE AND EXHAUST MANIFOLD					
7/16"-20	Hexagon nut on exhaust and intake manifold stud.....	8	8	1-	B-42
3/8"-16 x 3/4"	Capscrew, exhaust flange to exhaust manifold.....	2	2	1-	
5/16"-18 x 1"	Capscrew, carburetor to intake manifold.....	2	2	1-	
BELT PULLEY DRIVE					
3/8" x 1 1/16"	Capscrew, shift lever to quadrant.....	1	1	1-	A-61
3/8"	Lockwasher to capscrew, shift lever to quadrant.....	1	1	1-	A-41
1/2" N.C.	Hexagon nut on stud, carrier to case.....	4	4	1-	A-41
1/2"	Lockwasher on stud, carrier to case.....	4	4	1-	A-41
BRAKES					
1/8" x 1"	Nut, brake band adjusting end.....	2	2	1-	A-39
7/16" x 1"	Capscrew, brake to case.....	8	8	1-	A-39
7/16"	Lockwasher on capscrew, brake cover to case.....	8	8	1-	A-39
5/16" x 3/4"	Capscrew, brake adjusting hole cover.....	4	4	1-	A-39
5/16"	Lockwasher on capscrew, brake adjusting hole cover.....	4	4	1-	A-39
CHASSIS					
1/2"-13x1 3/4"	Bolt, front engine mount to engine.....	2	2	1-	
1/2"-13	Nut, front engine mount to engine.....	2	2	1-	
1/2"	Lockwasher, front engine mount to engine.....	2	2	1-	
1/2"-13x2 1/2"	Bolt, front engine mount to frame.....	2	2	1-	
1/2"-13	Nut, front engine mount to engine.....	2	2	1-	
1/2"	Lockwasher, front engine mount to frame.....	2	2	1-	
1/2"-13x1 1/2"	Capscrew, pedestal to frame.....	8	8	1-	
1/2"	Lockwasher, pedestal to frame.....	8	8	1-	
1/2"-13x1 1/2"	Capscrew, intermediate case to frame.....	6	6	1-	
1/2"	Lockwasher, intermediate case to frame.....	6	6	1-	
CLUTCH SHAFT CASE					
3/8" x 1 1/16"	Capscrew for retainer clutch shaft rear bearing.....	2	2	1-	A-45
3/8" x 1 3/16"	Capscrew, clutch shaft case inspection cover.....	11	11	1-	A-45
3/8"	Lockwasher on capscrew, clutch shaft case inspection cover.....	11	11	1-	A-45
1/2" x 1"	Capscrew, pulley drive opening to case.....	4	4	1-	A-41
1/2"	Lockwasher on capscrew, pulley drive opening cover to case.....	4	4	1-	A-41
7/16" x 3/4"	Capscrew on cover, left hand clutch shaft case.....	3	3	1-	A-45
7/16"	Lockwasher on capscrew on cover, left hand clutch shaft case.....	3	3	1-	A-45
3/8" x 3/4"	Capscrew on cover creeper shift shaft hole.....	2	2	1-	A-45
3/8"	Lockwashers on capscrew for cover creeper shift shaft hole.....	2	2	1-	A-45
3/8" x 1 1/8"	Capscrew on cap clutch shaft case forward.....	3	3	1-	A-45
3/8"	Lockwasher on capscrew, cap, clutch shaft case forward.....	3	3	1-	A-45
1/2"	Hexagon nut, on stud clutch shaft case to transmission case.....	6	6	1-	B-45
1/2" x 1 1/4"	Capscrew, clutch shaft case to transmission case.....	2	2	1-	A-45
1/2"	Lockwasher on capscrew clutch shaft to transmission case.....	8	8	1-	A-45
3/8" x 1 3/8"	Capscrew on clutch shaft cap to case.....	3	3	1-	A-44
3/8"	Lockwashers on capscrews for cap clutch shaft to case.....	3	3	1-	A-44

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
COIL					
1/4"-20x1"	Bolt, coil support, bracket to end.....	1	1	1-	
1/4"-20	Nut, coil support, bracket to end.....	1	1	1-	
1/4"	Lockwasher, coil support, bracket to end.....	1	1	1-	
COOLING SYSTEM					
3/8"	Lockwasher, thermostat housing capscrow.....	2	2	1-	A-43
3/8"-16x2 1/2"	Capscrew, thermostat housing.....	2	2	1-	A-43
5/16"-18x1 1/8"	Capscrew, thermostat bypass line.....	2	2	1-	A-43
5/16"	Lockwasher on capscrow for bypass line.....	2	2	1-	A-43
5/16"-18	Hexagon nut on capscrow bypass line.....	2	2	1-	A-43
1/2"-13x3 1/4"	Capscrews, water inlet pipe.....	1	1	1-	A-43
1/2"	Flat washer on capscrow, water inlet pipe.....	1	1	1-	A-43
5/16"	Lockwasher, water pump cover capscrow.....	4	4	1-	A-43
5/16"-18x3/16"	Capscrew, water pump cover.....	4	4	1-	A-43
1/2"-13x3"	Capscrew, water pump to cylinder head.....	1	1	1-	A-43
1/2"	Flat washer for capscrow pump to cylinder head.....	1	1	1-	A-43
3/8"-16x5/8"	Carriage bolt, support link.....	1	1	1-	A-43
3/8"-16	Hexagon nut, carriage bolt support link.....	1	1	1-	A-43
3/8"-16x3/4"	Capscrew at bottom of support link.....	1	1	1-	A-43
3/8"	Lockwasher on capscrow at bottom of support link.....	1	1	1-	A-43
5/16"-18x3/4"	Capscrew, water pump pulley.....	4	4	1-	A-43
5/16"	Lockwasher for capscrow on water pump pulley.....	4	4	1-	A-43
CYLINDER BLOCK AND CRANKCASE					
5/16"-18x1 1/2"	Capscrew for distributor support.....	1	1	1-	A-42
5/16"	Lockwasher on capscrow for distributor support.....	1	1	1-	A-42
5/16"-24	Nut, pad cover.....	2	2	1-	A-42
5/16"	Lockwasher on stud for pad cover.....	2	2	1-	A-42
3/8"-24	Nut, oil pressure regulator.....	1	1	1-	A-42
CYLINDER HEAD AND VALVES					
3/8"	Acorn nut, cylinder head cover.....	2	2	1-	A-42
1/2"-20	Nut, cylinder head stud.....	14	14	1-	A-42
DIFFERENTIAL					
1/2"x1 3/16"	Capscrew, bevel gear drive to differential case.....	12	12	1-	A-39
1/16"x1 1/4"	Capscrew, differential bearing cap.....	12	12	1-	A-39
1/16"	Lockwasher on capscrow for differential bearing cap.....	12	12	1-	A-39
1/2"	Lockwasher on stud, rear transmission case cover.....	10	10	1-	A-39
1/2"	N.C. hexagon nut on stud, rear transmission case cover.....	10	10	1-	A-39
FAN					
5/16"-18x2 1/4"	Capscrew fan assembly to motor.....	4	4	1-	A-43
5/16"	Lockwasher fan assembly to motor.....	4	4	1-	A-43
5/16"-18x1"	Bolt, fan belt tension bar to generator.....	1	1	1-	
5/16"-18	Nut, fan belt tension bar to generator.....	1	1	1-	
5/16"	Lockwasher, fan belt tension bar to generator.....	1	1	1-	
FENDERS					
5/8"-11x1"	Capscrew, fender to transmission.....	4	4	1-	
5/8"-11x1 3/4"	Capscrew, fender to transmission.....	4	4	1-	
5/8"	Lockwasher, fender to transmission.....	8	8	1-	

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
FLYWHEEL AND HOUSINGS					
1/2"-20x1 1/4"	Capscrew, flywheel housing.....	4	4	1-	B-42
1/2"	Lockwasher on flywheel housing capscrew.....	4	4	1-	B-42
3/8"-16x1 3/4"	Capscrew, flywheel housing plate.....	5	5	1-	B-42
3/8"	Lockwasher on flywheel housing plate capscrews.....	5	5	1-	B-42
FRONT AXLE					
3/32" x 1"	Cotter pin in tie rods, front axle.....	4		1-	A-41
5/16"-24	Nut hexagon for bolt, tie rod clamp, front axle.....	4		1-	B-41
5/16"	Lockwasher, for bolt tie rod clamp, front axle.....	4		1-	B-41
1/4"-24	Nut, slotted, left and right hand steering socket.....	2		1-	A-41
5/16"-24x1 1/2"	Bolt, hexagon head, tie rod clamp, front axle (check TO-8848).....	4		1-	B-41
1/2"-13x2 1/2"	Adjusting set screw kingpin, steering arm.....	2		1-	B-41
GAS TANK AND SUPPORT					
3/8"-16x1"	Carriage bolt, gas tank to gas tank support.....	3	3	1-	
3/8"-16	Nut, gas tank to gas tank support.....	3	3	1-	
3/8"	Lockwasher, gas tank to gas tank support.....	3	3	1-	
3/8"-16x3/4"	Bolt, rear channel to gas tank support.....	4	4	1-	
3/8"-16	Nut, rear channel to gas tank support.....	4	4	1-	
3/8"	Lockwasher, rear channel to gas tank support.....	4	4	1-	
1/2"-13x1"	Capscrew, rear gas tank support to intermediate case.....	2	2	1-	
1/2"	Lockwasher, rear gas tank support plate to intermediate case.....	2	2	1-	
GEAR COVER AND FRONT SUPPORT					
3/8"-16	Nut, gear cover stud.....	2	2	1-	A-43
3/8"-16	Nut, front support bracket.....	1	1	1-	A-43
3/8"-16x2 1/4"	Capscrew, gear cover.....	1	1	1-	A-43
3/8"-16x1"	Capscrew, gear cover.....	9	9	1-	A-43
3/8"	Lockwashers on capscrews for gear cover.....	9	9	1-	A-43
3/8"-24	Nut on long capscrew, gear cover.....	1	1	1-	A-43
3/8"-16x5/8"	Capscrew, front cylinder plate.....	2	2	1-	A-63
3/8"	Lockwasher on capscrew for front cylinder plate.....	2	2	1-	A-43
GENERATOR					
5/8"	Lockwasher, armature shaft nut, driving head on generator.....	1	1	1-	A-37
1/4"	Lockwasher, screw, frame to heads on generator.....	2	2	1-	A-37
1/2"-13x7/8"	Capscrew, generator mount to engine.....	2	2	1-	
1/2"	Lockwasher, generator mount to engine.....	2	2	1-	
5/16"-18x1"	Capscrew, generator to generator mount.....	2	2	1-	
5/16"-18	Nut, generator to generator mount.....	2	2	1-	
5/16"	Lockwasher, generator to generator mount.....	2	2	1-	
GOVERNOR					
5/16"-18x1 1/4"	Capscrew, drilled head for governor control adjusting screw stop.....	1	1	1-	A-38
3/8"-16x3 3/8"	Capscrew, governor.....	2	2	1-	A-43
3/8"	Lockwasher on capscrew for governor.....	2	2	1-	A-43
3/8"-16	Hexagon nut for capscrew on governor.....	2	2	1-	A-43
5/16"-18x5/8"	Capscrew, governor control arm to engine.....	2	2	1-	
5/16"	Lockwasher, governor control arm to engine.....	2	2	1-	
INSTRUMENT PANEL					
3/8"-16x1"	Capscrew, instrument panel to steering column casting.....	4	4	1-	
3/8"	Lockwasher, instrument panel to steering column casting.....	4	4	1-	

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
LIVE POWER TAKE-OFF					
Rear and Front Section					
3/8"x13/16"	Capscrew, drive shaft bearing cover.....	3	3	1-	A-44
3/8"	Lockwasher on capscrew, drive shaft bearing cover.....	3	3	1-	A-44
3/8"x13/16"	Capscrew, intermediate bearing shaft cover.....	3	3	1-	B-44
3/8"	Lockwasher on capscrew, intermediate bearing shaft cover.....	3	3	1-	B-44
5/16"-18x1 1/8"	Capscrew, clutch to mounting plate.....	6	6	1-	B-44
5/16"	Lockwasher on capscrew clutch to mounting plate.....	6	6	1-	B-44
3/8"x1 1/4"	Capscrew, intermediate shaft, rear bearing cap.....	3	3	1-	B-44
3/8"	Lockwasher on capscrew, intermediate shaft, rear bearing cap.....	3	3	1-	B-44
3/8"x13/16"	Capscrew, driven shaft, front bearing cover.....	3	3	1-	A-44
3/8"	Lockwasher on capscrew, driven shaft front bearing cover.....	3	3	1-	A-44
3/8"x1 1/4"	Capscrew, driven shaft rear cap.....	3	3	1-	B-44
3/8"	Lockwasher on capscrew, driven shaft rear cap.....	3	3	1-	B-44
3/8"x7/8"	Capscrew, driver shaft shield, and standard power take-off.....	3	3	1-	B-29
3/8"	Lockwasher on capscrew, driven shaft shield, and standard power take-off.....	3	3	1-	B-29
3/8"x1 1/4"	Capscrew, case to adapter.....	11	11	1-	A-44
3/8"x1"	Capscrew, case to adapter.....	1	1	1-	A-44
1/4"-28x3/4"	Capscrew, bracket and spacer assembly to pressure plate (check TO-9598).....	3	3	1-	B-44
1/4"	Lockwasher on capscrew bracket and spacer assembly to pressure plate (check TO-9598).....	3	3	1-	B-44
3/32"x1 1/2"	Cotter pin through link pin (check TO-9598).....	6	6	1-	B-44
OIL FILTER					
3/8"-16x5/8"	Capscrew, oil filter to rear engine mount.....	2	2	1-	
3/8"	Lockwasher, oil filter to rear engine mount.....	2	2	1-	
OIL PUMP					
3/8"-16x7/8"	Capscrew for oil pan.....	14	14	1-	A-42
3/8"	Lockwasher on capscrew for oil pan.....	14	14	1-	A-42
1/4"-20x5/8"	Capscrew for oil pump cover.....	6	6	1-	A-42
1/4"	Lockwasher on capscrew for oil pump cover.....	6	6	1-	A-42
3/8"-16x1 1/4"	Capscrew for oil pump.....	2	2	1-	A-42
3/8"	Lockwasher on capscrew for oil pump.....	2	2	1-	A-42
PISTON					
3/32"x3/4"	Cotter pin, connecting rod bolt nut.....	8	8	1-	B-42
3/8"-24	Nut connecting rod bolt.....	8	8	1-	B-42
RADIUS ROD					
3/4"-16x3 3/8"	Bolt, radius rod to front axle.....	1	1	1-	B-41
3/4"-16	Nut, radius rod to front axle.....	1	1	1-	B-41
3/4"	Lockwasher, radius rod to front axle.....	1	1	1-	B-41
3/8"-11x2 1/4"	Capscrew, radius rod, anchor to frame.....	3	3	1-	
RADIATOR GRILL					
1/8"x7/32"	Rivet, for spring, radiator grill.....	4	4	1-	B-37
1/4"-20x5/8"	Bolt, grill reinforcement to frame.....	1	1	1-	B-41
1/4"-20	Nut, grill reinforcement to frame.....	1	1	1-	B-41
1/4"	Lockwasher, grill reinforcement to frame.....	1	1	1-	B-41
1/4"-20x3/4"	Bolt, hood to grill.....	4	4	1-	
1/4"-20	Nut, hood to grill.....	4	4	1-	
1/4"	Lockwasher, hood to grill.....	4	4	1-	
5/16"-18x3/4"	Capscrew, grill to radiator.....	4	4	1-	

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
5/16" x 3/4" x 16 gauge	Flat washer, grill to radiator.....	4	4	1-	
1/2"-13x1"	Capscrew, radiator grill to frame.....	4	4	1-	
1/2"-13x1 1/4"	Capscrew, radiator grill to frame.....	1	1	1-	
1/2"	Lockwasher, radiator grill to frame.....	5	5	1-	
1/2"	Flat washer, radiator grill to frame.....	4	4	1-	
ROSS STEERING GEAR					
3/8"	Lockwasher, capscrew in steering gear adjusting pad.....	2	2	1-	B-40
3/8"-24x1"	Capscrew, housing end cover on steering gear.....	4	4	1-	B-40
3/8"	Lockwasher, capscrew housing end cover on steering gear.....	4	4	1-	B-40
5/16" x 9/16"	Capscrew, housing top cover on steering gear.....	5	5	1-	B-40
5/16"	Lockwasher on capscrew housing top cover on steering gear.....	5	5	1-	B-40
SEAT SUPPORT					
1/2"-13	Nut, hexagon.....	1	1	1-	A-40
1/2"-13x1 1/2"	Carriage bolt, seat to support.....	1	1	1-	A-40
1/2"	Lockwasher, bolt seat to support.....	1	1	1-	A-40
STANDARD POWER TAKE-OFF					
3/8"	Lockwasher on capscrew, case to adapter.....	12	12	1-	A-44
3/8" x 3/4"	Capscrew, drive shaft bearing cap.....	2	2	1-	B-44
3/8" x 1"	Capscrew, drive shaft bearing cap.....	1	1	1-	B-44
3/8"	Lockwasher on capscrew, drive shaft bearing cap.....	3	3	1-	B-44
STARTING MOTOR					
1/4"	Lockwasher, bolt, frame to heads.....	2	2	1-	B-38
No. 10-32x1 1/4"	Round head screw, cover band.....	1	1	1-	B-38
No. 10-32	Nut, square, cover band screw.....	1	1	1-	B-38
5/16"-24	Nut, hexagon, terminal stud on starter.....	1	1	1-	B-38
No. 10-32x1 1/2"	Screw, round head, switch contact.....	1	1	1-	B-38
1/16" x 1 1/2"	Cotter pin, in switch lever pin on starter.....	1	1	1-	B-38
5/16"-18	Jam nut on starter control rod.....	1	1	1-	B-39
SPINDLE					
3/4"-10	Nut, top of spindle king pin.....	2		1-	B-41
3/4"	Washer, top of spindle king pin.....	2		1-	B-41
TRANSMISSION AND CASE					
3/8" x 1"	Capscrew, front bearing retainer main transmission shaft.....	2	2	1-	B-45
3/8"	Lockwasher on capscrew, front bearing retainer main transmission shaft.....	2	2	1-	B-45
3/16" x 2"	Cotter pin through nut on bevel pinion shaft.....	1	1	1-	B-45
3/8" x 1"	Capscrew, tower to transmission case.....	7	7	1-	B-45
3/8"	Lockwasher on capscrew, tower to transmission case.....	7	7	1-	B-45
3/8" x 1 1/4"	Capscrew, tower to transmission case.....	2	2	1-	B-45
TRANSMISSION FINAL DRIVE					
5/8"	S.A.E. nut, housing end to case.....	14	14	1-	A-39
5/8"	Lockwasher, nut, housing end to case.....	14	14	1-	A-39
3/16" x 2 3/4"	Cotter pin for nut, outer axle drive shaft.....	2	2	1-	B-39
VALVE OPERATING MECHANISM					
3/8"-24	Hexagon lock-nut, rocker arm adjusting screw.....	8	8	1-	B-42
3/8"-24	Nut for rocker arm bracket capscrew.....	2	2	1-	B-42
3/8"-16x3"	Capscrew, rocker arm bracket.....	2	2	1-	B-42
3/8"-16x9/16"	Capscrew, camshaft thrust plate.....	2	2	1-	B-42
3/8"	Lockwasher on capscrew for camshaft thrust plate.....	2	2	1-	B-42

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
WATER OUTLET					
$\frac{3}{8}$ "-16x1"	Capscrew, water outlet to engine.....	1	1	1-	B-41
$\frac{3}{8}$ "	Lockwasher, water outlet to engine.....	1	1	1-	B-41
No. 6 WASHER PLAIN					
No. 6	Spring clip on distributor.....	1	1	1-	A-38
No. 6 LOCKWASHER					
No. 6	Spring clip on distributor.....	1	1	1-	A-38
	Condenser mounting on distributor.....	1	1	1-	A-38
	Connector screw on distributor.....	1	1	1-	A-38
No. 6 SCREW					
No. 6-32x $\frac{5}{16}$ "	Round head spring clip on distributor.....	1	1	1-	A-38
No. 6-32x $\frac{5}{32}$ "	Screw—condenser mounting fillister head on distributor.....	1	1	1-	A-38
No. 6-32x $\frac{3}{16}$ "	Connector to plate on distributor.....	1	1	1-	A-38
No. 8 WASHER PLAIN					
No. 8	Contact set screw on distributor.....	1	1	1-	A-38
No. 8 LOCKWASHER					
No. 8	Lockwasher commutator end cover screw on generator.....	4	4	1-	A-37
No. 8	Lockwasher brush holder screw on generator.....	2	2	1-	A-37
No. 8	Brush lead screw on generator.....	3	3	1-	A-37
No. 8 SCREW					
No. 8-32x $\frac{5}{16}$ "	Round head brush screw on generator.....	2	2	1-	A-37
No. 8-32x $\frac{3}{4}$ "	Fillister head screw in carburetor shaft stop in throttle body on generator.....	1	1	1-	A-37
No. 8-32x $\frac{3}{16}$ "	Screw fillister head—contact set on distributor.....	1	1	1-	A-38
No. 8-32x $\frac{5}{16}$ "	Commutator head cover to generator.....	4	4	1-	A-37
No. 8-32x $\frac{5}{16}$ "	Inner and outer head light shell.....	6	6	1-	B-40
No. 8-32x $\frac{5}{8}$ "	Clamp to shell on head lights.....	3	3	1-	B-40
No. 10 WASHER PLAIN					
No. 10	Field terminal on generator.....	2	2	1-	A-37
No. 10	Terminal stud on distributor.....	1	1	1-	A-38
No. 10	Switch contact screw on starter.....	1	1	1-	B-38
No. 10 LOCKWASHER					
No. 10	Field terminal on generator.....	2	2	1-	A-37
No. 10	Armature terminal screw on generator.....	1	1	1-	A-37
No. 10	Terminal stud on distributor.....	2	2	1-	A-38
No. 10	Switch contact on starter.....	1	1	1-	B-38
No. 10	On screw felt washer retainer on generator.....	3	3	1-	A-37
No. 10 SCREW					
No. 10-32x1 $\frac{1}{4}$ "	Cover band on generator.....	1	1	1-	A-37
No. 10-32x $\frac{3}{8}$ "	Relay mounting screw round head on generator.....	2	2	1-	A-37
No. 10-32x $\frac{3}{8}$ "	In retainer for felt washer on generator.....	3	3	1-	A-37
No. 10-32x $\frac{3}{8}$ "	Retaining spring on generator.....	1	1	1-	A-37
No. 10-32x $\frac{1}{4}$ "	Battery terminal.....	1	1	1-	A-37
No. 10-32x $\frac{1}{2}$ "	Switch contact on starter.....	1	1	1-	B-38
No. 10-32x1 $\frac{1}{4}$ "	Cover band screw on starter.....	1	1	1-	B-38
No. 10-32x $\frac{5}{16}$ "	Mounting switch to frame on starter.....	1	1	1-	B-38
No. 10-32x $\frac{3}{16}$ "	Ground brush on starter.....	1	1	1-	B-38
No. 10-24x $\frac{3}{4}$ "	Spring clamp on steering gear.....	1	1	1-	B-40

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
No. 10 NUTS					
No. 10-32	Square head—cover band on generator.....	2	2	1-	A-37
No. 10-32	Field terminal on generator.....	2	2	1-	A-37
No. 10-32	Terminal stud on distributor.....	2	2	1-	A-38
No. 10-32	Cover band on starter.....	1	1	1-	B-38
No. 10-32	Jam nut, for choke control rod.....	1	1	1-	B-39
No. 12 SCREW					
No. 12-24x $\frac{5}{8}$ "	Throttle body to bowl.....	4	4	1-	B-37
No. 12 LOCKWASHER					
No. 12	On screw throttle body to bowl.....	4	4	1-	B-37
WOODRUFF KEYS					
404	In driven gear oil pump.....	1	1	1-	A-42
404	In drive gear oil pump.....	1	1	1-	A-42
405	Pulley to armature shaft on generator.....	1	1	1-	A-37
505	Arm shaft bendix driving head on starter.....	1	1	1-	B-38
606	Hydraulic pump drive gear.....	1	1	1-	A-43
607	In drive gear on belt drive (order T-9672).....	1	1	1-	A-41
607	In shaft belt pulley driven gear.....	1	1	1-	A-45
608	In reverse gear shaft.....	1	1	1-	
807	For input gear live power take-off (order T-9673).....	1	1	1-	A-44
807	For crankshaft gear.....	1	1	1-	A-42
807	Fan drive pulley.....	1	1	1-	A-42
807	Camshaft gear.....	1	1	1-	B-42
808	Key on belt pulley to outer shaft (size $\frac{1}{4}$ x 1") (order T-9675).....	1	1	1-	A-41
809	Key, top of king bolt.....	1		1-	B-41
1014	Low and high range driven gears in standard power take-off (order T-9674).....	1	1	1-	B-44
1014	Driven gear to pinion drive shaft in transmission (order T-9674).....	2	2	1-	B-45
FX-S38	Cone—1 required rear bearing driving shaft on live power take-off; 2 required on front and rear shaft, standard power take-off; 1 required in bevel pinion shaft front (Timken No. 14137A).....	4	4	1-	B-44 B-45
FX-S42	Front wheel.....	2	2	1-	B-37
FX-S49	Valve cap (check TO-8845, TO-8858, TO-9266, TO-9286).....	4	4	1-	B-37
FX-S51	Valve collar for rear tires (check TO-9266, TO-9286).....	4	4	1-	A-37
H-1388	Washer between radius rod and anchor, size $\frac{15}{16}$ " x $2\frac{1}{4}$ ".....	2	2	1-	B-41
M-791	Grease fitting, $\frac{1}{8}$ " pipe thread.....	13	6	1-	B-41 A-38
M-1616W	3" Seat assembly.....	1	1	1-	B-39
MX-S168	Battery.....	1	1	1-	A-37
MX-S171	Ammeter.....	1	1	1-	B-39
MX-S173	Oil gauge.....	1	1	1-	B-39
MX-S204	Ignition switch.....	1	1	1-	B-39
P-651	Pin in rear draw bar of hitch frame (size $\frac{1}{2}$ " x $2\frac{1}{2}$ ").....	2	2	1-	B-39
P-2438	Spacer for fender support.....	4	4	1-	A-39
P-6771	Drilled rivet in governor clevis on hand lever (size $\frac{1}{4}$ " x $1\frac{5}{16}$ ").....	1	1	1-	B-38
P-7936	Alemites in universal joints, $\frac{1}{8}$ " pipe thread.....	2	2	1-	B-40
P-10206	Wing nut from intermediate case to battery box clamp (size $\frac{3}{8}$ " x 16).....	1	1	1-	A-40
P-10254	Cup for final drive pinion bearing.....	2	2	1-	A-39
PX-S9	Governor control hand lever spring.....	1	1	1-	A-41
T-5001	Spark plugs (Champion No. J-5).....	4	4	1-	A-38
T-5002	Radiator and engine block drain cock.....	2	2	1-	A-42 B-41
T-5006	Retaining ring for spline shaft.....	1	1	1-	A-38

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-5008	Front motor support bracket.....	1	1	1-	B-41
T-5013	Spacer between frame and crank support (size 1½" x ¾" x 1¼").....	1	1	1-	B-41
T-5014	Dowels in rear motor mount (size 5/8" x 2½").....	2	2	1-	A-41
T-5015	Felt strip, clutch cover and frame (size 3/16" x 5/8" x 28½").....	1	1	1-	A-41
T-5016	Felt strip, clutch cover and motor mount (size 3/16" x 5/8" x 19½").....	1	1	1-	A-41
T-5018	Felt strip between main frame and engine mount (size ½" x ½" x 30").....	1	1	1-	A-41
T-5019	Water outlet from thermostat casting to top radiator hose.....	1	1	1-	B-41
T-5022	Gasket, water outlet to radiator.....	1	1	1-	B-41
T-5024	Cylinder head.....	1	1	1-	A-42
T-5027	Valve rocker arm oil pipe.....	1	1	1-	B-42
T-5028	Elbow for valve rocker arm oil pipe.....	1	1	1-	B-42
T-5029	Washer, 9/16" x 1⅜", one each right and left governor control lever.....	2	2	1-	A-41
T-5031	Fan belt (Goodyear).....	1	1	1-	B-41
T-5041	Spacer between fan and motor (3¼" x 2½").....	1	1	1-	B-41
T-5042	Special bolts, transmission to frame (½" x 2½" hexagon).....	2	2	1-	A-45
T-5043	Shim (.010") under front motor support.....	Var.	Var.	1-	B-41
T-5044	Shim (.005") under front motor support.....	Var.	Var.	1-	B-41
T-5045	Clamping tee screw for oil filter (check TO-5011).....	1	1	1-	B-38
T-5047	Cover for oil filter (check TO-5046).....	1	1	1-	B-38
T-5048	Gasket for tee screw for oil filter (check TO-5046).....	1	1	1-	B-38
T-5049	Gasket for cover for oil filter (check TO-5046).....	1	1	1-	B-38
T-5052	Spring cartridge supports in oil filter.....	1	1	-253	B-38
T-5053	Cartridge for oil filter.....	1	1	1-	B-38
T-5054	Drain plug at bottom of oil filter.....	1	1	1-	B-38
T-5063	Anti-rattle spring in clutch (check TO-5061).....	3	3	1-	A-44
T-5065	Pin in eye bolt in engine clutch (check TO-5061).....	3	3	1-	A-44
T-5066	Strut for release lever in engine clutch (check TO-5061).....	3	3	1-	A-44
T-5067	Release lever in engine clutch (check TO-5061).....	3	3	1-	A-44
T-5068	Spring cover to pressure plate in engine clutch (check TO-5061).....	9	9	1-	A-44
T-5069	Pressure plate for engine clutch (check TO-5061).....	1	1	1-	A-44
T-5076	Inverted male elbow.....	3	3	1-	B-38
T-5150	Front part of frame.....	1	1	1-	B-41
T-5155	Crank handle (check TO-5154).....	1	1	1-	B-41
T-5156	Locking pin for crank handle (check TO-5154).....	1	1	1-	B-41
T-5167	Right hand pivot bolt on hand lever for governor (½"x2¼") (13 USS threads)	1	1	1-	A-41
T-5168	Left hand pivot bolt on hand lever for governor (½"x1¼") (13 USS threads).....	1	1	1-	B-38
T-5170	Adjustable yoke on governor.....	1	1	1-	B-38
T-5171	Clamp for muffler (check TO-5176).....	1	1	1-	B-37
T-5173	Support for swivel arm on governor.....	1	1	1-	A-38
T-5177	Cap screw, governor swivel arm, 3/8"-16x1½".....	1	1	1-	A-38
T-5178	Front swivel arm on governor.....	1	1	1-	A-38
T-5180	Governor control spring spacer (3/8"x1½").....	1	1	1-	A-41
T-5181	Spacer on pivot arm for governor (7/8"x9/16").....	1	1	1-	A-38
T-5187	Exhaust manifold gasket.....	1	1	1-	B-41
T-5188	Governor control spacer bracket (1¼"x2½").....	1	1	1-	B-41
T-5191	Stop for governor control bracket (5/16"-18x1¼").....	1	1	1-	A-38
T-5192	Linkage rod guide bracket on left side of engine.....	1	1	1-	A-38
T-5193	Governor control linkage rod.....	1	1	1-	B-38
T-5195	Support cartage (replaces T-5052).....	1	1	253-	B-38
T-5201	Front cam gear gasket cover.....	1	1	1-	A-43
T-5202	Felt washer for cam gear cover.....	1	1	1-	A-43
T-5203	Oil seal in cam gear cover.....	1	1	1-	A-43
T-5204	Flat washer in cam gear cover.....	3	3	1-	A-43
T-5205	Front cylinder plate.....	1	1	1-	A-43
T-5206	Front cylinder plate gasket.....	1	1	1-	A-43

Repair Parts List for Cockshutt "30" Tractor

Page 35

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-5207	Front cylinder plate dowel pins.....	2	2	1-	A-43
T-5208	Lower front support bracket.....	1	1	1-	A-43
T-5209	Slotted pipe plug, 1/8".....	2	2	1-	A-42 A-43
T-5211	Stud for magneto adaptor (check TO-5210).....	1	1	1-	A-43
T-5212	Stud for governor (check TO-5210).....	1	1	1-	A-43
T-5214	Hydraulic pump adaptor.....	1	1	1-	A-43
T-5215	Hydraulic pump drive shaft bushing.....	1	1	1-	A-43
T-5216	Hydraulic pump thrust washer.....	1	1	1-	A-43
T-5217	Hydraulic pump dowel pin.....	1	1	1-	A-43
T-5218	Gasket between governor and engine block.....	1	1	1-	A-43
T-5221	Drive gear for hydraulic pump.....	1	1	1-	A-43
T-5222	Drive shaft for hydraulic pump.....	1	1	1-	A-43
T-5226	Pin in governor weights.....	2	2	1-	A-43
T-5227	Thrust sleeve for governor weights.....	1	1	1-	A-43
T-5228	Locking wire for governor weight pins.....	2	2	1-	A-43
T-5229	Ball bearing for governor weight shaft (No. X-1300).....	1	1	1-	A-43
T-5233	Governor adjusting eye bolt screw (check TO-5332).....	1	1	1-	A-43
T-5234	Governor body (check TO-5232).....	1	1	1-	A-43
T-5236	Rocker shaft (check TO-5232).....	1	1	1-	A-43
T-5237	Plug for rocker shaft (check TO-5232).....	1	1	1-	A-43
T-5243	Governor spring.....	1	1	1-	A-43
T-5245	Front main bearing shell.....	2	2	1-	A-42
T-5246	Rear main bearing shell.....	2	2	1-	A-42
T-5247	Centre engine main bearing shell.....	2	2	1-	A-42
T-5248	Regulator for oil pressure piston.....	1	1	1-	A-42
T-5249	Regulator oil pressure spring.....	1	1	1-	A-42
T-5250	Screw for oil pressure regulator.....	1	1	1-	A-42
T-5251	Gasket for oil pressure regulator.....	1	1	1-	A-42
T-5253	Lock wire.....	3	3	1-	A-42
T-5255	Sleeve (check TO-5254).....	4	4	1-	A-42
T-5256	Packing ring for sleeve (check TO-5254).....	8	8	1-	A-42
T-5257	Cylinder head stud (short) (check TO-5254).....	10	10	1-	A-42
T-5258	Cylinder head stud (long) (check TO-5254).....	4	4	1-	A-42
T-5259	Front camshaft bearing (check TO-5254).....	1	1	1-	A-42
T-5260	Centre camshaft bearing (check TO-5254).....	2	2	1-	A-42
T-5261	Rear camshaft bearing (check TO-5254).....	1	1	1-	A-42
T-5262	Front main bearing cap (check TO-5254).....	1	1	1-	A-42
T-5263	Centre main bearing cap (check TO-5254).....	1	1	1-	A-42
T-5264	Rear main bearing cap (check TO-5254).....	1	1	1-	A-42
T-5265	Dowel pins for main bearing caps (check TO-5254).....	6	6	1-	A-42
T-5266	Cap screw for main bearing caps.....	6	6	1-	A-42
T-5267	Expansion plug, 1" (check TO-5254).....	1	1	1-	A-42
T-5268	Expansion plug, 1 1/2" (check TO-5254).....	1	1	1-	A-42
T-5269	Squire head pipe plug, 1/4" (check TO-5254).....	1	1	1-	A-42
T-5270	Castellated pipe plug, 3/8" (check TO-5254).....	2	2	1-	A-42
T-5271	Stud for fuel pump (check TO-5254).....	2	2	1-	A-42
T-5272	Stud for gear cover (check TO-5254).....	1	1	1-	A-42
T-5273	Radiator drain cock.....	1	1	1-	A-42
T-5274	Crankshaft.....	1	1	1-	A-42
T-5275	Cam and valve drive gear on crankshaft.....	1	1	1-	A-42
T-5277	Fan drive pulley on front end crankshaft.....	1	1	1-	A-42
T-5278	Jaw for starting crank on end of crankshaft.....	1	1	1-	A-42
T-5279	Washer for starting crank jaw.....	1	1	1-	A-42
T-5280	Standard piston.....	4	4	1-	B-42

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-5281	Standard piston pin.....	4	4	1-	B-42
T-5282	Retaining washer for end of piston pins.....	8	8	1-	B-42
T-5283	Standard piston ring for 1st, 2nd and 3rd groove.....	12	12	1-	B-42
T-5284	Oil ring for standard piston.....	4	4	1-	B-42
T-5286	Connecting rod bolts (check TO-5285).....	8	8	1-	B-42
T-5287	Piston pin bushing in connecting rod (check TO-5285).....	4	4	1-	B-42
T-5288	Connecting rod bearings shell (check TO-5285).....	8	8	1-	B-42
T-5289	Oil seal flywheel housing plate (low speed) (check TO-5297).....	1	1	1-	B-42
T-5290	Oil seal flywheel housing plate (outer) (check TO-5297).....	1	1	1-	B-42
T-5291	Pipe plug in flywheel housing plate, 3/4" countersunk.....	1	1	1-	B-42
T-5292	Flywheel housing plate dowel pins.....	2	2	1-	B-42
T-5293	Flywheel.....	1	1	1-	B-42
T-5294	Flywheel ring gear.....	1	1	1-	B-42
T-5295	Flywheel dowel pins.....	2	2	1-	B-42
T-5296	Flywheel expansion plug, 1/2".....	2	2	1-	B-42
T-5298	Oil seal retainer in flywheel housing (check TO-5297).....	1	1	1-	B-42
T-5299	Oil seal retainer screws (check TO-5297).....	6	6	1-	B-42
T-5300	Cylinder head gasket.....	1	1	1-	A-42
T-5301	Cylinder head cover.....	1	1	1-	A-42
T-5302	Cylinder head cover gasket.....	1	1	1-	A-42
T-5304	Elbow on cylinder head oil line.....	1	1	1-	A-42
T-5305	Tee on cylinder head oil line.....	1	1	1-	A-42
T-5307	Standard intake valve (check TO-5306).....	4	4	1-	A-42
T-5308	Standard exhaust valve (check TO-5306).....	4	4	1-	A-42
T-5309	Valve guide (check TO-5306).....	8	8	1-	A-42
T-5310	Valve spring (check TO-5306).....	8	8	1-	A-42
T-5311	Valve spring retainer (check TO-5306).....	8	8	1-	A-42
T-5312	Lock valve spring retainer (check TO-5306).....	8	8	1-	A-42
T-5313	Valve spring snap ring (check TO-5306).....	8	8	1-	A-42
T-5314	Manifold stud (short) (check TO-5306).....	4	4	1-	A-42
T-5215	Manifold stud (long) (check TO-5306).....	4	4	1-	A-42
T-5316	Rocker arm stud (check TO-5306).....	2	2	1-	A-42
T-5317	Expansion plug, 1 1/4" (check TO-5306).....	1	1	1-	A-42
T-5318	Camshaft.....	1	1	1-	B-42
T-5319	Camshaft gear.....	1	1	1-	B-42
T-5320	Camshaft gear retainer.....	1	1	1-	B-42
T-5321	Camshaft thrust plate.....	1	1	1-	B-42
T-5322	Rocker arm bracket.....	4	4	1-	B-42
T-5323	Rocker arm bracket spring clip.....	4	4	1-	B-42
T-5324	Washer on rocker arm bracket cap screw.....	2	2	1-	B-42
T-5325	Valve lifter.....	8	8	1-	B-42
T-5326	Adjusting screw on rocker arm (check TO-5329 and TO-5326).....	8	8	1-	B-42
T-5331	Rocker arm bushing (check TO-5336 and TO-5329).....	8	8	1-	B-42
T-5332	Rocker arm ball (check TO-5336 and TO-5329).....	8	8	1-	B-42
T-5333	Rocker arm ball retainer (check TO-5336 and TO-5329).....	8	8	1-	B-42
T-5334	Rocker arm oil wick (check TO-5336 and TO-5329).....	8	8	1-	B-42
T-5339	Expansion plug for rocker arm shaft (check TO-5338).....	2	2	1-	B-42
T-5340	Oil pump strainer.....	1	1	1-	A-42
T-5341	Oil pump strainer bale wire.....	1	1	1-	A-42
T-5342	Oil gauge dip stick.....	1	1	1-	A-42
T-5343	Oil pan.....	1	1	1-	A-42
T-5344	Oil pan gasket.....	2	2	1-	A-42
T-5345	Oil pan drain plug.....	1	1	1-	A-42
T-5346	Oil filler and breather cap.....	1	1	1-	A-42
T-5347	Oil pan breather.....	1	1	1-	A-42

Repair Parts List for Cockshutt "30" Tractor

Page 37

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
T-5349	Oil pump drive shaft.....	1	1	1-	A-42
T-5350	Oil pump drive gear.....	1	1	1-	A-42
T-5352	Retaining ring for oil pump drive gear.....	1	1	1-	A-42
T-5353	Oil pump driven gear.....	1	1	1-	A-42
T-5354	Pin in oil pump driven gear.....	1	1	1-	A-42
T-5355	Idler gear in oil pump.....	1	1	1-	A-42
T-5356	Idler shaft bearing in oil pump.....	1	1	1-	A-42
T-5357	Oil pump cover.....	1	1	1-	A-42
T-5358	Oil pump oil seal.....	1	1	1-	A-42
T-5359	Water pump gasket.....	1	1	1-	A-43
T-5360	Water pump support link.....	1	1	1-	A-43
T-5361	Water pump pulley.....	1	1	1-	A-43
T-5363	Water pump cover.....	1	1	1-	A-43
T-5364	Water pump cover gasket.....	1	1	1-	A-43
T-5365	Water pump impeller cover.....	1	1	1-	A-43
T-5366	Washer for water pump seal.....	1	1	1-	A-43
T-5367	Flexible seal for water pump.....	1	1	1-	A-43
T-5368	Guide for water pump spring.....	1	1	1-	A-43
T-5369	Water pump spring.....	1	1	1-	A-43
T-5370	Ring for water pump seal.....	1	1	1-	A-43
T-5371	Water pump pipe plug.....	1	1	1-	A-43
T-5372	Water pump pulley hub.....	1	1	1-	A-43
T-5373	Water pump bearing wire snap ring, outer.....	1	1	1-	A-43
T-5374	Water pump bearing wire snap ring, inner.....	1	1	1-	A-43
T-5376	Gasket, hydraulic pump adapter.....	1	1	1-	A-43
T-5377	Water pump drain cock.....	1	1	1-	A-43
T-5378	Water inlet pipe.....	1	1	1-	A-43
T-5379	Water inlet pipe gasket.....	1	1	1-	A-43
T-5380	Thermostat.....	1	1	1-	A-43
T-5381	Thermostat housing.....	1	1	1-	A-43
T-5382	Thermostat housing gasket.....	1	1	1-	A-43
T-5383	Water pump bypass pipe line.....	1	1	1-	A-43
T-5384	Water pump bypass pipe line gasket.....	1	1	1-	A-43
T-5385	Water pump bypass line hose.....	1	1	1-	A-43
T-5386	Water pump bypass line hose clamp.....	2	2	1-	A-43
T-5387	Water pump outlet casting.....	1	1	1-	A-43
T-5388	Water pump outlet pipe gasket.....	1	1	1-	A-43
T-5389	Exhaust and intake manifold.....	1	1	1-	B-42
T-5390	Exhaust and intake manifold gasket.....	1	1	1-	B-42
T-5391	Exhaust and intake manifold washer.....	8	8	1-	B-42
T-5392	Cover for fuel pump connecting below distributor.....	1	1	1-	A-42
T-5393	Gasket for fuel pump cover.....	1	1	1-	A-42
T-5394	Support for distributor.....	1	1	1-	A-42
T-5396	Nuts on governor adjusting eye bolts screw.....	2	2	1-	A-43
T-5397	Adapter cover governor hydraulic attachment (check TO-5401).....	1	1	1-	A-38
T-5398	Gasket for adapter cover, governor hydraulic attachment (check TO-5401).....	1	1	1-	A-38
T-5399	Oil pump body.....	1	1	1-	A-42
T-5400	Water pump body.....	1	1	1-	A-43
T-5404	Oil seal for distributor support.....	1	1	1-	A-42
T-6001	Decal "Safety First" on transmission.....	1	1	1-	
T-6002	Decal "Safety First" on fender.....	1	1	1-	
T-6003	Decal important.....	1	1	1-	
T-6004	Decal "Drain Rad".....	1	1	1-	
T-6005	Decal drain.....	1	1	1-	
T-7001	Connector, top of sediment bowl.....	1	1	1-	A-37

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-7010	Support for air cleaner (check TO-7024).....	1	1	1-	A-38
T-7011	Air cleaner tube.....	1	1	1-	B-37
T-7017	Choke control rod ($\frac{3}{16}$ " x $4\frac{1}{4}$ ").....	1	1	1-	B-37
T-7021	Top air cleaner hose ($1\frac{3}{4}$ " x $2\frac{1}{2}$ ").....	1	1	1-	B-41
T-7023	Choke control rod knob.....	1	1	1-	B-39
T-7030	Cap for air cleaner assembly (check TO-7029).....	1	1	1-	A-38
T-7032	Bottom oil cup for air cleaner (check TO-7029).....	1	1	1-	A-38
T-7036	Gasket for carburetor to manifold.....	1	1	1-	B-41
T-7038	Glass bowl for sediment bowl.....	1	1	1-	A-37
T-7039	Gasket for sediment bowl.....	1	1	1-	A-37
T-7040	Screen for sediment bowl.....	1	1	1-	A-37
T-7041	Throttle butterfly in carburetor.....	1	1	1-	B-37
T-7042	Screw—2 required butterfly to shaft, 2 required high-speed ratchet spring.....	4	4	1-	B-37
T-7043	Idle adjusting needle in throttle carburetor body.....	1	1	1-	B-37
T-7044	Spring for idle adjusting needle in throttle carburetor body.....	1	1	1-	B-37
T-7045	Filler screw in throttle body of carburetor.....	1	1	1-	B-37
T-7046	Spring for high-speed needle in throttle carburetor body.....	1	1	1-	B-37
T-7047	Washer at bottom of spring on high-speed needle in throttle carburetor body.....	1	1	1-	B-37
T-7048	Gasket under washer and spring on high-speed needle in throttle carburetor body.....	1	1	1-	B-37
T-7049	Jet for idle needle in throttle carburetor body.....	1	1	1-	B-37
T-7050	Jet for high-speed in throttle carburetor body.....	1	1	1-	B-37
T-7051	Elbow for attaching gas line throttle carburetor body.....	1	1	1-	B-37
T-7052	Spring for throttle stop adjusting screw.....	1	1	1-	B-37
T-7053	Cup washer end of throttle shaft.....	1	1	1-	B-37
T-7054	Packing for throttle shaft in throttle carburetor body.....	1	1	1-	B-37
T-7055	Retainer washer for packing in throttle shaft in throttle carburetor body.....	1	1	1-	B-37
T-7058	Venture $\frac{1}{32}$ " diameter, throat throttle, carburetor body and bowl.....	1	1	1-	B-37
T-7057	Gasket between throttle carburetor body and bowl.....	1	1	1-	B-37
T-7058	Shaft for float in carburetor bowl.....	1	1	1-	B-37
T-7059	Gasket for main nozzle in carburetor bowl.....	1	1	1-	B-37
T-7060	Jet for main nozzle in carburetor bowl.....	1	1	1-	B-37
T-7061	Screws, choker shaft to butterfly in carburetor bowl.....	2	2	1-	B-37
T-7062	Packing in choker shaft in carburetor bowl.....	1	1	1-	B-37
T-7063	Retainer washer for packing choker shaft in carburetor bowl.....	1	1	1-	B-37
T-7064	Spring on choker shaft carburetor bowl.....	1	1	1-	B-37
T-7065	Strainer bottom of bowl carburetor.....	1	1	1-	B-37
T-7066	Expansion plug bottom of carburetor bowl for strainer.....	1	1	1-	B-37
T-7067	Drain plug in carburetor bowl.....	1	1	1-	B-37
T-7069	Gasket for float valve seat in throttle carburetor body.....	1	1	1-	B-37
T-7081	Cross centre rubber pad under gas tank ($1\frac{3}{4}$ " x $\frac{1}{4}$ " x $3\frac{1}{4}$ ").....	1	1	1-	A-40
T-7082	Front rubber pad under gas tank ($1\frac{3}{4}$ " x $\frac{1}{4}$ " x $15\frac{3}{4}$ ").....	1	1	1-	A-40
T-7083	Side rubber pad under gas tank ($1\frac{3}{4}$ " x $\frac{1}{4}$ " x 18").....	2	2	1-	A-40
T-7084	Wing bolt on clamp air cleaner.....	1	1	1-	A-38
T-7085	Washer on wing bolt on clamp, air cleaner.....	1	1	1-	A-38
T-7086	Top of sediment bowl.....	1	1	1-	A-37
T-7087	Shut-off valve, sediment bowl.....	1	1	1-	A-37
T-7510	Cover clamp for battery box.....	1	1	1-	A-40
T-7511	Cover clamp rod for battery box.....	1	1	1-	A-40
T-7519	Generator mounting bracket.....	1	1	1-	B-41
T-7520	Fan and generator tension bar.....	1	1	1-	B-41
T-7525	Protector caps for distributor wires.....	5	5	1-	A-38
T-7532	Coil bracket support.....	1	1	1-	A-38
T-7533	Starter control rod.....	1	1	1-	A-38
T-7536	Starter cable to battery (negative).....	1	1	1-	B-38
T-7537	Battery ground strap (positive).....	1	1	1-	B-38

Repair Parts List for Cockshutt "30" Tractor

Page 39

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-7547	Dash lamp bulb (check TO-7563).....	1	1	1-	B-39
T-7557	Starter control rod knob.....	1	1	1-	B-39
T-7560	Tail light bracket (check TO-7563).....	1	1	1-	B-40
T-7561	Grommets for head light wires.....	2	2	1-	A-39
T-7566	Collar for head light bracket (check TO-7563).....	3	3	1-	A-39
T-7570	Clip for wiring.....	1	1	1-	B-37
T-7571	Retaining spring, wires to air tube.....	2	2	1-	
T-7572	Wire, tail light to switch.....	1	1	1-	A-40
T-7573	Tail light wire clip.....	1	1	1-	A-40
T-7574	Lens for head lamp assembly (check TO-7514).....	3	3	1-	B-40
T-7575	Rubber ring for lens to reflector (check TO-7514).....	3	3	1-	B-40
T-7576	Bulb for head lamp (check TO-7514).....	3	3	1-	B-40
T-7577	Rim clamp for lens to shell (check TO-7514).....	3	3	1-	B-40
T-7585	Lockwasher—2 required throttle butterfly to shaft, 2 required choke butterfly to shaft, 2 required for ratchet spring high-speed needle.....	6	6	1-	B-37
T-7586	Nut—armature shaft, at drive end head of generator.....	1	1	1-	A-37
T-7587	Pulley for generator.....	1	1	1-	A-37
T-7588	Spacer—arm shaft at drive end head on generator.....	1	1	1-	A-37
T-7589	Retainer—felt washer in drive end head on generator.....	1	1	1-	A-37
T-7591	Snap ring—arm shaft, at drive end head on generator.....	1	1	1-	A-37
T-7593	Head—drive end on generator.....	1	1	1-	A-37
T-7594	Oiler—drive end head on generator.....	1	1	1-	A-37
T-7595	Felt oiler—1 required head drive end, 1 required commutator end on generator.....	2	2	1-	A-37
T-7596	Washer—in head on generator (felt).....	2	2	1-	A-37
T-7597	Retainer—felt washer, outer on generator.....	1	1	1-	A-37
T-7598	Bearing—arm, shaft to head on generator.....	1	1	1-	A-37
T-7599	Retainer—bearing on generator.....	1	1	1-	A-37
T-7600	Retainer—felt washer, inner on generator.....	1	1	1-	A-37
T-7601	Screw—frame to heads on generator.....	2	2	1-	A-37
T-7602	Band—cover for frame on generator.....	1	1	1-	A-37
T-7604	Washer—insulation, field terminal on generator.....	1	1	1-	A-37
T-7605	Bushing—insulation, field terminal on generator.....	1	1	1-	A-37
T-7606	Insulation—inner, field terminal on generator.....	1	1	1-	A-37
T-7607	Bushing—insulation, coil lead to relay cut-out on generator.....	1	1	1-	A-37
T-7608	Screw—pole shoe on generator.....	2	2	1-	A-37
T-7609	Pin—dowel, frame on generator.....	2	2	1-	A-37
T-7610	Insulation—inner field connection on generator.....	1	1	1-	A-37
T-7613	Washer—2 required mounting switch to screw on generator, 2 required on relay cut-out on starter.....	4	4	1-	A-37 A-38
T-7615	Screw—armature, terminal on generator.....	1	1	1-	A-37
T-7616	Screw—brush lead on generator, No. 8, 32 x 3/16".....	3	3	1-	A-37
T-7618	Cover commutator end on generator.....	1	1	1-	A-37
T-7619	Gasket commutator end cover.....	1	1	1-	A-37
T-7620	Wick—armature shaft to wick packing on generator.....	1	1	1-	A-37
T-7621	Cover—wick, end head on generator.....	1	1	1-	A-37
T-7622	Oil guard—inside end head on generator.....	1	1	1-	A-37
T-7623	Gasket—oil guard on generator.....	1	1	1-	A-37
T-7627	Spring retaining clamp—third brush plate on generator.....	1	1	1-	A-37
T-7632	Bearing—hole for arm shaft on generator bronze.....	1	1	1-	A-37
T-7633	Fuse for light switch on generator.....	1	1	1-	B-39
T-7637	Washer—at commutator head end on starter.....	1	1	1-	B-38
T-7638	Washer—arm thrust, commutator head and intermediate on starter.....	2	2	1-	B-38
T-7641	Bolt—frame to heads on starter.....	2	2	1-	B-38
T-7642	Band—cover, frame on starter.....	1	1	1-	B-38

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-7644	Screw—pole shoe on starter.....	4	4	1-	B-38
T-7645	Washer—insulation, terminal stud on starter.....	1	1	1-	B-38
T-7646	Bushing—insulation, terminal stud on starter.....	1	1	1-	B-38
T-7647	Insulation block—terminal stud to starter switch.....	1	1	1-	B-38
T-7648	Switch contact—lower terminal, stud to starter switch on starter.....	1	1	1-	B-38
T-7649	Insulation—on switch contact to starter.....	1	1	1-	B-38
T-7654	Insulation—field connector on starter.....	1	1	1-	B-38
T-7663	Bronze bushing—1 required intermediate bearing thrust washer, 1 required pinion housing end, on starter.....	2	2	1-	B-38
T-7665	Pin—dowel, housing assembly on starter.....	1	1	1-	B-38
T-7667	Spring—drive bendix on starter.....	1	1	1-	B-38
T-7668	Screw—spring to driving head on starter.....	1	1	1-	B-38
T-7669	Screw—spring to shaft on starter.....	1	1	1-	B-38
T-7670	Lockwasher—spring screws on starter.....	2	2	1-	B-38
T-7671	Head—driving on starter.....	1	1	1-	B-38
T-7672	Gasket—switch assembly to contact on starter.....	1	1	1-	B-38
T-7673	Gasket—switch assembly to frame, on starter.....	1	1	1-	B-38
T-7674	Lever—switch on starter.....	1	1	1-	B-38
T-7675	Pin—switch lever on starter.....	1	1	1-	B-38
T-7676	Washer—plain, switch lever pin on starter.....	1	1	1-	B-38
T-7679	Coupling drive—drive shaft lower on distributor.....	1	1	1-	A-38
T-7680	Washer—thrust, drive shaft lower on distributor.....	1	1	1-	A-38
T-7681	Rivet—coupling to drive shaft on distributor.....	1	1	1-	A-38
T-7682	Pointer—advance arm on distributor.....	1	1	1-	A-38
T-7683	Washer—thrust, advance arm on distributor.....	1	1	1-	A-38
T-7687	Wick—felt, cam sleeve on distributor.....	1	1	1-	A-38
T-7689	Spring—anti-rattle, on distributor advance arm.....	1	1	1-	A-38
T-7690	Screw and lockwasher breaker plate mounting on distributor (sold only as a unit).....	2	2	1-	A-38
T-7691	Rotor on distributor.....	1	1	1-	A-38
T-7698	Clip—spring, contact arm on distributor.....	1	1	1-	A-38
T-7699	Condenser—breaker plate on distributor.....	1	1	1-	A-38
T-7708	Washer—insulation, terminal stud on distributor.....	1	1	1-	A-38
T-7709	Bushing—terminal stud on distributor.....	1	1	1-	A-38
T-7710	Insulation—inner, terminal stud on distributor.....	1	1	1-	A-38
T-7711	Connector—terminal stud on distributor.....	1	1	1-	A-38
T-7712	Stud—terminal on distributor.....	1	1	1-	A-38
T-7713	Oiler—base on distributor.....	1	1	1-	A-38
T-7714	Bearing—bronze on distributor.....	2	2	1-	A-38
T-8501	Universal joints on steering shaft.....	2	2	1-	B-40
T-8502	Locking pin universal joints to steering shaft.....	4	4	1-	B-40
T-8515	Top steering column casting.....	1	1	1-	A-40
T-8516	Lower steering column shaft.....	1	1	1-	A-40
T-8517	Upper steering column shaft.....	1	1	1-	A-40
T-8520	Steering wheel.....	1	1	1-	A-40
T-8523	Pin, steering wheel to shaft.....	1	1	1-	A-40
T-8525	Adapter nut, heat gauge to motor.....	1	1	1-	B-39
T-8527	Bronze bushing in steering gear housing (check TO-8526).....	1	1	1-	B-40
T-8528	Oil seal in steering gear housing (check TO-8524).....	1	1	1-	B-40
T-8529	Expansion plug in steering gear housing (check TO-8526).....	1	1	1-	B-40
T-8531	Shim in steering gear for adjusting pad .003 (check TO-8524).....	Var.	Var.	1-	B-40
T-8532	Shim in steering gear for adjusting pad .007 (check TO-8524).....	Var.	Var.	1-	B-40
T-8533	Shim in steering gear for adjusting pad .010 (check TO-8524).....	Var.	Var.	1-	B-40
T-8534	Capscrew in steering gear for adjusting pad ($\frac{3}{8}$ "-24x $\frac{3}{4}$ "), thin head (check TO-8524).....	2	2	1-	B-40
T-8536	Camshaft on steering gear.....	1	1	1-	B-40

Repair Parts List for Cockshutt "30" Tractor

Page 41

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-8537	Ball cup for cam bearing in steering gear (check TO-8563).....	2	2	1-	B-40
T-8538	Steel balls for can bearing (check TO-8563).....	28	28	1-	B-40
T-8539	Snap ring for cam bearing (check TO-8563).....	2	2	1-	B-40
T-8540	Cover at rear of housing for steering gear (check TO-8524).....	1	1	1-	B-40
T-8541	Shim for cover at rear of housing for steering gear .003 (check TO-8524).....	Var.	Var.	1-	B-40
T-8542	Shim for cover at rear of housing for steering gear .010 (check TO-8524).....	Var.	Var.	1-	B-40
T-8543	Shim for cover at rear of housing for steering gear .002 (check TO-8524).....	Var.	Var.	1-	B-40
T-8544	Gasket between frame and front axle pedestal.....	1	1	1-	B-40
T-8545	Cork oil seal for cam shaft on steering gear (check TO-8564).....	1	1	1-	B-40
T-8546	Cover for oil seal on steering gear (check TO-8564).....	1	1	1-	B-40
T-8547	Spring for cam shaft for cup cork washer on steering gear (check TO-8564).....	1	1	1-	B-40
T-8548	Clamp for cam shaft spring on steering gear (check TO-8564).....	1	1	1-	B-40
T-8549	Everlock lockwasher for cam shaft clamp on steering gear (check TO-8564).....	1	1	1-	B-40
T-8550	Cover for housing top on steering gear.....	1	1	1-	B-40
T-8551	Gasket for housing top cover on steering gear.....	1	1	1-	B-40
T-8552	Plug on top of oil filler housing on steering gear ($\frac{3}{8}$ "-18 standard pipe plug) (check TO-8524).....	1	1	1-	B-40
T-8711	Right hand front grille spring (check TO-8728 and TO-8729).....	4	4	1-	B-37
T-8715	Locking bolt for rear hood ($\frac{5}{16}$ "x $3\frac{1}{2}$ ").....	4	4	1-	B-40
T-8718	Baffle plate under grille.....	1	1	1-	B-40
T-8731	Water outlet hose on radiator ($1\frac{1}{2}$ " x $5\frac{1}{2}$ " 3-ply).....	1	1	1-	B-41
T-8733	Water pipe, radiator to engine.....	1	1	1-	B-41
T-8734	Water inlet hose connections ($1\frac{1}{2}$ " x $2\frac{1}{4}$ " 3-ply).....	3	3	1-	B-41
T-8754	Cap for radiator.....	1	1	1-	B-41
T-8801	Pedestal for front axle.....	1		1-	B-41
T-8802	Front axle, less bushing (check TO-8860).....	1		1-	B-41
T-8803	Thrust washer on upright shaft to front axle (3 " x $\frac{3}{16}$ " x $1\frac{5}{8}$ ").....		1	1-	A-38
T-8804	Felt washer on upright shaft to front axle.....		1	1-	A-38
T-8805	Axle hinge pin on front axle to pedestal ($1\frac{1}{16}$ " x 6 ").....	1		1-	B-41
T-8806	Spindle post washer on front axle ($\frac{25}{32}$ " x $1\frac{3}{4}$ " x $1\frac{1}{32}$ ").....	2		1-	B-41
T-8809	Left hand steering post arm on front axle.....	1		1-	B-41
T-8810	Right hand steering post arm on front axle.....	1		1-	B-41
T-8814	Radius rod anchor under motor frame.....	1		1-	B-41
T-8816	Pedestal for front axle (check TO-8859).....		1	1-	A-38
T-8817	Front axle.....		1	1-	A-38
T-8818	Upright shaft to front axle ($1\frac{13}{16}$ " dia.).....		1	1-	A-38
T-8819	Key at bottom of upright shaft to front axle ($\frac{5}{16}$ " sq. $1\frac{7}{8}$ " long).....		1	1-	A-38
T-8825	Felt washer for spindle post.....	2		1-	B-41
T-8826	Bushing—1 required centre axle pivot post, 4 required for king pins.....	5		1-	B-41
T-8827	Oil seal in front wheel hub.....	2	2	1-	A-38
T-8828	Bottom bearing on spindle of front wheels (Timken No. T-139).....	2		1-	B-41
T-8829	Hub bolts for front wheels ($\frac{1}{2}$ " 20 x $\frac{7}{8}$ ").....	12	12	1-	A-38
T-8830	Hub for front wheels.....	2	2	1-	A-38
T-8831	Hub cap for front wheels.....	2	2	1-	A-38
T-8832	Washer on hub of front wheels.....	2	2	1-	A-38
T-8834	Outer bearing cup in front wheel (Timken No. 2788).....	2	2	1-	A-38
T-8835	Outer bearing cone for front wheel (Timken No. 2788).....	2	2	1-	A-38
T-8837	Inner bearing cup for front wheels (Timken No. 15250).....	2	2	1-	A-38
T-8838	Inner bearing cone in front wheels (Timken No. 15118).....	2	2	1-	A-38
T-8839	Locking pin, hinge pin to pedestal.....	1		1-	B-41
T-8843	Front wheel bearing cover.....	2		1-	B-41
T-8844	Felt washer in front wheel hub.....	2	2	1-	A-38
T-8846	Bushing for pedestal for front axle (check TO-8859).....		1	1-	A-38
T-8851	Locking pin for post to front axle.....		1	1-	A-38
T-8852	Castle nut on radius rod bolt under engine frame ($\frac{7}{8}$ "-9).....	1		1-	B-41

Part No.	DESCRIPTION	No.	Req'd.	Serial	Plate
		Std.	RC	No.	No.
T-8855	Front tire (Goodyear 550 x 16) (check TO-8845).....	2	2	1-	B-37
T-8856	Front inner tube with valve (Goodyear 550 x 16) (check TO-8845).....	2	2	1-	B-37
T-8857	Outer nut for front wheel axle.....	2	2	1-	A-38
T-8861	Front tires (Crest 550 x 16) (check TO-8858).....	2	2	1-	B-37
T-8862	Front inner tubes with valve (Crest 550 x 16) (check TO-8858).....	2	2	1-	B-37
T-8867	Tie rod tube for steering rod (check TO-8848).....	2	1-	1-	B-41
T-8868	Clamp for tie rod tube for steering rod, less bolts (check TO-8848).....	4	1-	1-	B-41
T-9005	Left hand brace to hitch.....	1	1	1-	A-39
T-9006	Draw bar for hitch.....	1	1	1-	B-39
T-9007	Bottom end piece for hitch.....	1	1	1-	B-39
T-9008	Forward carrier bolts ($\frac{3}{4}$ "-10x3").....	2	2	1-	A-39
T-9010	Pin in front end of hitch (1"x2 $\frac{5}{8}$ ").....	1	1	1-	A-40
T-9012	Castle nut for front bolts on hitch ($\frac{3}{4}$ "-10).....	2	2	1-	A-37
T-9013	Right hand brace for hitch.....	1	1	1-	B-39
T-9025	Shim, intermediate shaft rear bearing live power take-off, .021 inches.....	Var.	Var.	1-	B-44
T-9026	Shim, intermediate shaft rear bearing live power take-off, .026 inches.....	Var.	Var.	1-	B-44
T-9027	Shim, intermediate shaft rear bearing on live power take-off, .030 inches.....	Var.	Var.	1-	B-44
T-9028	Shim, intermediate shaft rear bearing on live power take-off, .034 inches.....	Var.	Var.	1-	B-44
T-9201	Brake rod clevis.....	2	2	-1600	A-37
T-9202	Bearing for clutch release (standard power take-off only).....	1	1	1-	A-44
T-9203	Bearing for clutch release on live power take-off, front section (check TO-9597).....	1	1	1-	A-44
T-9204	Outer seat support.....	1	1	1-	A-40
T-9205	Pilot bearing for clutch screw (Departure No. 7604).....	1	1	1-	B-40
T-9206	Inner seat support.....	1	1	1-	A-40
T-9207	Clutch cover plate.....	1	1	1-	A-41
T-9208	Clutch carrier spring.....	1	1	1-	A-44
T-9209	Clutch release fork (not for live power take-off).....	1	1	1-	A-44
T-9210	Clutch release fork (for live power take-off).....	1	1	1-	A-44
T-9212	Brake lock lift spring.....	1	1	1-	A-39
T-9213	Left hand pull rod for brakes.....	1	1	1-	A-41
T-9214	Pin clevis to brake arm.....	2	2	-1600	A-37
T-9215	Brake arm locking pin.....	1	1	1-	A-....
T-9216	Brake rod.....	1	1	1-	A-41
T-9217	Clutch release rod.....	1	1	1-	B-38
T-9219	Clevis pin on clutch release rod ($\frac{3}{8}$ "x1 $\frac{5}{32}$ ").....	1	1	10,001-	B-38
T-9220	Disc for rear wheel.....	2	2	-2000	B-38
T-9222	Nuts ($\frac{5}{8}$ "-11) for rear rim bolts and weights (check TO-9280, TO-9282, TO-9283).....	20	20	-2000	B-39
T-9223	Rear tire (Goodyear 10 x 38) (check TO-9266).....	2	2	1-	A-37
T-9224	Rear inner tube with valve (Goodyear 10 x 38) (check TO-9266).....	2	2	1-	A-37
T-9225	Left hand brake lever.....	1	1	1-	B-38
T-9227	Left hand brake linakge.....	1	1	1-	B-38
T-9231	Clutch pedal.....	1	1	1-	A-39
T-9232	Left hand brake pedal.....	1	1	1-	B-39
T-9233	Right hand brake pedal.....	1	1	1-	B-39
T-9238	Left hand carrier plate.....	1	1	1-	B-38
T-9247	Bolts for rim and clamp to rear disc wheel ($\frac{5}{8}$ "-11x2").....	16	16	1-	B-39
T-9248	Clevis on clutch rod.....	1	1	10,000-	B-38
T-9249	Locking pin for brake pedals.....	1	1	1-	A-37
T-9260	Cap screws for clutch ($\frac{5}{16}$ " - 18 x $\frac{5}{8}$ ").....	6	6	1-	A-44
T-9262	Key for clutch release shaft (1 dia. x $\frac{3}{8}$ ").....	1	1	1-	A-44
T-9265	Locking nut for rear wheel bolts ($\frac{3}{4}$ "-16).....	12	12	1-	B-39
T-9267	Brake pedal retracing springs.....	3	3	1-	A-41
T-9269	Carrier clutch release (standard power take-off).....	1	1	1-	A-44

Repair Parts List for Cockshutt "30" Tractor

Page 43

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-9271	Brake pull rod and pull arm ($\frac{1}{16}$ " x $1\frac{3}{8}$ ")	1	1	1601-	A-41
T-9272	Clevis to brake arm	2	2	1601-	A-37
T-9276	Front cap of clutch shaft (standard power take-off)	1	1	1-	A-44
T-9277	Bolts for wheel weight assembly (check TO-9282)	2	2	1-	B-39
T-9278	Bolts for wheel weight assembly (check TO-9283)	2	2	1-	B-39
T-9279	Spacer for fender support	4	4	1-	A-39
T-9281	Gasket clutch shaft cap to case	1	1	1-	A-44
T-9284	Rear tires (Crest 10 x 38) (check TO-9286)	2	2	1-	A-37
T-9285	Rear inner tube with valve (Crest 10 x 38) (check TO-9286)	2	2	1-	A-37
T-9287	Front oil seal clutch shaft	1	1	1-	A-44
T-9288	Clutch shaft	1	1	1-	A-45
T-9289	Bevel gear for pulley drive	1	1	1-	A-45
T-9290	Snap ring for pulley drive gear	1	1	1-	A-45
T-9291	Bearing for rear clutch shaft	1	1	1-	A-45
T-9292	Rear bearing snap ring on clutch shaft	1	1	1-	A-45
T-9293	Rear bearing snap ring on clutch shaft	1	1	1-	A-45
T-9294	Rear bearing retainer clutch shaft	1	1	1-	A-45
T-9295	Lock wire for bearing return cap screws	1	1	1-	A-45
T-9296	Rear bearing oil seal clutch shaft	1	1	1-	A-45
T-9297	Sleeve of clutch shaft to main shaft (4-speed only)	1	1	1-	A-45
T-9298	Snap ring on clutch and main shaft sleeve (4-speed only)	1	1	1-	B-45
T-9299	Bearing on clutch shaft pilot	1	1	1-	B-45
T-9300	Standard power take-off only, closure; Standard power take-off internal shaft hole	1	1	1-	
T-9301	Plug on creeper idler gear shaft (4-speed only)	1	1	1-	A-45
T-9302	Case on clutch shaft	1	1	1-	A-45
T-9303	Gasket on clutch shaft case to transmission case	1	1	1-	B-45
T-9304	Stud—6 required to clutch shaft transmission case, 10 required near cover to transmission case	16	16	1-	A-39 B-45
T-9305	Plug, oil filler—1 required live power take-off case, 1 required transmission case, 1 required clutch shaft case	3	3	1-	B-44 B-45 A-45
T-9306	Drain plug—1 required intermediate housing, 1 required front pulley housing, 1 required inner carrier belt pulley housing	3	3	1-	A-41 A-45
T-9307	Cover on clutch shaft case inspection	1	1	1-	A-45
T-9308	Gasket on clutch shaft case inspection	1	1	1-	A-45
T-9309	Cover for pulley drive opening	1	1	1-	A-41
T-9310	Gasket on pulley drive opening	1	1	1-	A-41
T-9311	Cover for creeper shift shaft hole (4-speed only)	1	1	1-	A-45
T-9312	Gasket for creeper shift shaft hole (4-speed only)	1	1	1-	A-45
T-9313	Cap on clutch shaft case forward	1	1	1-	A-45
T-9314	Gasket on clutch shaft case forward	1	1	1-	A-45
T-9315	Cover on left hand clutch shaft case	1	1	1-	A-45
T-9316	Gasket on left hand clutch shaft case	1	1	1-	A-45
T-9317	Spacer on front bearing of main transmission shaft (4-speed only)	1	1	1-	B-45
T-9318	Snap ring—1 required on rear driven clutch shaft live power take-off, 1 required front side of creeper driven gear or on spacer collar when creeper gear is not used	2	2	1-	B-45 B-44
T-9319	Bearing for front shaft	1	1	1-	B-45
T-9320	Washer for front bearing spacing	1	1	1-	B-45
T-9321	Retainer front bearing spacing	1	1	1-	B-45
T-9322	Shaft transmission main drive	1	1	1-	B-45
T-9323	Drive sliding gear, 1st and 2nd speed (17- and 22-tooth)	1	1	1-	B-45
T-9324	Drive sliding gear, 3rd and 4th speed (27- and 38-tooth)	1	1	1-	B-45
T-9325	Bearing main shaft, rear	1	1	1-	B-45

Part No.	DESCRIPTION	No. Std.	Req'd. RC	Serial No.	Plate No.
T-9326	Snap ring, right and left end of short shaft and left end of long shaft, on belt pulley drive, 1 required on rear shaft live power take-off.....	4	4	1-	B-45 A-41 A-44
T-9327	Shaft reverse gear (order T-9676).....	1	1	1-	B-45
T-9328	Gear reverse sliding, 20- and 25-tooth.....	1	1	1-	B-45
T-9329	Bushing, reverse sliding gear.....	1	1	1-	B-45
T-9330	Gear, 1st speed drive (48-tooth).....	1	1	1-	B-45
T-9331	Gear, 2nd speed drive (43-tooth).....	1	1	1-	B-45
T-9332	38-tooth gear—1 required in transmission, 1 required in standard power take-off...	2	2	1-	B-44 B-45
T-9333	Gear, 4th speed drive (27-tooth).....	1	1	1-	B-45
T-9334	Spacer, 2nd and 3rd speed driven gears.....	1	1	1-	B-45
T-9335	Pinion bevel drive (6-tooth).....	1	1	1-	B-45
T-9336	Washer bevel pinion shaft front.....	1	1	1-	B-45
T-9337	Nut front bevel pinion shaft.....	1	1	1-	B-45
T-9338	Cup—1 required rear driven shaft live power take-off, 2 required on front and rear driven shaft on standard power take-off, 4 required on belt pulley drive shaft, 1 required on bevel pinion shaft front (Timken No. 14276).....	8	8	1-	A-41 B-44 B-45
T-9339	Snap ring—1 required on front bearing bevel pin in transmission, 1 required front bearing driven shaft standard power take-off.....	2	2	1-	B-44 B-45
T-9340	Washer front bearing bevel pinion shaft.....	1	1	1-	B-45
T-9341	Cup, rear bearing bevel pinion shaft (Timken No. 46368).....	1	1	1-	B-45
T-9342	Cone, rear bearing bevel pinion shaft (Timken No. 46150).....	1	1	1-	B-45
T-9343	Snap ring, rear bearing bevel pinion shaft.....	1	1	1-	B-45
T-9345	Washer, rear bearing bevel pinion shaft.....	1	1	1-	B-45
T-9346	Gear, bevel drive (40-tooth).....	1	1	1-	A-39
T-9347	Lock wire cap screws in differential.....	1	1	1-	A-39
T-9348	Differential case.....	1	1	1-	A-39
T-9349	Pinion for differential.....	2	2	1-	A-39
T-9350	Pin for differential pinion.....	2	2	1-	A-39
T-9351	Pin differential pinion pin lock.....	2	2	1-	A-39
T-9352	Washer, differential pinion thrust.....	2	2	1-	A-39
T-9353	Shaft final drive pinion and differential support.....	1	1	1-	A-39
T-9354	Pin differential support shaft.....	1	1	1-	A-39
T-9355	Pinion, final drive and differential side gear (10-tooth).....	2	2	1-	A-39
T-9356	Washer, differential side gear thrust.....	2	2	1-	A-39
T-9357	Cone, final drive pinion bearing (Timken No. 3979).....	2	2	1-	A-39
T-9358	Oil packing for differential bearing.....	2	2	1-	A-39
T-9359	Cap, differential bearing.....	2	2	1-	A-39
T-9360	Gasket, differential bearing cap.....	2	2	1-	A-39
T-9361	Shim, differential bearing cap .003.....	2	2	1-	A-39
T-9362	Shim, differential bearing cap .005.....	4	4	1-	A-39
T-9363	Shim, differential bearing cap .010.....	6	6	1-	A-39
T-9364	Oil seal differential bearing cap.....	2	2	1-	A-39
T-9365	Case transmission.....	1	1	-1600	B-45
T-9366	Dowel pin, rear cover to transmission case.....	2	2	1-	A-39
T-9368	Cover transmission case, rear (less rear section of power take-off).....	1	1	1-	A-39
T-9369	Gasket, transmission case, rear cover standard and live power take-off.....	1	1	1-	B-44
T-9370	Plug, transmission case drain.....	1	1	1-	B-45
T-9371	Tower transmission gear shift.....	1	1	1-	B-45
T-9372	Gasket, tower to case.....	1	1	1-	B-45
T-9373	Boot, gear shift lever.....	1	1	1-	B-45
T-9374	Gear shift lever.....	1	1	1-	B-45
T-9375	Knob, gear shift lever.....	1	1	1-	B-45
T-9376	Pin, gear shift lever.....	1	1	1-	B-45

Repair Parts List for Cockshutt "30" Tractor

Page 45

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-9377	Washer, gear shift lever thrust.....	1	1	1-	B-45
T-9378	Snap ring, lever thrust washer.....	1	1	1-	B-45
T-9379	Plate, transmission shift interlock.....	1	1	1-	B-45
T-9380	Pin, transmission shift interlock.....	2	2	1-	B-45
T-9381	Washer, transmission shift.....	2	2	1-	B-45
T-9382	Spring, transmission shift.....	2	2	1-	B-45
T-9383	Lockwasher in transmission shift.....	2	2	1-	B-45
T-9384	Shaft (1st and 2nd) in transmission shift.....	1	1	1-	B-45
T-9385	Shaft (3rd and 4th) in transmission shift.....	1	1	1-	B-45
T-9386	Shaft (reverse) in transmission.....	1	1	1-	B-45
T-9387	Pin, lock, in transmission shift.....	3	3	1-	B-45
T-9388	Fork (1st and 2nd) in transmission shift.....	1	1	1-	B-45
T-9389	Fork (3rd and 4th) in transmission shift.....	1	1	1-	B-45
T-9390	Fork (reverse) in transmission shift.....	1	1	1-	B-45
T-9391	Spring fork, lock in transmission shift.....	3	3	1-	B-45
T-9392	Ball—3 required transmission for lock, 1 required gear shift fork lock standard power take-off.....	4	4	1-	B-45
T-9393	Plug, shift shaft hole transmission shaft.....	3	3	1-	B-45
T-9394	Brake drum.....	2	2	-1600	A-39
T-9395	Nut, brake drum.....	2	2	1-	A-39
T-9396	Washer, brake drum nut.....	2	2	1-	A-39
T-9397	Lockwasher, brake drum nut.....	2	2	1-	A-39
T-9399	Pin, brake band hinge.....	2	2	1-	A-39
T-9400	End brake adjusting.....	2	2	1-	A-39
T-9401	Nut, brake band adjusting.....	2	2	1-	A-39
T-9402	Rivet, adjusting end to brake band.....	6	6	1-	A-39
T-9403	Spring, brake band return.....	2	2	1-	A-39
T-9404	Lining, brake band.....	2	2	1-	A-39
T-9405	Lining, brake band.....	2	2	1-	A-39
T-9406	Rivet, brake lining.....	32	32	1-	A-39
T-9407	Toggle, brake band.....	2	2	1-	A-39
T-9408	Key, brake band toggle.....	2	2	1-	A-39
T-9409	Pin, brake band toggle.....	2	2	1-	A-39
T-9413	Bushing, brake shaft.....	2	2	1-	A-39
T-9414	Snap ring, brake shaft.....	2	2	1-	A-39
T-9415	Washer, brake shaft.....	2	2	1-	A-39
T-9416	Left hand brake cover.....	1	1	1-	A-39
T-9417	Right hand brake cover.....	1	1	1-	A-39
T-9418	Gasket brake cover to case.....	2	2	1-	A-39
T-9419	Brake, adjusting hole cover.....	2	2	1-	A-39
T-9420	Gear, transmission final drive.....	2	2	1-	A-39
T-9421	Shaft, transmission axle final drive.....	2	2	1-	B-39
T-9422	Nut, transmission inner axle final drive shaft.....	2	2	1-	B-39
T-9423	Lockwasher, transmission inner axle final drive shaft.....	2	2	1-	B-39
T-9424	Cup, transmission axle drive shaft bearing (Timken 382-A).....	4	4	1-	A-39
T-9425	Cone, transmission axle drive shaft bearing (Timken 387).....	4	4	1-	B-39
T-9426	Right hand housing end for final drive axle.....	1	1	1-	A-39
T-9427	Left hand housing end for final drive axle.....	1	1	1-	A-39
T-9428	Gasket final drive housing end to case.....	2	2	1-	A-39
T-9429	Stud, final drive housing end to case.....	14	14	1-	A-39
T-9430	Ring seal, axle drive shaft.....	2	2	1-	B-39
T-9431	Oil seal axle drive shaft.....	2	2	1-	B-39
T-9432	Washer, outer axle drive shaft.....	2	2	1-	B-39

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-9433	Nut, outer axle drive shaft.....	2	2	1-	B-39
T-9434	Slinger inside of flange hub.....	2	2	-2000	B-39
T-9435	Flange hub, axle drive shaft.....	2	2	1-	B-39
T-9436	Wheel stud ($\frac{3}{4}$ "-16x3 $\frac{1}{8}$ ").....	12	12	1-	B-39
T-9438	8-speed only, gear creeper drive sliding, 17-tooth.....	1	1	1-	A-45
T-9439	8-speed only, gear creeper driven, 22-tooth.....	1	1	1-	A-45
T-9440	8-speed only, fork creeper drive gear shift.....	1	1	1-	A-45
T-9441	8-speed only, screw fork lock on creeper gear.....	1	1	1-	A-45
T-9442	Lock wire—1 required on cap screw fork lock on live power take-off, 1 required on cap screw fork lock on creeper gear, 1 required on cap screw gear shift shaft creeper gear shaft lock.....	3	3	1-	A-45 B-44
T-9443	8-speed only, lever, creeper drive gear shift.....	1	1	1-	A-45
T-9444	8-speed only, spring, gear shift lever on creeper gear.....	1	1	1-	A-45
T-9445	8-speed only, gear creeper idler, 21- and 16-tooth.....	1	1	1-	A-45
T-9446	8-speed only, Hyatt bearing creeper idler gear.....	2	2	1-	A-45
T-9447	8-speed only, Hyatt bearing spacer creeper idler bearing.....	1	1	1-	A-45
T-9448	8-speed only, washer creeper idler gear thrust.....	1	1	1-	A-45
T-9449	8-speed only, shaft creeper idler gear.....	1	1	1-	A-45
T-9450	8-speed only, set screw creeper idler gear shaft lock.....	1	1	1-	A-45
T-9451	8-speed only, washer creeper idler gear.....	1	1	1-	A-45
T-9452	8-speed only, quadrant shift lever on creeper gear.....	1	1	1-	A-45
T-9453	8-speed only, felt for shift lever on creeper gear.....	1	1	1-	A-45
T-9454	Cap, front clutch shaft live power take-off.....	1	1	1-	A-44
T-9455	Oil seal, front drive gear clutch shaft on live power take-off.....	1	1	1-	A-44
T-9456	Carrier, clutch release on live power take-off (check TO-9597).....	1	1	1-	A-44
T-9457	Spider power take-off (check TO-9594).....	1	1	1-	A-44
T-9459	Pin drive spider plate on live power take-off.....	3	3	1-	A-44
T-9460	Snap ring—2 required on spider drive, 1 required on front drive gear bearing.....	3	3	1-	A-44
T-9461	Bearing front drive gear on live power take-off.....	1	1	1-	A-44
T-9462	Gear clutch shaft on front live power take-off drive (17-tooth).....	1	1	1-	A-44
T-9463	Bearing forward on live power take-off front drive shaft.....	1	1	1-	A-44
T-9464	Snap ring, front drive shaft bearing on live power take-off.....	1	1	1-	A-44
T-9465	Gear, front drive shaft on live power take-off.....	1	1	1-	A-44
T-9466	Front drive shaft on live power take-off shaft.....	1	1	1-	A-44
T-9467	Oil seal, front drive shaft intermediate on live power take-off.....	1	1	1-	A-44
T-9468	Bearing, front drive shaft rear on live power take-off.....	1	1	1-	A-44
T-9469	Oil deflector, front drive shaft bearing on live power take-off.....	1	1	1-	A-44
T-9470	Oil retainer on front drive shaft bearing of live power take-off.....	1	1	1-	A-44
T-9473	Front cover for drive shaft bearing on live power take-off.....	1	1	1-	A-44
T-9474	Front gasket for driven intermediate and shaft bearing cover on live power take-off.....	3	3	1-	A-44
T-9475	Ball bearing drive shaft, rear, on live power take-off (No. 43206).....	1	1	1-	A-44
T-9476	Rear live power take-off input gear.....	1	1	...	A-44
T-9477	Spider ring, front section live power take-off (check TO-9594).....	1	1	1-	A-44
T-9478	Snap ring, rear input gear on live power take-off.....	1	1	1-	A-44
T-9479	Shaft intermediate on live power take-off.....	1	1	1-	B-44
T-9480	Front ball bearing, intermediate shaft on live power take-off.....	1	1	1-	A-44
T-9481	Front cover for intermediate and driven shaft bearing on live power take-off.....	2	2	1-	A-44
T-9482	Gear, intermediate drive on live power take-off.....	1	1	1-	A-44
T-9483	Washer, intermediate driven gear on live power take-off.....	2	2	1-	B-44
T-9484	Gear, intermediate drive on live power take-off.....	1	1	1-	B-44
T-9485	Bushing, intermediate drive gear on live power take-off.....	1	1	1-	B-44
T-9486	Sleeve, intermediate drive gear on live power take-off.....	1	1	1-	B-44
T-9487	Rivet, intermediate drive gear on live power take-off.....	6	6	1-	B-44
T-9488	Plate clutch mounting on live power take-off.....	1	1	1-	B-44

Repair Parts List for Cockshutt "30" Tractor

Page 47

Part No.	DESCRIPTION	No. Req'd.		Serial	Plate
		Std.	RC		
T-9490	Bearing, intermediate rear shaft clutch live power take-off (check TO-9489) (Ball bearing No. 3205).....	1	1	1-	B-44
T-9491	Cap, rear bearing intermediate shaft for clutch on live power take-off (check TO-9489).....	1	1	1-	B-44
T-9492	Gasket, intermediate shaft rear bearing cap on clutch live power take-off (check TO-9489).....	1	1	1-	B-44
T-9493	Fork shift live power take-off.....	1	1	1-	B-44
T-9494	Screw in intermediate drive gear shift fork live power take-off.....	1	1	1-	B-44
T-9495	Washer, intermediate drive gear shift fork in rear section of live power take-off.....	1	1	1-	B-44
T-9496	Intermediate lever driven gear shift fork rear section of live power take-off.....	1	1	1-	B-44
T-9497	Intermediate retainer on drive gear shift shaft—1 required on rear section of live power take-off, 1 required on standard power take-off.....	2	2	1-	B-44
T-9498	Intermediate felt washer on drive gear shift shaft—1 required on rear section of live power take-off, 1 required on standard power take-off.....	2	2	1-	B-44
T-9499	Shaft driven rear section of live power take-off.....	1	1	1-	B-44
T-9500	Driven gear for rear section of live power take-off.....	1	1	1-	B-44
T-9501	Snap ring for driven gear rear section of live power take-off.....	1	1	1-	B-44
T-9502	Spacer driven gear rear section of live power take-off.....	1	1	1-	A-44
T-9503	Cup, driven shaft front bearing of live power take-off (Timken No. 15520).....	1	1	1-	A-44
T-9504	Cone, driven shaft front bearing for live power take-off (Timken No. 15578).....	1	1	1-	A-44
T-9505	Oil seal—1 required rear bearing on driven shaft live power take-off, 1 required rear standard power take-off.....	2	2	1-	B-44
T-9506	Cap, driven shaft rear bearing on live and standard power take-off.....	1	1	1-	B-44
T-9507	Gasket, driven shaft rear bearing cap on live and standard power take-off.....	2	2	1-	B-44
T-9508	Shim, driven shaft rear bearing cap .003 on live and standard power take-off.....	Var.	Var.	1-	B-44
T-9509	Shim, driven shaft rear bearing cap .005 on live and standard power take-off.....	Var.	Var.	1-	B-44
T-9510	Shim, driven shaft rear bearing cap .010 on live and standard power take-off.....	Var.	Var.	1-	B-44
T-9511	Shield, driven shaft live power take-off.....	1	1	1-	B-39
T-9512	Case for live power take-off.....	1	1	1-	B-44
T-9513	Gasket, live power take-off case to adapter.....	1	1	1-	B-44
T-9514	Dowel pins, live power take-off case to adapter.....	2	2	1-	A-44
T-9515	Adapter, intermediate case, live power take-off.....	1	1	1-	A-44
T-9516	Oil drain plug, live power take-off case.....	1	1	1-	A-44
T-9518	Bearing on standard power take-off drive.....	1	1	1-	B-44
T-9519	Snap ring, drive shaft bearing standard power take-off.....	1	1	1-	B-44
T-9520	Gear sliding drive (16- and 23-tooth) on standard power take-off.....	1	1	1-	B-44
T-9523	Fork drive gear shift on standard power take-off.....	1	1	1-	B-44
T-9524	Fork lock screw—1 required in shift fork on belt pulley drive, 1 required in shift fork standard power take-off.....	2	2	1-	A-41 B-44
T-9525	Spring, drive gear shift fork lock standard power take-off.....	1	1	1-	B-44
T-9527	Screw, drive gear shift fork lock standard power take-off.....	1	1	1-	B-44
T-9528	Lockwasher for shift fork lock screws standard power take-off.....	1	1	1-	B-44
T-9529	Cap, drive shaft bearing standard power take-off.....	1	1	1-	B-44
T-9530	Gasket, drive shaft bearing cap standard power take-off.....	1	1	1-	B-44
T-9531	Standard power take-off driven shaft.....	1	1	1-	B-44
T-9532	Low range driven gear, 45-tooth, standard power take-off gear.....	1	1	1-	B-44
T-9533	Spacer, low and high range driven gears, standard power take-off.....	1	1	1-	B-44
T-9534	Standard power take-off case.....	1	1	1-	B-44
T-9535	Shield, driven shaft on standard power take-off.....	1	1	1-	B-39
T-9536	Short inner drive spline shaft for pulley drive.....	1	1	1-	A-41
T-9537	Driven pinion on belt pulley drive.....	1	1	1-	A-41
T-9538	Cone for bearing on inner and outer shafts belt pulley drive.....	4	4	1-	A-41
T-9539	Sliding clutch collar on end of outer shaft.....	1	1	1-	A-41
T-9540	Long outer spline shaft for pulley drive.....	1	1	1-	A-41
T-9541	Shifter fork for sliding clutch on pulley drive.....	1	1	1-	A-41

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
T-9542	Shifter fork lock lever on belt pulley drive.....	1	1	1-	A-41
T-9543	Quadrant shift lever on belt pulley drive.....	1	1	1-	A-41
T-9544	Shim, bearing spacer .121 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9545	Shim, bearing spacer .126 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9546	Shim, bearing spacer .131 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9547	Shim, bearing spacer .136 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9548	Shim, bearing spacer .141 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9549	Shim, bearing spacer .146 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9550	Shim, bearing spacer .151 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9551	Shim, bearing spacer .156 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9552	Shim, bearing spacer .161 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9553	Shim, bearing spacer .166 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9554	Oil seal, pulley shaft bearing outer on belt pulley drive.....	1	1	1-	A-41
T-9555	Nut, outer end on belt pulley shaft.....	1	1	1-	A-41
T-9556	Lockwasher on belt pulley shaft nut.....	1	1	1-	A-41
T-9557	Outer housing carrier on belt pulley drive.....	1	1	1-	A-41
T-9558	Gasket between inner to outer housing carrier.....	1	1	1-	A-41
T-9559	Carrier belt, pulley housing, inner.....	1	1	1-	A-41
T-9560	Shim between inner carrier housing to case .003 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9561	Shim between inner carrier housing to case .010 on belt pulley drive.....	Var.	Var.	1-	A-41
T-9562	Stud from carrier housing to case on belt pulley drive.....	4	4	1-	A-41
T-9569	Bracket, pulley shift lever.....	1	1	1-	A-41
T-9573	Pressure plate, live power take-off clutch (check TO-9598).....	1	1	1-	B-44
T-9574	Pressure spring, live power take-off clutch (check TO-9598).....	9	9	1-	B-44
T-9575	Pressure spring cup, live power take-off clutch.....	9	9	1-	B-44
T-9576	Washer—9 required pressure spring cup, 3 required return spring live power take-off clutch (check TO-9598).....	12	12	1-	B-44
T-9577	Spacer block, bracket to pressure plate, live power take-off clutch (check TO-9598).....	3	3	1-	B-44
T-9578	Return spring, bracket spacer to pressure plate, live power take-off clutch (check TO-9598).....	3	3	1-	B-44
T-9579	Link, release sleeve to bracket, live power take off clutch (check TO-9598).....	6	6	1-	B-44
T-9580	Pin, through link release sleeve, live power take-off clutch (check TO-9598).....	6	6	1-	B-44
T-9581	Lever, release sleeve to bracket, live power take-off clutch (check TO-9598).....	3	3	1-	B-44
T-9582	Pin, through roller in release sleeve, live power take-off clutch (check TO-9598).....	3	3	1-	B-44
T-9583	Roller in release sleeve link, live power take-off clutch (check TO-9598).....	3	3	1-	B-44
T-9584	Hub, for facing disc, live power take-off clutch.....	1	1	1-	B-44
T-9585	Plate for clutch and disc assembly, live power take-off clutch.....	1	1	1-	B-44
T-9593	Clutch facing on live power take-off.....	2	2	1-	B-44
T-9595	Rivet, spider ring, front section live power take-off (check TO-9594).....	3	3	1-	A-44
T-9596	Washer, spider ring, front section live power take-off (check TO-9594).....	3	3	1-	A-44
T-9640	Clevis on clutch rod.....	1	1	-10,000	B-38
T-9641	Clevis pin in clutch rod, $\frac{3}{16}$ " x $1\frac{1}{2}$ ".....	1	1	-10,000	B-38
T-9645	Flange hub, axle drive shaft.....	2	2	2001-	
T-9647	Slinger inside of flange hub.....	2	2	2001-	
T-9669	Case, transmission.....	1	1	1600-	
T-9672	Key in pulley drive gear (for plate number, see 607 in A-41).....	1	1	1-	
T-9673	Key for input gear live power take-off (for plate number, see 807 in A-44).....	1	1	1-	
T-9674	Key driven gear to pinion shaft in transmission and in low and high range driven gears (for plate number, see 1014 in B-44 and B-45).....	3	3	1-	
T-9675	Key pulley shaft, outer (for plate number, see No. 808 in A-41).....	1	1	1-	
T-9676	Reverse gear shaft (see T-9327 for plate number).....	1	1	1-	
T-9677	Plug, in tower.....	1	1	1-	
T-9679	Bushing differential pinion.....	2	2	1-	
TO-2000	Standard tractor assembly.....	1			
TO-2500	Row crop tractor assembly.....		1		

Repair Parts List for Cockshutt "30" Tractor

Page 49

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
TO-5000	Engine assembly—one TO-5219 governor, one TO-5348 oil pump, one TO-5262 water pump, one TO-5380 thermostat.....	1	1	1-	A-43
TO-5009	Fan blade assembly.....	1	1	1-	B-41
TO-5011	Oil filter assembly—one TO-5046, one TO-5055W.....	1	1	1-	B-38
TO-5021	Oil gauge assembly.....	1	1	2001-	B-39
TO-5023	Link, governor arm to throttle.....	1	1	1-	B-41
TO-5030	Oil line, gauge assembly.....	1	1	-2000	B-39
TO-5032	Oil line to oil filter assembly.....	1	1	1-	A-38
TO-5033	Oil line, return to crankcase assembly.....	1	1	1-	A-38
TO-5034	Oil line to gauge assembly.....	1	1	2001-	B-39
TO-5040	Piston replacement kit—one T-5280, one T-5281, two T-5282, three T-5283, one T-5284, one T-5255, two T-5256.....	1	1	1-	B-40
TO-5046	Cover for oil filter assembly—one T-5047, one 5048, one T-5049, one T-5050 (check TO-5046).....	1	1	1-	B-38
TO-5055W	Oil filter shell assembly.....	1	1	1-	B-38
TO-5061	Engine clutch assembly (Borg and Beck No. 901).....	1	1	1-	A-44
TO-5062	Engine clutch cover and stud (check TO-5061).....	1	1	1-	A-44
TO-5064	Engine clutch eye bolt and nut assembly (check TO-5061).....	3	3	1-	A-44
TO-5070	Engine driven clutch plate, hub, facing—one TO-5071 (check TO-5061).....	1	1	1-	A-44
TO-5071	Engine clutch, facing package containing 2 facings and 12 rivets (check TO-5070).....	1	1	1-	A-44
TO-5153W	Exhaust tube.....	1	1	1-	B-41
TO-5154	Starting crank assembly—one T-5155, one T-5156.....	1	1	1-	B-41
TO-5160	Hose, clamp assembly, size 1 7/8".....	8	8	1-	B-41
TO-5161	Engine clutch (Borg and Beck type 9-A-7)—one T-5063, one T-5065, one T-5066, one T-5067, one T-5068, one T-5069, one T-5071, one TO-5062, one TO-5064, one TO-5070.....	1	1	1-	A-44
TO-5164W	Hand lever for governor control.....	1	1	1-	A-41
TO-5176	Muffler assembly—one TO-7530, one T-5171.....	1	1	1-	B-37
TO-5189W	Front control bracket for governor.....	1	1	1-	A-38
TO-5210	Gear cover assembly—one T-5211, one T-5212.....	1	1	1-	A-43
TO-5213	Hydraulic pump adapter assembly—one T-5214, one T-5215, one T-5216, one T-5217, one T-5243, one T-5376.....	1	1	1-	A-43
TO-5219	Governor assembly.....	1	1	1-	A-43
TO-5220	Governor drive shaft and gear assembly—one T-5221, one T-5222 (check TO-5219).....	1	1	1-	A-43
TO-5225	Governor weights and shaft—one T-5226, one T-5227, one T-5228, one T-5229 (check TO-5219).....	1	1	1-	A-43
TO-5232	Governor body—one T-5234, one T-5233, one T-5396, one T-5236, one T-5237, one T-5238, one T-5239, one T-5240, one T-5241, one T-5243, one T-5242.....	1	1	1-	A-43
TO-5254	Cylinder block and crankcase assembly—one T-5209, four T-5255, eight T-5256, ten T-5257, four T-5258, one T-5259, two T-5260, one T-5261, one T-5262, one T-5263, one T-5264, six T-5265, six T-5266, one T-5267, one T-5268, one T-5269, two T-5270, two T-5271, one T-5272, one T-5273.....	1	1	1-	A-42
TO-5285	Connecting rod assembly—two T-5286, one T-5287, two T-5288, two 3/32"x3/4" cotter pins, two 5/8"-24 nuts, and one connecting rod. (Connecting rod is not sold separate).....	4	4	1-	B-42
TO-5297	Flywheel housing plate assembly—one T-5289, one T-5290, one T-5298, one T-5299 (sold only as a unit).....	1	1	1-	B-42
TO-5303	Valve lubricating oil line (sold only as a unit).....	1	1	1-	A-42
TO-5306	Cylinder head assembly—one T-5307, one T-5308, eight T-5309, eight T-5310, eight T-5311, eight pair T-5312, eight T-5313, four T-5314, four T-5315, two T-5316, one T-5317.....	1	1	1-	A-42
TO-5327	Engine push rod valve assembly.....	1	1	1-	B-42
TO-5329	Rocker arm sub assembly offset to front.....	4	4	1-	B-42
TO-5336	Rocker arm sub assembly offset to rear.....	4	4	1-	B-42

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
TO-5338	Rocker arm shaft assembly—two T-5339.....	1	1	1-	B-42
TO-5348	Oil pump assembly.....	1	1	1-	A-42
TO-5362	Water pump assembly.....	1	1	1-	A-43
TO-5375	Water pump integral shaft and bearing (sold only as a unit).....	1	1	1-	A-43
TO-5401	Hydraulic attachment cover parts assembly—one T-5397, one T-5398.....	1	1	1-	A-38
TO-5402	Adapter ring washers assembly.....	1	1	1-	A-44
TO-7003W	Gas tank.....	1	1	1-	A-41
TO-7013	Carburetor (Marvel Schebler 10-2992 Model TXS-264).....	1	1	1-	B-37
TO-7015	Hose clamp for air cleaner outlet hose (2½" dia.).....	2	2	1-	B-41
TO-7018	Sediment bowl assembly.....	1	1	1-	A-37
TO-7022	Gas line.....	1	1	1-	A-41
TO-7029	Air cleaner assembly, with cap (Donaldson Model A-5451)— one TO-7031.....	1	1	1-	A-38
TO-7031W	Air cleaner body assembly (check TO-7029).....	1	1	1-	A-38
TO-7033	Clamp assembly, oil cup to body on air cleaner.....	1	1	1-	A-38
TO-7068	Float valve seat and gasket on carburetor.....	1	1	1-	B-37
TO-7070	Throttle shaft, stop and lever on carburetor.....	1	1	1-	B-37
TO-7071	High speed needle on carburetor.....	1	1	1-	B-37
TO-7072	Ratchet adjusting spring for high speed needle on carburetor.....	1	1	1-	B-37
TO-7073	Carburetor throttle body.....	1	1	1-	B-37
TO-7074	Float in carburetor.....	1	1	1-	B-37
TO-7075	Butterfly for choke shaft on carburetor.....	1	1	1-	B-37
TO-7076	Choke shaft and lever on carburetor.....	1	1	1-	B-37
TO-7077	Main nozzle in carburetor bowl.....	1	1	1-	B-37
TO-7078	Carburetor bowl.....	1	1	1-	B-37
TO-7079	Gasket repair kit for carburetor—one T-7048, one T-7057, one T-7059, one T-7069. If complete repair kit is required, check TO-7080.....	1	1	1-	B-37
TO-7080	Package repair kit for carburetor—one T-7042, one T-7043, one T-7044, one T-7049, one T-7050, one T-7053, one T-7054, one T-7055, one T-7058, one T-7060, two T-7061, one T-7062, one T-7063, one T-7064, one TO-7068, one TO-7070, one TO-7071, one TO-7077, one TO-7079.....	1	1	1-	B-37
TO-7088	Bale nut, stud and washer assembly, sediment bowl.....	1	1	1-	A-37
TO-7501	Battery box assembly.....	1	1	1-	A-39
TO-7502W	Battery box base assembly (check TO-7501).....	1	1	1-	A-39
TO-7506W	Battery box top assembly (check TO-7501).....	1	1	1-	A-39
TO-7514	Head and tail lights—one T-7574, one T-7575, one T-7576, one T-7577, one TO-7553, one No. 8-32 x 5/8" button head screw, two No. 8-12 x 5/16" screw (check TO-7563).....	3	3	1-	B-40
TO-7521	Generator assembly (Auto-Lite No. EO-8657).....	1	1	1-	A-37
TO-7522	Distributor assembly (Auto-Lite No. EO-8641).....	1	1	1-	A-38
TO-7523	Coil assembly (Auto-Lite No. IG-4070, 6-volt).....	1	1	1-	A-38
TO-7524	Head light switch.....	1	1	1-	B-39
TO-7528	No. 2 and 3 spark plug wire (sold only as a complete unit).....	2	2	1-	A-38
TO-7529	No. 1 and 4 spark plug wire (sold only as a complete unit).....	2	2	1-	A-38
TO-7530	Muffler (check TO-5176).....	1	1	1-	B-37
TO-7531	High tension wire coil to distributor (TOP) (sold only as a complete unit).....	1	1	1-	A-38
TO-7540	Assembled wire from ammeter to switch.....	1	1	1-	B-39
TO-7541	Wire from coil to distributor (side).....	1	1	1-	A-38
TO-7543	Wire ammeter to ignition coil.....	1	1	1-	A-38
TO-7544	Right and left hand head light wires.....	1	1	1-	A-37
TO-7546	Dash lamp assembly.....	1	1	1-	B-39
TO-7549	Starting motor assembly No. MAX-4081.....	1	1	1-	B-38
TO-7553	Shell and reflector light assembly.....	3	3	1-	B-40
TO-7569	Ignition harness assembly (sold only as a unit).....	1	1	1-	B-39
TO-7572	Wire, tail light to switch.....	1	1	1-	A-40
TO-7590	Armature assembly on generator (check TO-7521).....	1	1	1-	A-37

Repair Parts List for Cockshutt "30" Tractor

Page 51

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
TO-7603	Frame and field assembly on generator (check TO-7521).....	1	1	1-	A-37
TO-7611	Coil assembly field complete for generator (sold only as a unit).....	1	1	1-	A-37
TO-7614	Relay cut-out on generator.....	1	1	1-	A-37
TO-7617	Head assembly commutator on generator.....	1	1	1-	A-37
TO-7626	Brush set two main brushes, one third brush (sold only as a unit).....	1	1	1-	A-37
TO-7628	Plate, spring and arm, third brush assembly (sold only as a unit).....	1	1	1-	A-37
TO-7631	Head assembly, partial commutator end for generator.....	1	1	1-	A-37
TO-7634	Head assembly, commutator end for starter (check TO-7549).....	1	1	1-	B-38
TO-7639	Armature assembly for starter (check TO-7549).....	1	1	1-	B-38
TO-7643	Frame and field assembly on starter.....	1	1	1-	B-38
TO-7652	Brush set on starter two field coil brushes, two ground brushes (sold only as a unit).....	1	1	1-	B-38
TO-7653	Coil and terminal stud assembly on starter (check TO-7643).....	1	1	1-	B-38
TO-7662	Thrust spacer and intermediate bearing assembly on starter (check TO-7549).....	1	1	1-	B-38
TO-7664	Housing assembly pinion end to starter (check TO-7549).....	1	1	1-	B-38
TO-7666	Bendix drive assembly on starter—one T-7667, one T-7668, one T-7669, two T-7670, one T-7671 (check TO-7549).....	1	1	1-	B-38
TO-7677	Switch assembly on starter (check TO-7549).....	1	1	1-	B-38
TO-7678	Holder, spring and arm assemblies grounded main brush for distributor (sold only as a unit).....	2	2	1-	A-37
TO-7693	Arm assembly advance (check TO-7522).....	1	1	1-	A-38
TO-7694	Cap assembly on distributor (check TO-7522).....	1	1	1-	A-38
TO-7695	Plate assembly seal on distributor (check TO-7522).....	1	1	1-	A-38
TO-7696	Plate assembly breaker on distributor (check TO-7522).....	1	1	1-	A-38
TO-7700	Contact set assembly breaker on distributor.....	1	1	1-	A-38
TO-7701	Shaft and governor assembly on distributor (check TO-7522).....	1	1	1-	A-38
TO-7704	Spring set governor weight on distributor.....	1	1	1-	A-38
TO-7707	Base assembly on distributor (check TO-7522).....	1	1	1-	A-38
TO-8503W	Rear upright gas tank support.....	1	1	1-	B-38
TO-8506W	Gas tank channel support and gusset assembly.....	1	1	1-	B-38
TO-8509W	Instrument panel assembly.....	1	1	1-	B-39
TO-8524	Steering gear assembly—one TO-8526, one TO-8563, one TO-8564.....	1	1	1-	B-40
TO-8526	Steering gear housing assembly—one T-8527, one T-8529, (check TO-8524).....	1	1	1-	B-40
TO-8530	Adjusting pad assembly for lever shaft.....	1	1	1-	B-40
TO-8535	Lever shaft assembly (with 4 studs .043544).....	1	1	1-	B-40
TO-8560	Heat gauge, tube, clamp and nut assembly.....	1	1	1-	B-39
TO-8563	Cam and shaft in steering gear (check TO-8524).....	1	1	1-	B-40
TO-8564	Housing end cover all seal unit and steering gear—one T-8545, one T-8546, one T-8547, one T-8548, one T-8549, one No. 10-24 x 3/4" screw.....	1	1	1-	B-40
TO-8727W	Removable grill top over motor.....	1	1	1-	B-37
TO-8728	Right hand front grill and screw assembly—one T-8758W, two T-8711, two 1/8" x 1/2" wagon box head rivets.....	1	1	1-	B-37
TO-8729	Left hand front grill and screw assembly—one T-8757W, two T-8711, two 1/8" x 1/2" wagon box head rivets.....	1	1	1-	B-37
TO-8732W	Front hood assembly.....	2	2	1-	B-37
TO-8735	Radiator assembly.....	1	1	1-	B-41
TO-8756W	Grill reinforced bracket and nut, carriage assembly.....	1	1	1-	B-41
TO-8757W	Left hand grill assembly (check TO-8729).....	1	1	1-	B-37
TO-8758W	Right hand grill assembly (check TO-8728).....	1	1	1-	B-37
TO-8811W	Spindle and post assembly.....	2		1-	B-41
TO-8813W	Steering gear spline and pitman assembly.....	1		1-	B-41
TO-8815W	Radius rod assembly.....	2		1-	B-41
TO-8845	Front tire and tube assembly (Goodyear)—one FX-S49, one T-8855, one T-8856.....	2	2	1-	B-37
TO-8848	Tie rod tube assembly—one T-8867, two 8868, two 5/16"-24 x 1 1/2" bolt, two 5/16"-24 hexagon nut, two 3/16" lockwashers.....	2		1-	B-41

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
TO-8858	Front tire and tube assembly (Crest)—one FX-S49, one T-8861, one T-8862.....	2	2	1-	B-37
TO-8859	Pedestal and bushing assembly— one T-8816, one T-8846.....	1		1-	A-38
TO-8860	Front axle and bushing assembly— one T-8802, one T-8826.....	1		1-	B-41
TO-8866	Tie rod, complete with cotter pins—one TO-8869, one TO-8870, one TO-8848, two $\frac{3}{8}$ " x 1" cotter pins.....	2		1-	B-41
TO-8869	Left hand steering socket, including $\frac{1}{2}$ " slotted nut.....	2		1-	A-41
TO-8870	Right hand steering socket, including $\frac{1}{2}$ " slotted nut.....	2		1-	A-41
TO-9000W	Hitch frame assembly.....	1	1	1-	A-39
TO-9101	Socket hub, wrench, rear wheels, handle and cotter pin.....	1	1	1-	B-37
TO-9107	Tool box assembly.....	1	1	1-	A-39
TO-9221	Rims and clamp for rear wheels.....	2	2	-2000	B-38
TO-9228W	Brake pedal, carrier assembly.....	1	1	1-	A-37
TO-9235W	Clutch release shaft and arm assembly.....	1	1	3000-	A-44
TO-9240W	Brake, lock assembly arm and pin.....	1	1	1-	A-39
TO-9244W	Brake, cross shaft and lever.....	1	1	1-	A-37
TO-9250W	Right hand floor board assembly.....	1	1	1-	B-39
TO-9254W	Fender assembly. (When ordering, be sure to order TO-9268 to complete fenders).....	2	2	1-	B-39
TO-9259W	Left hand floor board assembly.....	1	1	1-	A-39
TO-9266	Rear tire and tube assembly (Goodyear).....	2	2	1-	A-39
TO-9268	Bag of cap screws for fender assembly. (When ordering, be sure to order TO-9254W).....	1	1	1-	A-39
TO-9282	Wheel weights assembly. (This includes one wheel weight per wheel and bolts).....	2	2	-2000	B-39
TO-9283	Wheel weights assembly. (This includes two wheel weights per wheel and bolts).....	2	2	-2000	B-39
TO-9286	Rear tire and tube assembly (Crest).....	2	2	1-	A-37
TO-9398	Brake band and lining assembly.....	2	2	1-	A-39
TO-9489	Clutch for live power take-off—one TO-9598, one T-9318, one T-9490, one T-9491, one T-9492, six $\frac{5}{16}$ "-18 x $1\frac{1}{8}$ " cap screws, six $\frac{5}{16}$ " lockwashers.....	1	1	1-	A-44
TO-9564W	Right hand shaft and lever assembly on brake.....	1	1	1-	A-39
TO-9565W	Left hand shaft and lever assembly on brake.....	1	1	1-	A-39
TO-9566W	Rear shaft and collar assembly on live power take-off.....	1	1	1-	A-44
TO-9567W	Shaft and collar assembly on standard power take-off.....	1	1	1-	B-44
TO-9568W	Shaft and lever assembly on standard power take-off.....	1	1	1-	B-44
TO-9572W	Pulley shifter lever assembly.....	1	1	1-	A-41
TO-9586	Release sleeve and yoke assembly for live power take-off clutch (sold only as a unit).....	1	1	1-	B-44
TO-9590	Release sleeve assembly, live power take-off clutch (sold only as a unit).....	1	1	1-	B-44
TO-9591	Bracket and spacer assembly, live power take-off clutch (sold only as a unit).....	1	1	1-	B-44
TO-9592	Pressure ring assembly, live power take-off (sold only as a unit).....	1	1	1-	B-44
TO-9594	Spider and ring assembly on live power take-off—one T-9457, one T-9477, one T-9595, one T-9596.....	1	1	1-	A-44
TO-9597	Carrier clutch release and bearing assembly on live power take-off—one T-9456, one T-9203.....	1	1	1-	A-44
TO-9598	Clutch assembly, less hub, facing and plate, live power take-off—one T-9573, nine T-9574, nine T-9575, twelve T-9576, three T-9577, three T-9578, six T-9579, six T-9580, six T-9581, three T-9582, three T-9583, one T-9584, three $\frac{1}{4}$ "-28 x $\frac{3}{4}$ " cap screws, six $\frac{3}{32}$ " x $\frac{1}{2}$ " cotter pins, three $\frac{1}{4}$ " lockwashers (check TO-9489).....	1	1	1-	B-44
TO-9600	4-speed transmission (no power take-off).....	1	1	-1600	B-45
TO-9601	8-speed transmission (no power take-off).....	1	1	-1600	B-45
TO-9602	4-speed transmission with front and rear section live power take-off.....	1	1	-1600	B-45
TO-9603	8-speed transmission with front and rear section live power take-off.....	1	1	-1600	B-45
TO-9604	4-speed transmission with front section live power take-off.....	1	1	-1600	B-45
TO-9605	8-speed transmission (equipped for live power take-off).....	1	1	-1600	B-45
TO-9606	4-speed transmission (with standard 2-speed power take-off).....	1	1	1-	B-45
TO-9607	8-speed transmission (with standard 2-speed power take-off).....	1	1	1-	B-45
TO-9613	4-speed transmission (no power take-off).....	1	1	1601-	B-45

Part No.	DESCRIPTION	No. Req'd.		Serial No.	Plate No.
		Std.	RC		
TO-9614	8-speed transmission (no power take-off).....	1	1	1601-	B-45
TO-9615	4-speed transmission (with front section of live power take-off).....	1	1	1601-	B-45
TO-9616	8-speed transmission (with front section of live power take-off).....	1	1	1601-	B-45
TO-9617	4-speed transmission (with front and rear section of live power take-off).....	1	1	1601-	B-45
TO-9618	8-speed transmission (with front and rear section of live power take-off).....	1	1	1601-	B-45
TO-9619	Lining and rivet kit for brake band (for repair only).....	1	1	1-	
TO-9638W	Clutch release shaft and lever.....	1	1	-3000	A-44
TO-9649	Wheel weights assembly (this includes one weight per wheel and four bolts $\frac{3}{4}$ " - 16 x $2\frac{1}{2}$ ", with nuts and washers).....	1	1	2001-	B-39
TO-9650	Wheel weights assembly (this includes two weights per wheel and four bolts $\frac{3}{4}$ " - 16 x $4\frac{1}{4}$ ", with nuts and washers).....	1	1	2001-	B-39
TO-9651W	Brake drum assembly.....	1	1	1600-	A-39

OPTIONAL EQUIPMENT

TO-5176	Muffler assembly— one T-7530, one T-5171.....	1	1	1-	B-37
TO-7563	Head, tail and dash light bundle.....	1	1	1-	B-40
TO-8845	Front tire and tube assembly (Goodyear)—1 FX-S49, 1 T-8855, 1 T-8856.....	2	2	1-	B-37
TO-8858	Front tire and tube assembly (Crest)—1 FX-S49, 1 T-8861, 1 T-8862.....	2	2	1-	B-37
TO-9211	Belt pulley.....	1	1	1-	A-41
TO-9254W	Fender assembly (when ordering, be sure to order TO-9268, bag of cap screws for fenders).....	2	2	1-	B-39
TO-9266	Rear tire and tube assembly (Goodyear).....	2	2	1-	A-37
TO-9268	Bag of cap screws for fender assembly (when ordering, be sure to order TO-9254W).....	1	1	1-	B-39
TO-9282	Wheel weight assembly (this includes only one weight per wheel with bolts).....	2	2	-2000	B-39
TO-9283	Wheel weight assembly (this includes two weights per wheel with bolts).....	2	2	-2000	B-39
TO-9286	Rear tire and tube assembly (Crest).....	2	2	1-	A-37
TO-9608	Creeper gear kit, to make 4-speed transmission into 8-speed transmission.....	1	1	1-	A-45
TO-9609	Rear section live power take-off assembly.....	1	1	1-	B-44
TO-9610	Standard 2-speed power take-off.....	1	1	1-	B-44
TO-9611	Belt pulley drive assembly (with DE clutch).....	1	1	1-	A-41
TO-9649	Wheel weights assembly (this includes one weight per wheel and four bolts, $\frac{3}{4}$ " - 16 x $2\frac{1}{2}$ ", with nuts and washers).....	1	1	2001-	B-39
TO-9650	Wheel weights assembly (this includes two weights per wheel and four bolts, $\frac{3}{4}$ " - 16 x $4\frac{1}{4}$ ", with nuts and washers).....	1	1	2001-	B-39

**Always insist on genuine Cockshutt repair
parts: For better fit and greater durability.**

