


FUEL SYSTEM

ALPHABETICAL INDEX


DESCRIPTION	PAGE
Feed Pump (without cab)	3-29
Feed Pump (with cab)	3-31
Feed Pump Assembly	3-33
Filter Assembly	3-33
Filters and Tubes (without cab)	3-29
Filters and Tubes (with cab)	3-31
Engine Stop Control	3-41
Engine Throttle Controls (without cab)	3-35
Engine Throttle Hand Control (with cab)	3-37
Engine Throttle Foot Control (with cab)	3-39
Injector Assembly	3-27
Injectors and Tubes	3-25
Injection Pump	3-25
Tank and Supports (without cab)	3-43
Tank and Supports (with cab)	3-45
Thermostart (without cab)	3-29
Thermostart (with cab)	3-29

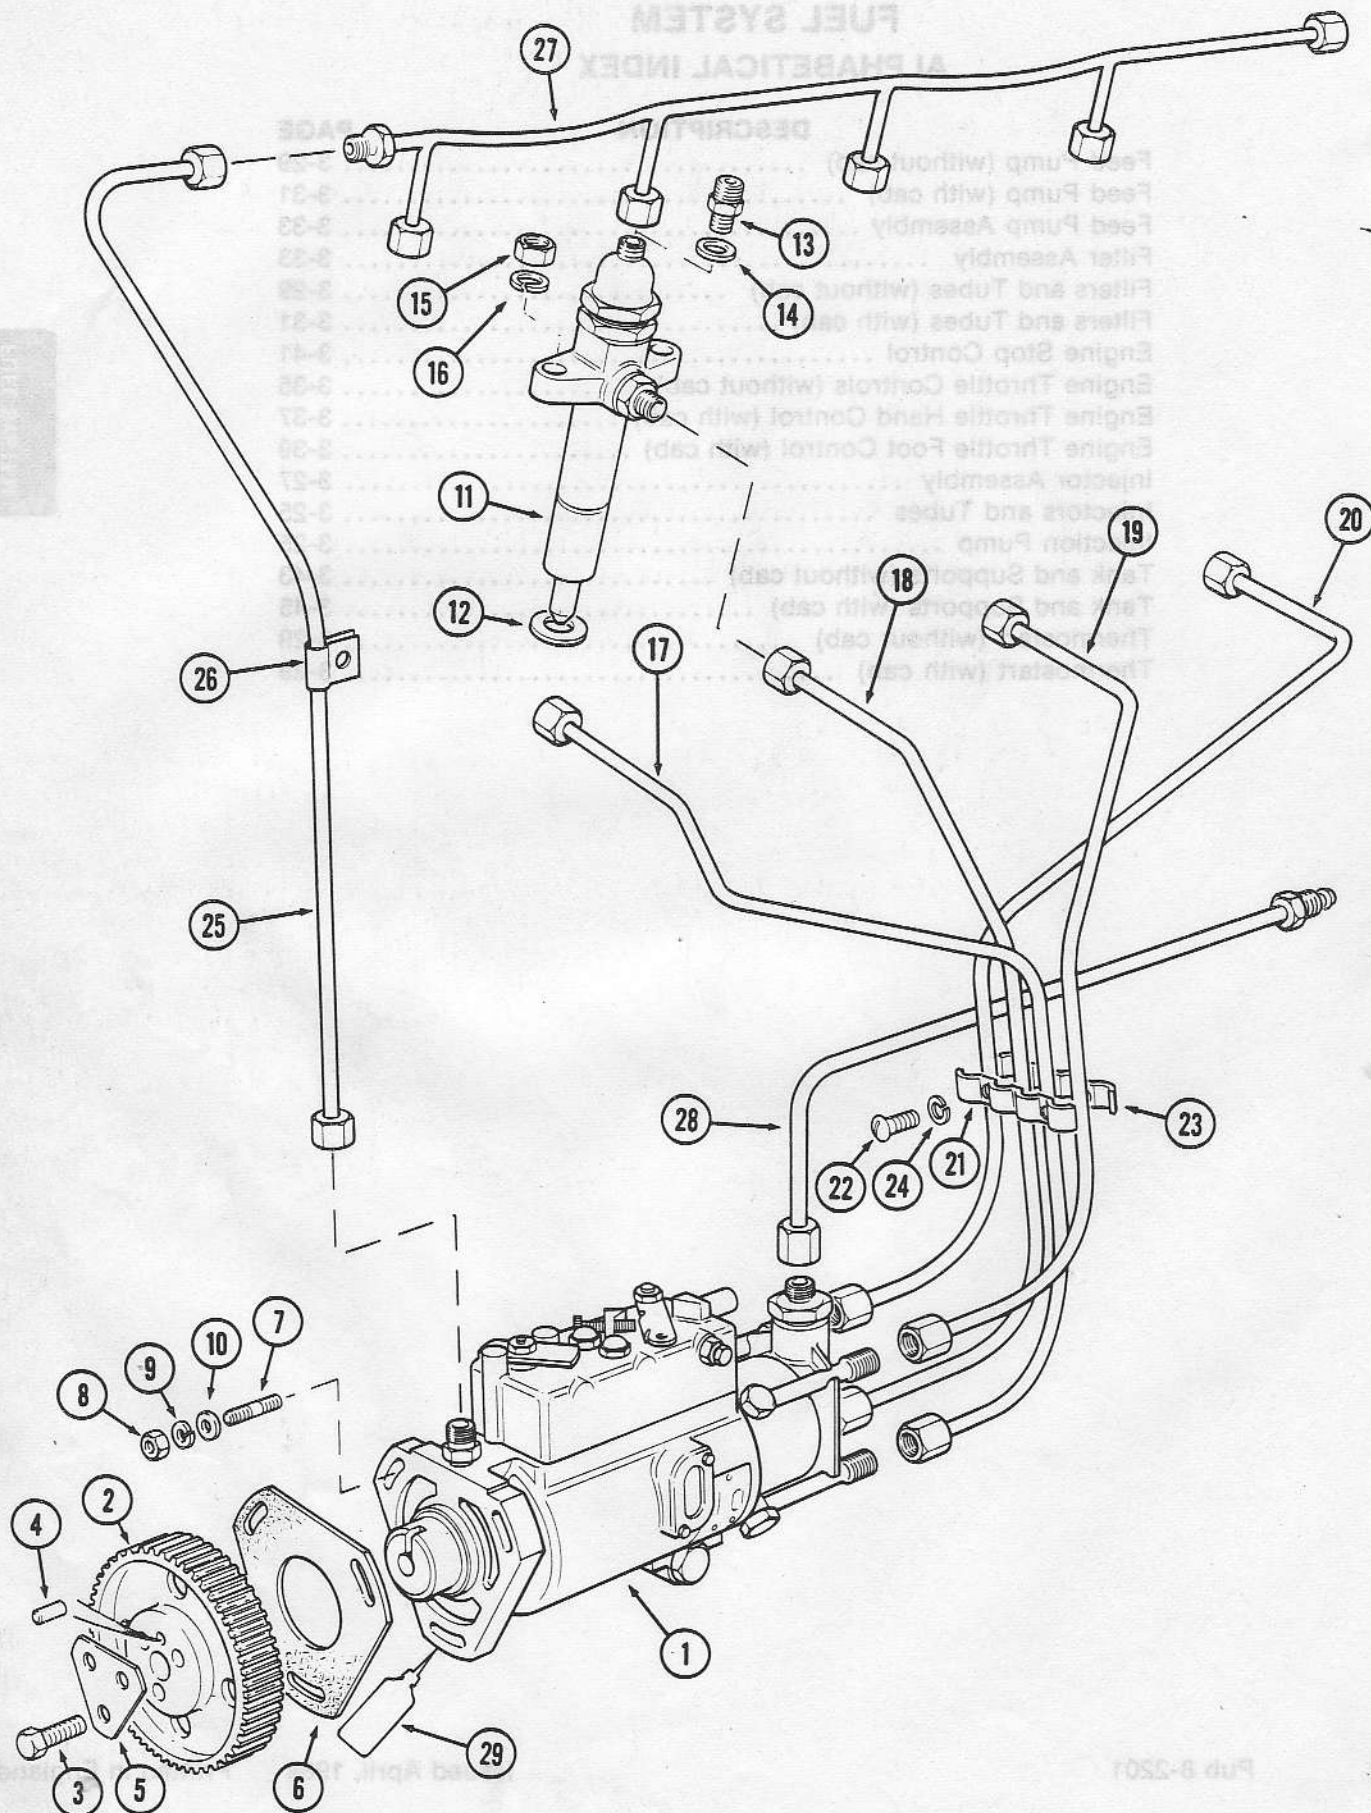

INJECTION PUMP, INJECTORS AND TUBES


Ref.	Part No.	Description	Required
1	K 957463	INJECTION PUMP - fuel (CAV DPA3343F240)	1
2	K 949822	GEAR - pump drive, 68 teeth	1
3	K 612804	BOLT - 5/8 UNF x 7/8 inch	3
4	K 14577	DOWEL - 1/4 x 9/16 inch	1
5	K 914503	WASHER - tab, gear	1
6	K 68349	GASKET - pump mounting	1
7	K 608135	STUD - 5/16 UNC x 1-1/4 inch	3
8	K 607001	NUT - 5/16 inch UNC	3
9	K 19481	WASHER - lock, 5/16 inch	3
10	K 19471	WASHER - 5/16 inch (8 mm)	3
11	K 955242	INJECTOR ASSEMBLY - fuel (See Page 3-27)	4
	K 955243	HOLDER - injector	1
	K 954027	NOZZLE - CAV, injector	1
12	K 901092	WASHER - injector (Copper)	1
13	K 620460	ADAPTER - M8 - 1/8 inch BSP, injector leak-off	4
14	K 36374	WASHER - copper, 8 mm	4
15	K 607044	NUT - 5/16 inch UNC	8
16	K 19481	WASHER - lock, 5/16 inch	8
17	K 918915	TUBE - fuel, injection pump to No. 1 cylinder	1
18	K 207322	TUBE - fuel, injection pump to No. 2 cylinder	1
19	K 954828	TUBE - fuel, injection pump to No. 3 cylinder	1
20	K 954829	TUBE - injection pump to No. 4 cylinder	1
21	K 900844	CLIP - injector tubes	1
22	K 624200	SCREW - 2BA x 1/2 inch	2
23	K 207929	CLIP - injector tubes	1
24	K 19488	WASHER - lock, 3/16 inch	2
25	K 203135	TUBE - leak-off, injector pump	1
26	K 621610	CLIP - tube to exhaust manifold stud	1
27	K 204248	TUBE - leak-off, injectors	1
28	K 918923	TUBE - fuel, filter to injection pump	1
29	REF	SILMATE RTV - gasket replacement (See your authorized Case Dealer)	UAR

INJECTION PUMP, INJECTORS AND TUBES

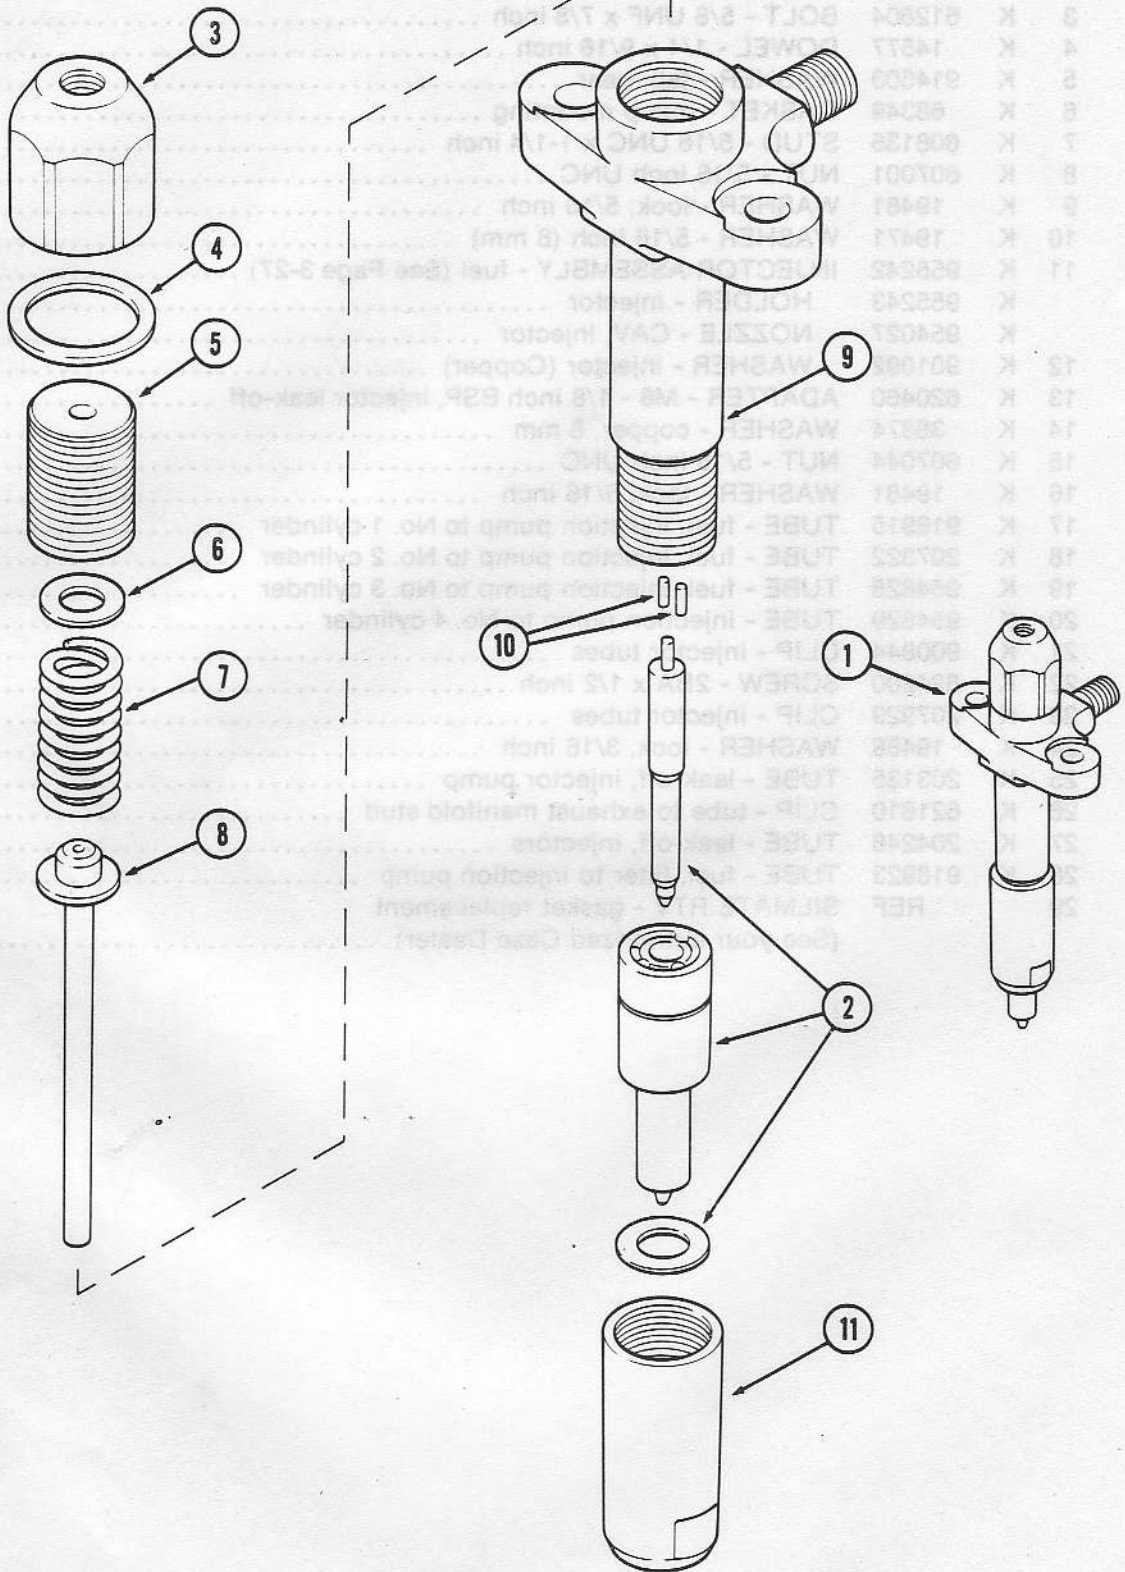

INJECTOR ASSEMBLY


Ref.	Part No.	Description	Required
1	K 955242	INJECTOR ASSEMBLY - fuel	1
2	K 954027	NOZZLE ASSEMBLY - injector	1
	K 955243	HOLDER ASSEMBLY - injector	1
3	A 48010	NUT - cap, holder (Lucas 7008-902)	1
4	K 964148	WASHER - cap (Lucas NW5-59)	1
5	A 48011	NUT - cap spring (Lucas 7008-599C)	1
6	A 48012	SHIM - spring nut (Lucas 5936-298)	1
7	A 48013	SPRING - spindle (Lucas 7008-253)	1
8	A 48014	SPINDLE - injector (Lucas 7008-49)	1
9	A 48015	BODY - injector (Lucas 7008-799A)	1
10	A 48016	DOWEL - nozzle (Lucas 7008-428A)	2
10	A 48017	DOWEL - nozzle (Lucas 7008-428B)	2
10	A 48018	DOWEL - nozzle (Lucas 7008-428C)	2
11	A 48019	CAP - nozzle (Lucas 7008-187)	1

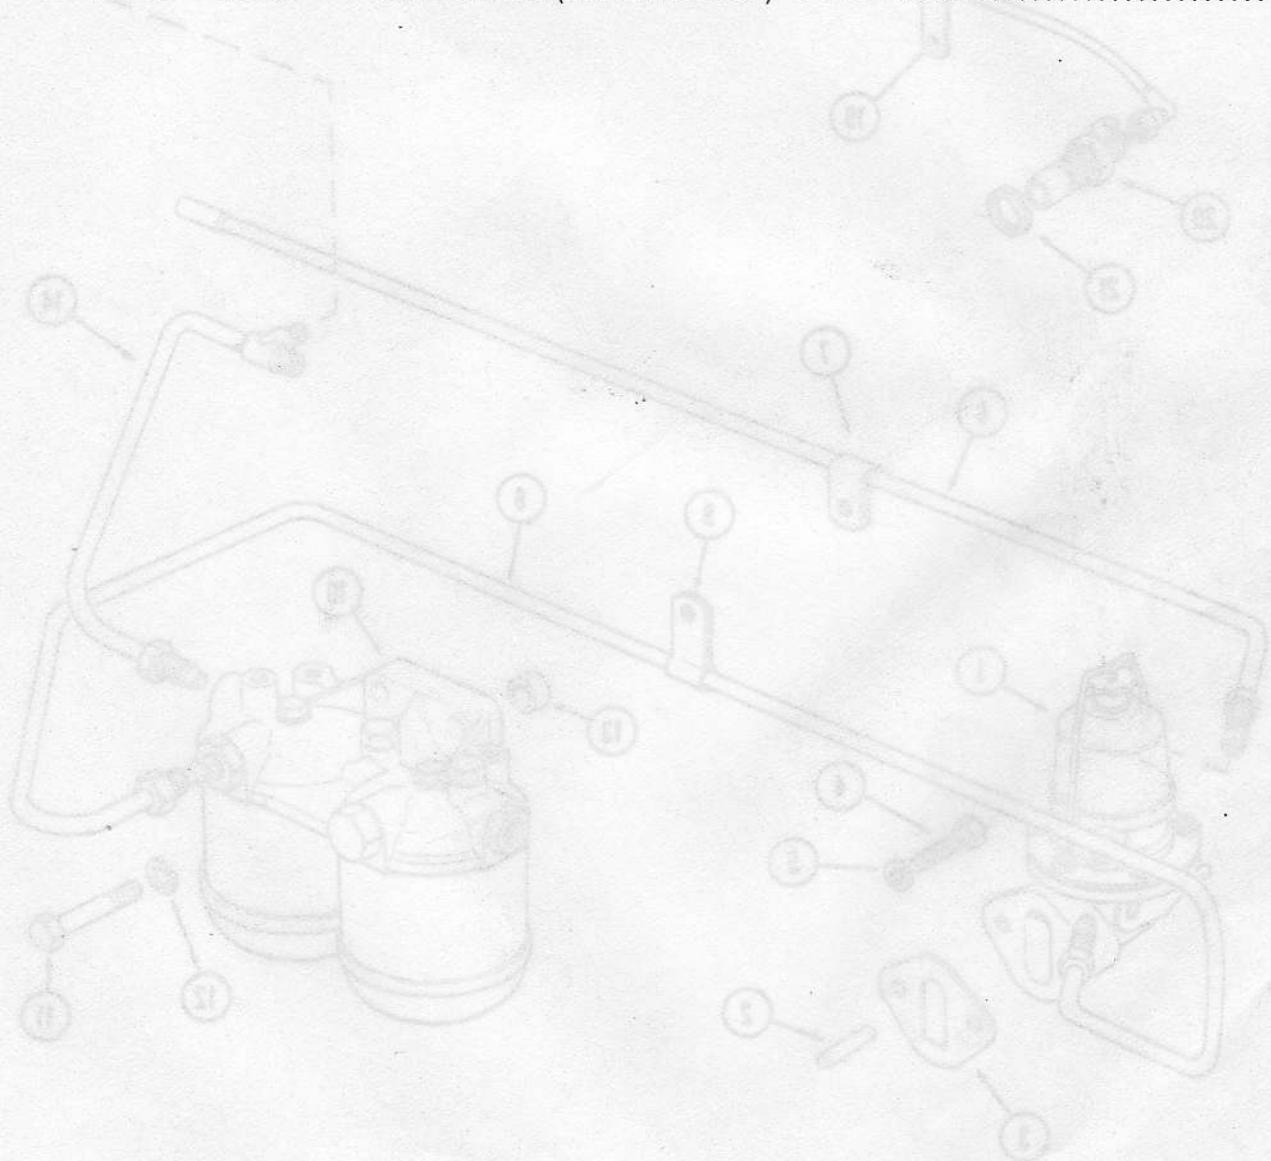


FUEL FEED PUMP, FILTERS AND TUBES **TRACTORS WITHOUT CAB**

311939


Ref.		Part No.	Description	Required
1	K	944997	PUMP ASSEMBLY - fuel (See Page 3-33)	1
2	K	911928	ROD - push, fuel pump	1
3	K	902136	GASKET - pump mounting	1
4	K	602807	BOLT - 5/16 UNC x 1-1/4 inch	2
5	K	15734	WASHER - sealing, 5/16 inch (8 mm)	2
6	K	203667	TUBE - fuel, tank to fuel pump	1
7	K	628362	CLIP - clutch housing bolt	1
8	K	944999	TUBE - fuel, pump to filter	1
9	K	621603	CLIP - tube to manifold stud	1
10	K	906708	FILTER ASSEMBLY - fuel (See Page 3-33)	1
11	K	600406	BOLT - 3/8 UNC x 1-3/4 inch	2
12	K	19482	WASHER - lock, 3/8 inch	2
13	K	627042	SPACER - filter	2
14	K	204246	TUBE - fuel, filter to leak-off	1
15	K	205391	RESERVOIR ASSEMBLY - fuel, with tube	1
16	K	650639	BOLT - M8 x 12 mm	1
17	K	651828	WASHER - lock, 8 mm	1
18	K	205367	TUBE - fuel, reservoir to Thermostart	1
19	K	621610	CLIP - manifold	1
20	K	928523	THERMOSTART - fuel (CAV 1854102)	1
21	K	626957	WASHER - sealing, 7/8 inch (22 mm)	1

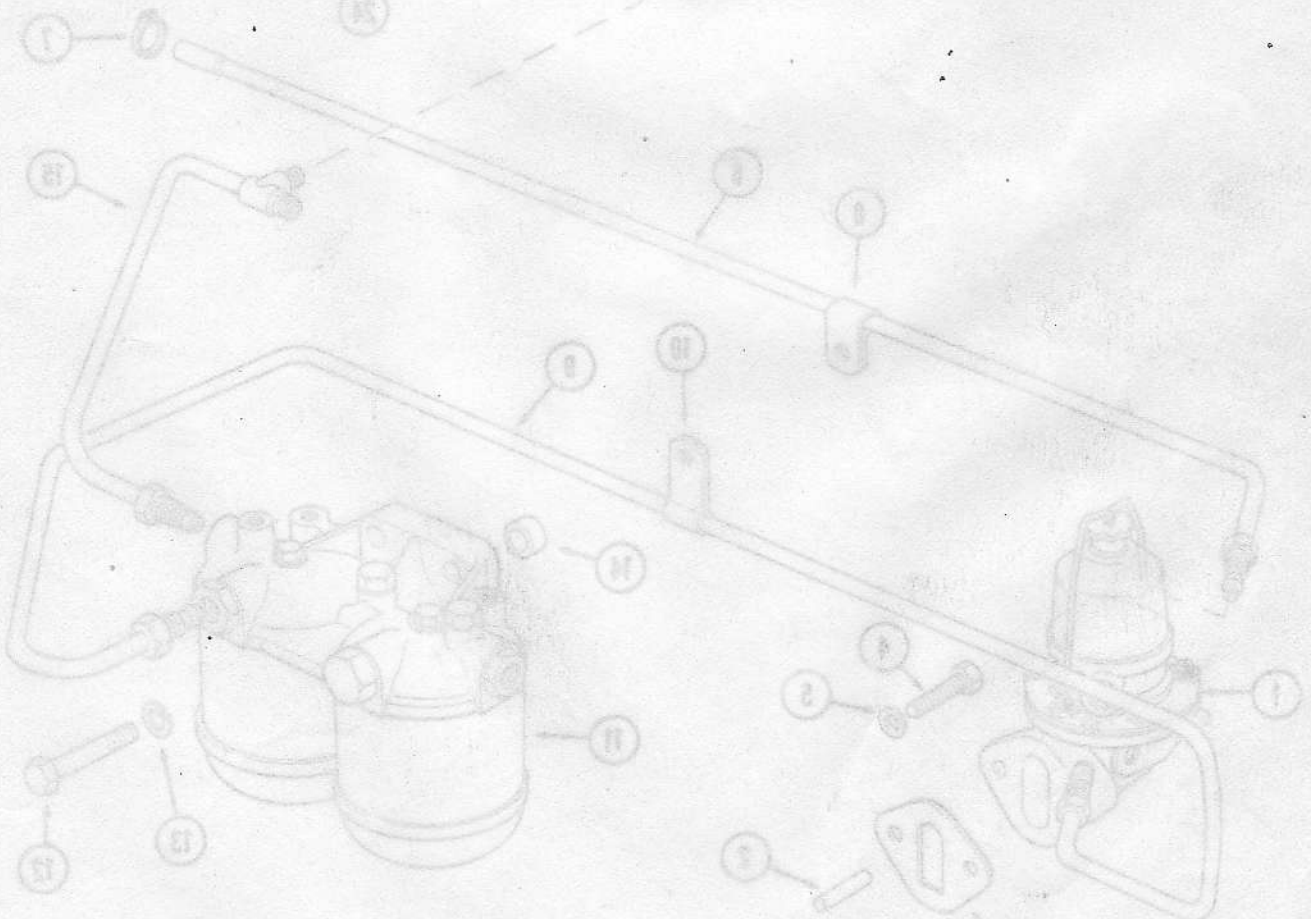

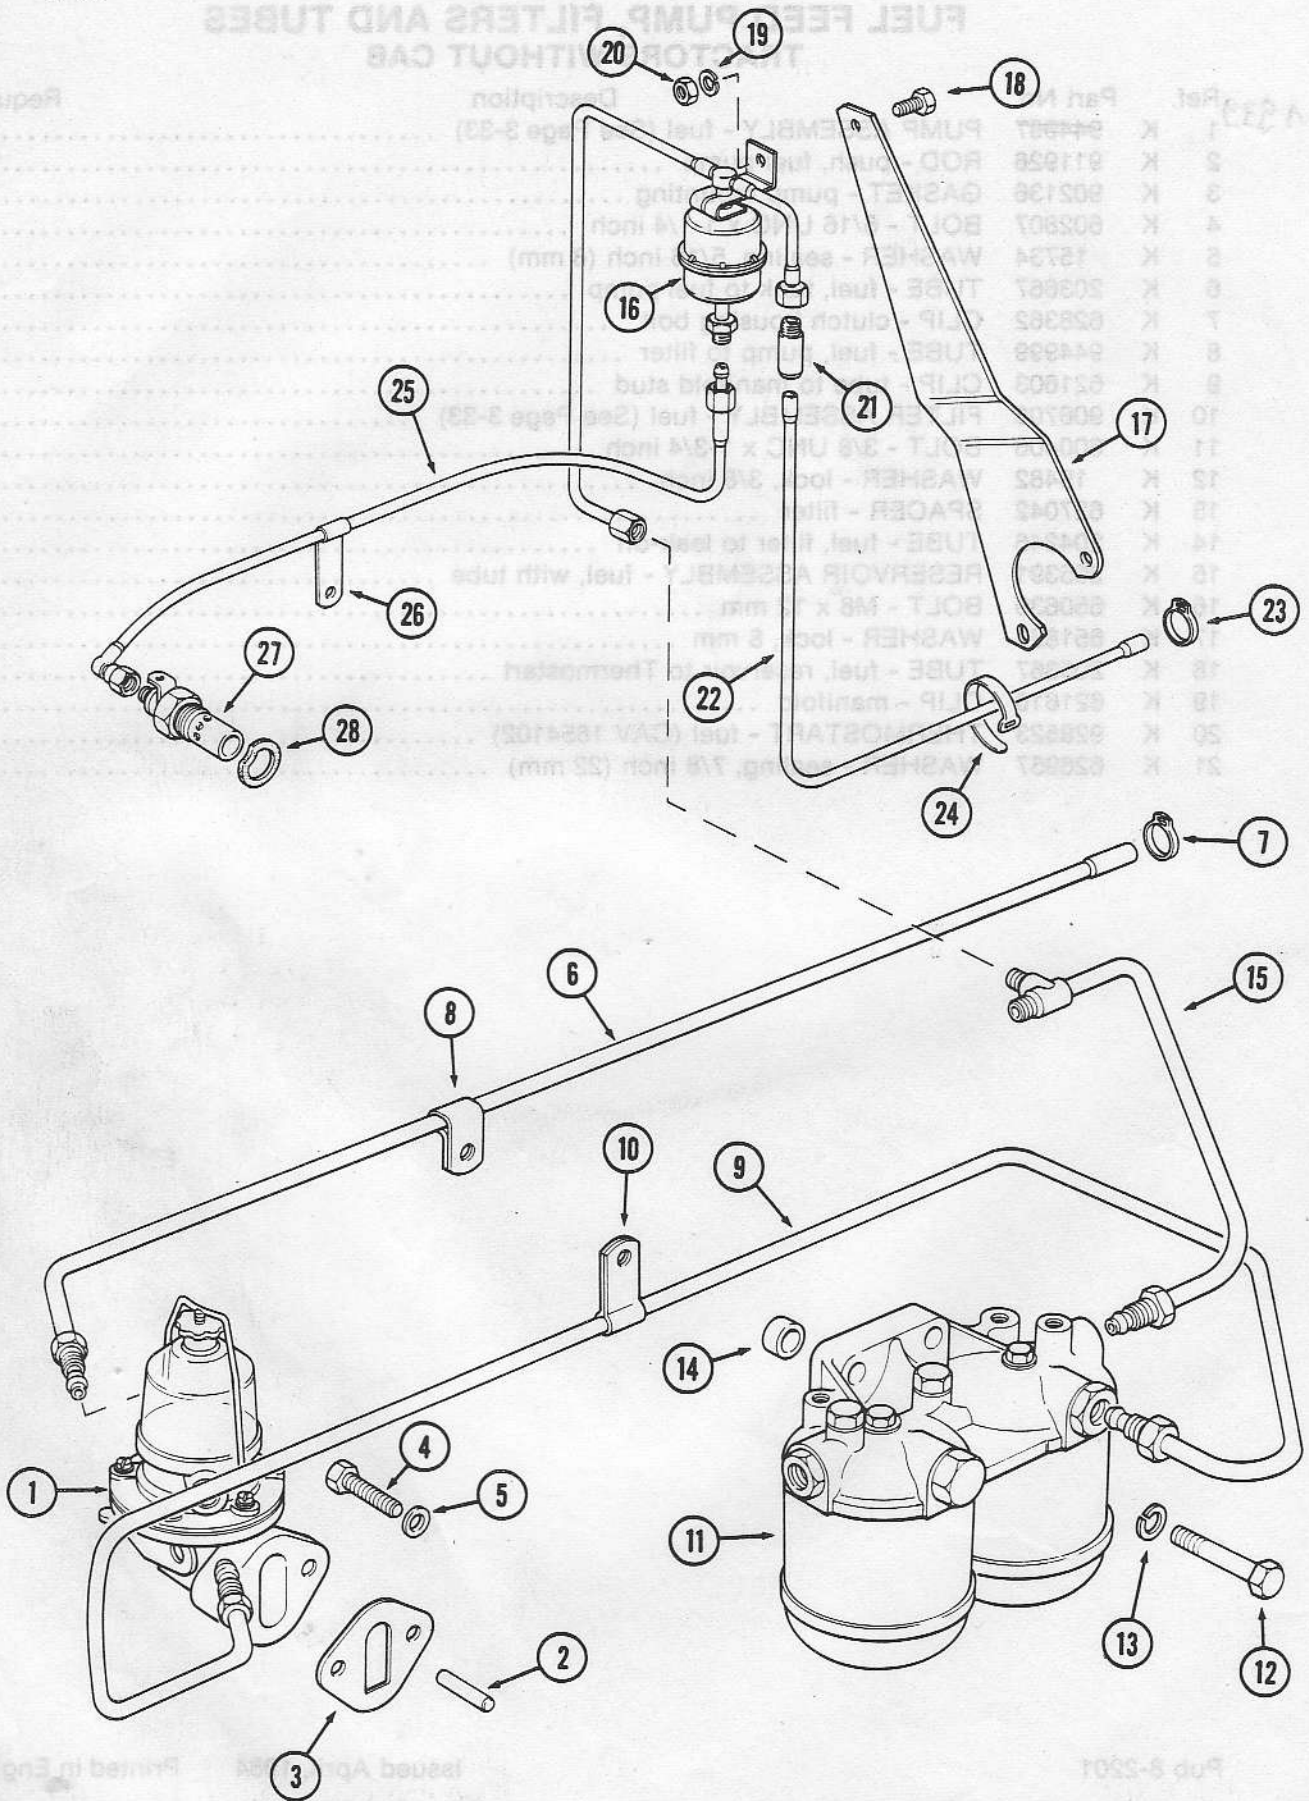


FUEL FEED PUMP, FILTERS AND TUBES TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 944997	PUMP ASSEMBLY - fuel (See Page 3-33)	1
2	K 911928	ROD - push, fuel pump	1
3	K 902136	GASKET - pump mounting	1
4	K 602807	BOLT - 5/16 UNC x 1-1/4 inch	2
5	K 15734	WASHER - sealing, 5/16 inch (8 mm)	2
6	K 203677	TUBE - fuel, tank to fuel pump	1
7	K 656901	CLAMP - tube to tank	1
8	K 628362	CLIP - clutch housing bolt	1
9	K 944999	TUBE - fuel, pump to filter	1
10	K 621603	CLIP - tube to manifold stud	1
11	K 906708	FILTER ASSEMBLY - fuel (See Page 3-33)	1
12	K 600406	BOLT - 3/8 UNC x 1-3/4 inch	2
13	K 19482	WASHER - lock, 3/8 inch	2
14	K 627042	SPACER - filter	2
15	K 204246	TUBE - fuel, filter to leak-off	1
16	K 205395	RESERVOIR ASSEMBLY - fuel, with tube	1
17	K 307876	BRACKET - reservoir support	1
18	K 612802	BOLT - 5/16 UNF x 5/8 inch	1
19	K 19481	WASHER - lock, 5/16 inch	1
20	K 617001	NUT - 5/16 inch UNF	1
21	K 306934	RESTRICTOR - fuel return	1
22	K 207549	TUBE - fuel return	1
23	K 656903	CLAMP - return tube to tank	1
24	K 621672	TIE - tubes	2
25	K 207569	TUBE - fuel, reservoir to Thermostart	1
26	K 621610	CLIP - manifold	1
27	K 928523	THERMOSTART - fuel (CAV 1854102)	1
28	K 626957	WASHER - sealing, 7/8 inch (22 mm)	1

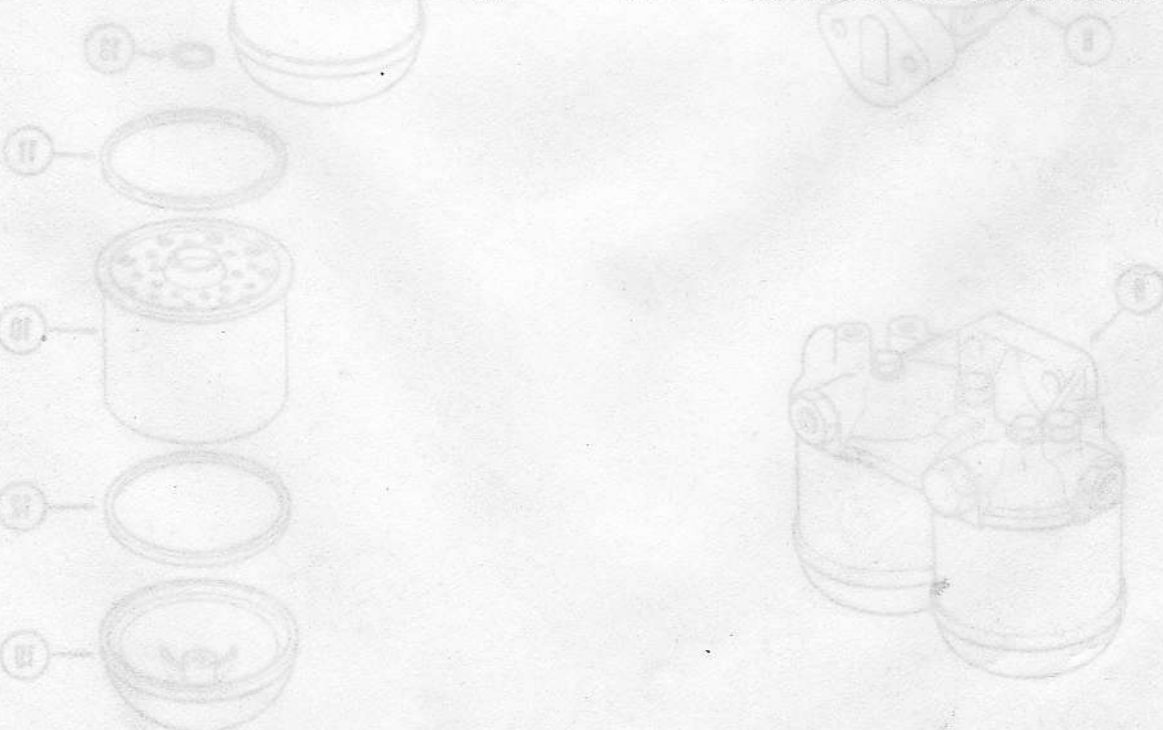


FUEL FEED PUMP, FILTERS AND TUBES TRACTORS WITH CAB

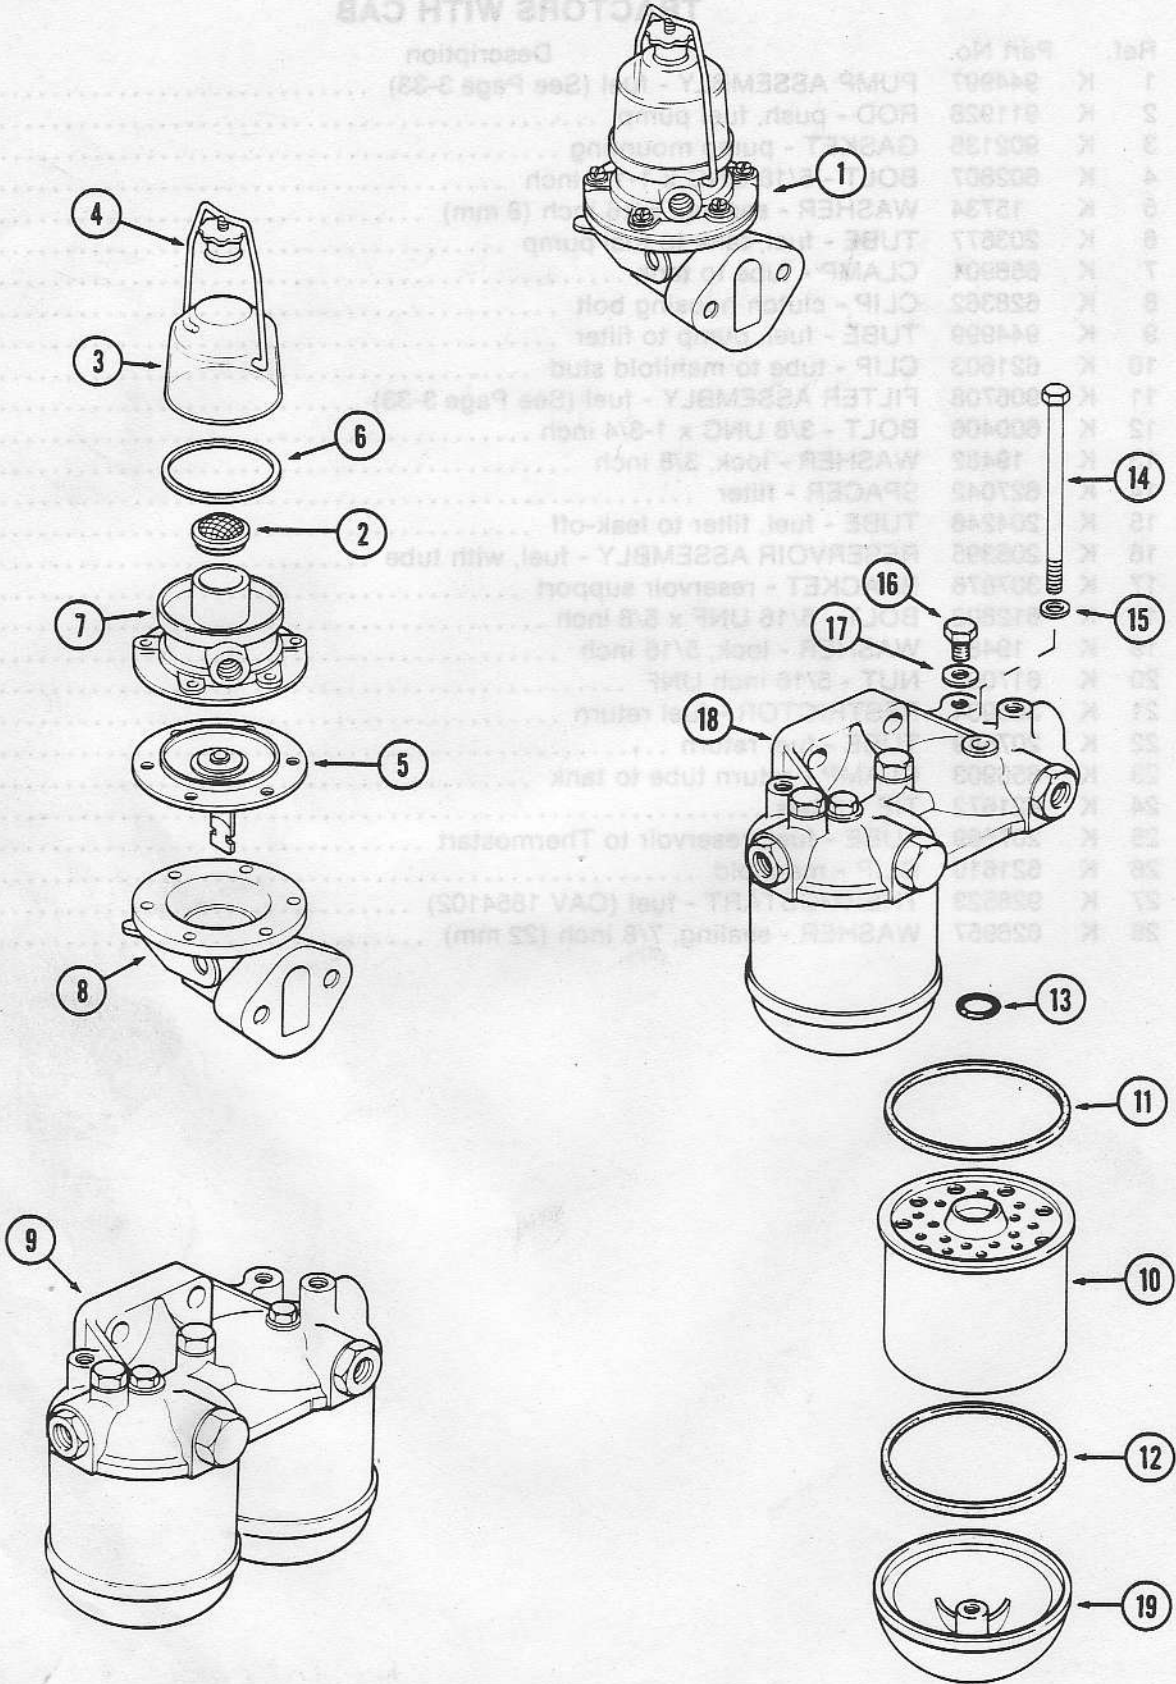


FUEL FEED PUMP AND FILTER ASSEMBLIES

Ref.	Part No.	Description	Required
1	K 944997	PUMP ASSEMBLY - fuel (AC-Delco E/FP63154B)	1
2	K 961675	SCREEN - filter	1
3	K 66442	BOWL - filter	1
4	K 961676	CLAMP - bowl	1
5	K 911917	DIAPHRAGM - pump	1
6	K 961674	GASKET - filter bowl	1
7	NSS	COVER - pump	1
8	NSS	BODY - pump	1
9	K 906708	FILTER ASSEMBLY - fuel (APF 62900)	1
10	K 960911	ELEMENT KIT - filter	2
11	K 965802	RING - sealing, upper	1
12	K 965801	RING - sealing, lower	1
13	K 960937	O-RING - 1/2 inch, (13 mm) ID	1
14	K 600360	BOLT - 5/16 UNC x 4-3/4 inch	2
15	K 963409	WASHER - sealing, 5/16 inch (8 mm)	2
16	K 965010	PLUG - vent, 5/16 inch UNC	1
17	K 15734	WASHER - 5/16 inch, aluminium	1
18	NSS	HEAD - filter	1
19	K 962264	BASE - filter	2

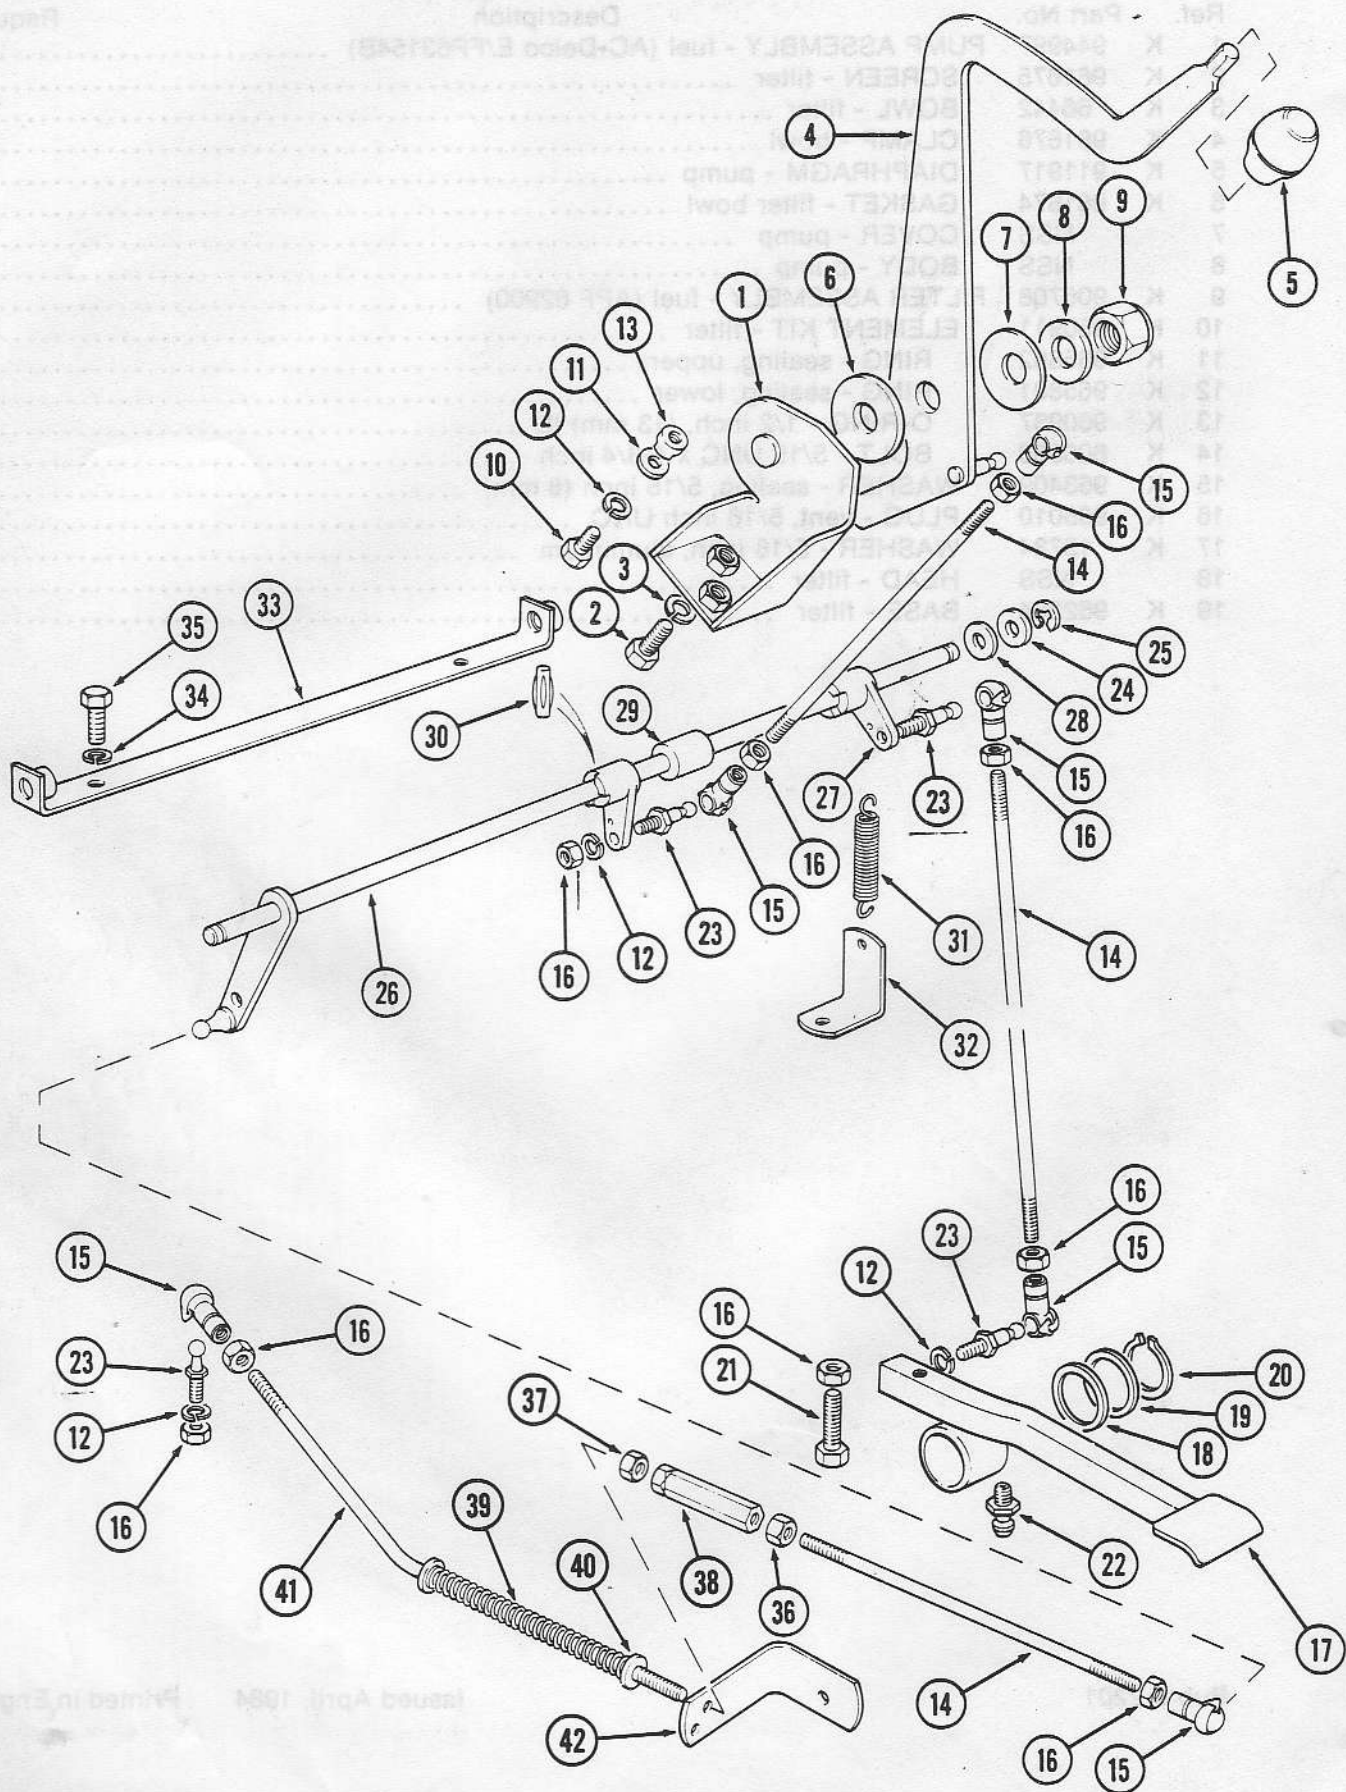


ENGINE THROTTLE CONTROLS TRACTORS WITHOUT CAB

Ref.	Part No.	Description	Required
1	K 300223	BRACKET - throttle lever support	1
2	K 650641	BOLT - M8 x 16 mm,	2
3	K 651848	WASHER - lock, 8 mm	2
4	K 201285	LEVER - hand, speed control	1
5	K 207512	KNOB - lever	1
6	K 950724	DISC - friction	1
7	K 626740	WASHER - Belleville	1
8	K 626855	WASHER - 5/8 inch (8 mm)	1
9	K 617239	NUT - self-locking, 5/8 inch UNF	1
10	K 602734	SCREW - 1/4 UNC x 1/2 inch	1
11	K 19470	WASHER - 1/4 inch (6 mm)	1
12	K 626341	WASHER - lock, 1/4 inch	1
13	K 943634	NUT - 1/4 inch UNC, special	1
14	K 201275	ROD - 1/4 UNF x 10-1/8 inch	3
15	K 621903	SOCKET END - 1/4 inch UNF	6
16	K 617050	NUT - lock, 1/4 inch UNF	9
17	K 202010	PEDAL - throttle	1
18	K 627466	WASHER - 1 inch (25 mm)	1
19	K 626200	WASHER - 1 x 0.002 inch (25 x 0.05 mm)	UAR
20	K 11128	RING - snap, 1 inch (25 mm) OD	1
21	K 610252	BOLT - 1/4 inch UNF, special, throttle pedal stop	1
22	K 13176	FITTING - grease, 1/4 inch UNF	1
23	K 621904	PIVOT END - ball	4
24	K 626267	WASHER - 3/8 x 0.030 inch (10 x 0.76 mm)	UAR
25	K 621587	RING - snap, 3/8 inch, (10 mm) external	1
26	K 202017	SHAFT - cross (Synchromesh)	1
26	K 207065	SHAFT - cross (Power Shift)	1
27	K 928178	LEVER - hand and foot throttle	2
28	K 19472	WASHER - 3/8 inch (10 mm)	3
29	K 627036	SPACER - 3/8 inch (10 mm) ID	1
30	K 623747	PIN - 5/32 x 3/4 inch	2
31	K 624938	SPRING - return	1
32	K 202016	ANCHOR - spring	1
33	K 201284	BRACKET - cross shaft support (Synchromesh)	1
33	K 207060	BRACKET - cross shaft support (Power Shift)	1
34	K 19481	WASHER - lock, 5/16 inch	2
35	K 602803	BOLT - 5/16 UNC x 3/4 inch	2
36	K 616980	NUT - 1/4 inch UNF	1
37	K 617593	NUT - 1/4 inch UNF, left-hand thread	1
38	K 949065	SLEEVE - adjusting	1
39	K 625260	SPRING - return	1
40	K 19470	WASHER - 1/4 inch (6 mm)	1
41	K 201287	ROD - sleeve to pump	1
42	K 301329	BRACKET - guide	1

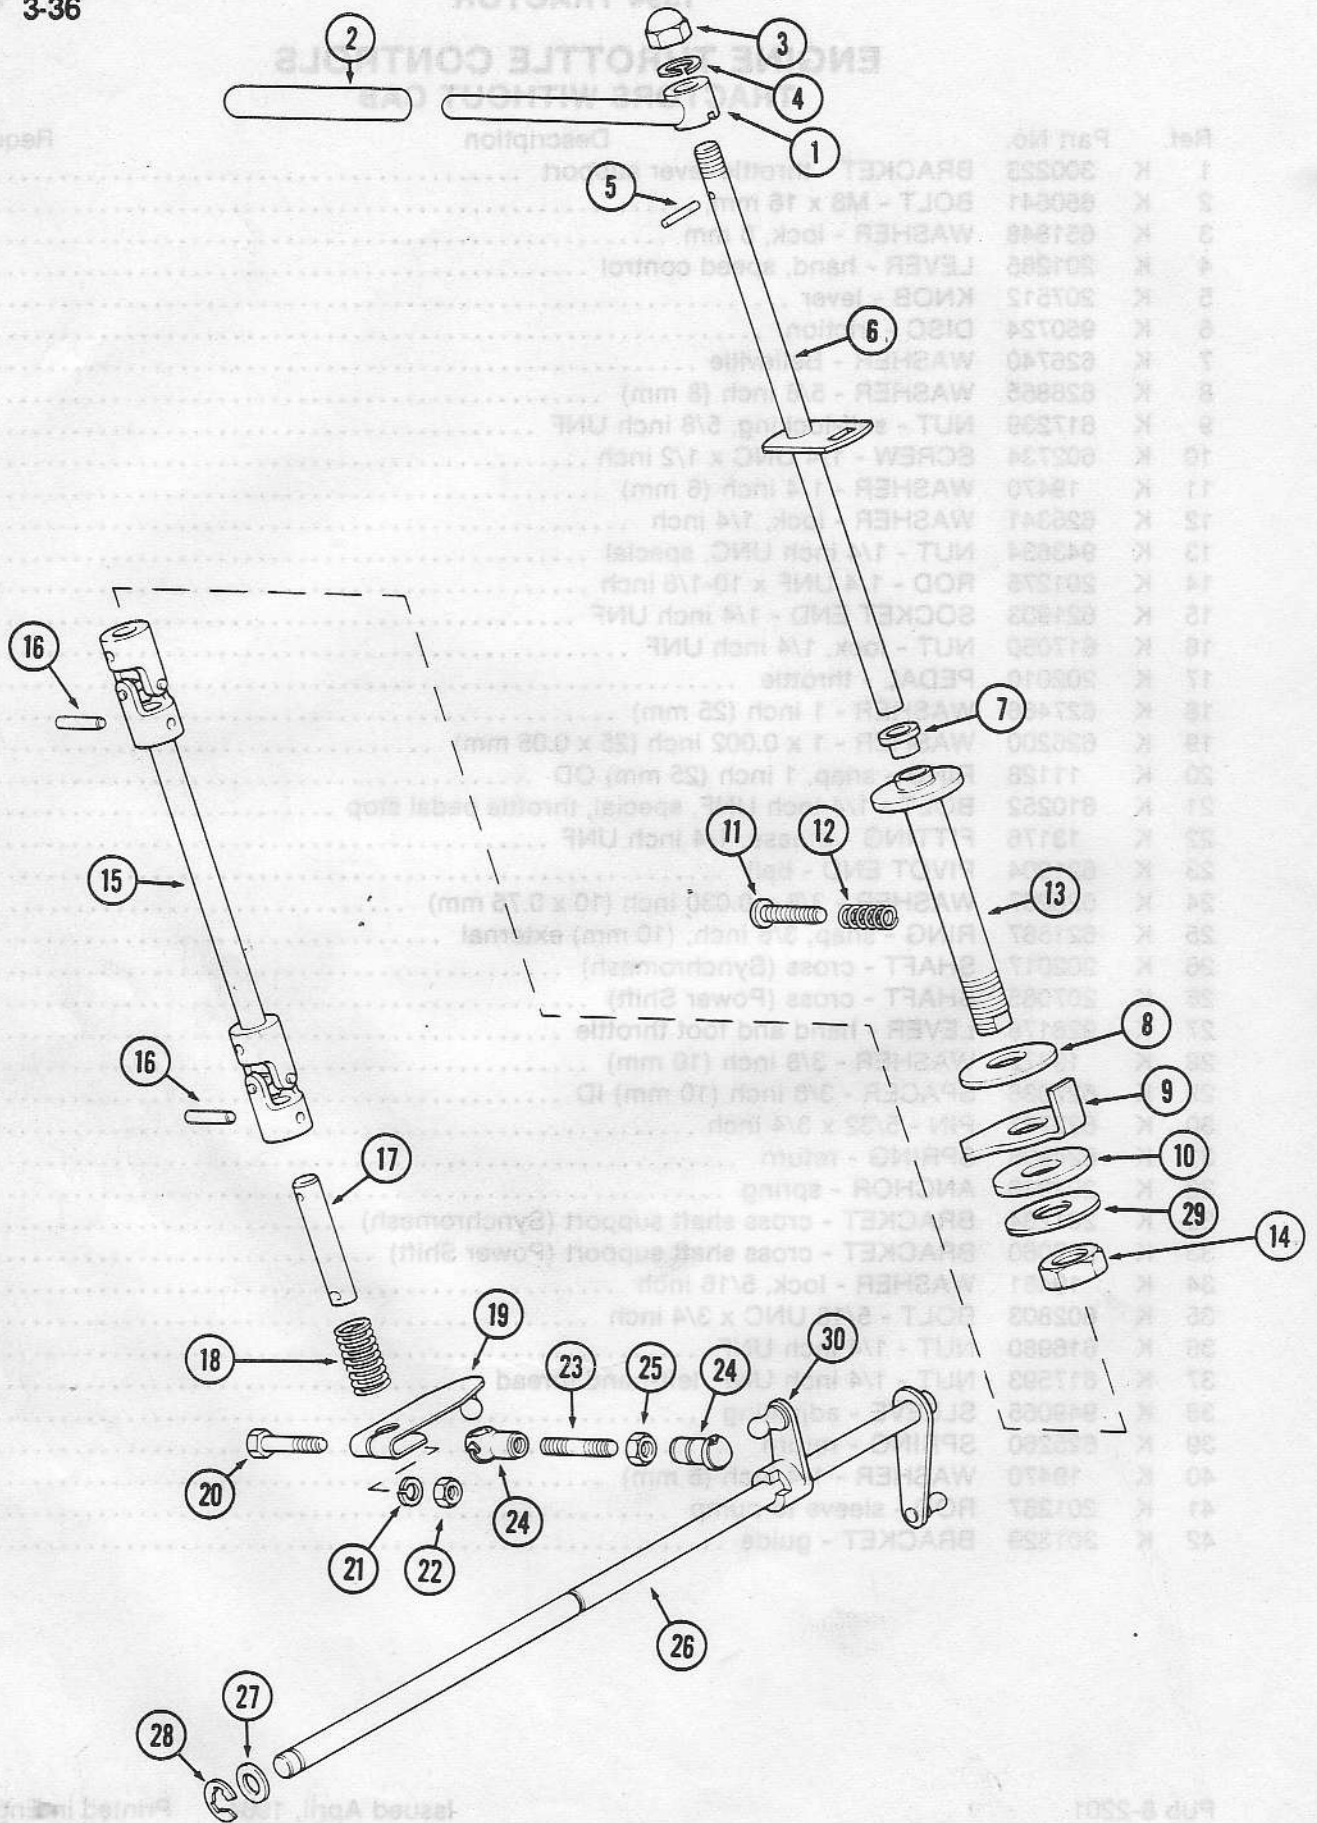


THROTTLE HAND CONTROL TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 204710	LEVER - hand	1
2	K 307675	SLEEVE - hand lever	1
3	K 659326	NUT - domed, M10	1
4	K 651849	WASHER - lock, 10 mm	1
5	K 16570	PIN - retaining, 1/8 x 3/4 inch	1
6	K 307413	ROD - hand lever	1
7	K 307448	BUSHING - plastic, 10 mm	1
8	K 626740	WASHER - Belleville	2
9	K 204709	PLATE - adjusting	1
10	K 204708	DISC - friction	2
11	K 605613	SCREW - lever stop, 1/4 UNC x 1-5/8 inch	1
12	K 625232	SPRING - stop screw	1
13	K 307446	TUBE	1
14	K 651556	NUT - M16	2
15	K 307407	ROD - with universal joints	1
16	K 657420	PIN - roll, 4 x 20 mm	2
17	K 307406	ROD - lower	1
18	K 24887	SPRING - rod	1
19	K 307409	LEVER	1
20	K 650631	BOLT - M6 x 35 mm	1
21	K 651847	WASHER - lock, 6 mm	1
22	K 651526	NUT - M6	1
23	K 203147	ROD - lever to cross shaft	1
24	K 621903	SOCKET END - 1/4 inch UNF	2
25	K 617050	NUT - 1/4 inch UNF	2
26	K 207310	SHAFT - cross	1
27	K 19472	WASHER - 3/8 inch (10 mm)	1
28	K 621587	RING - retaining, 3/8 inch (10 mm) external	1
29	K 19476	WASHER - 3/4 inch (19 mm)	1
30	K 928177	LEVER - cross shaft	1

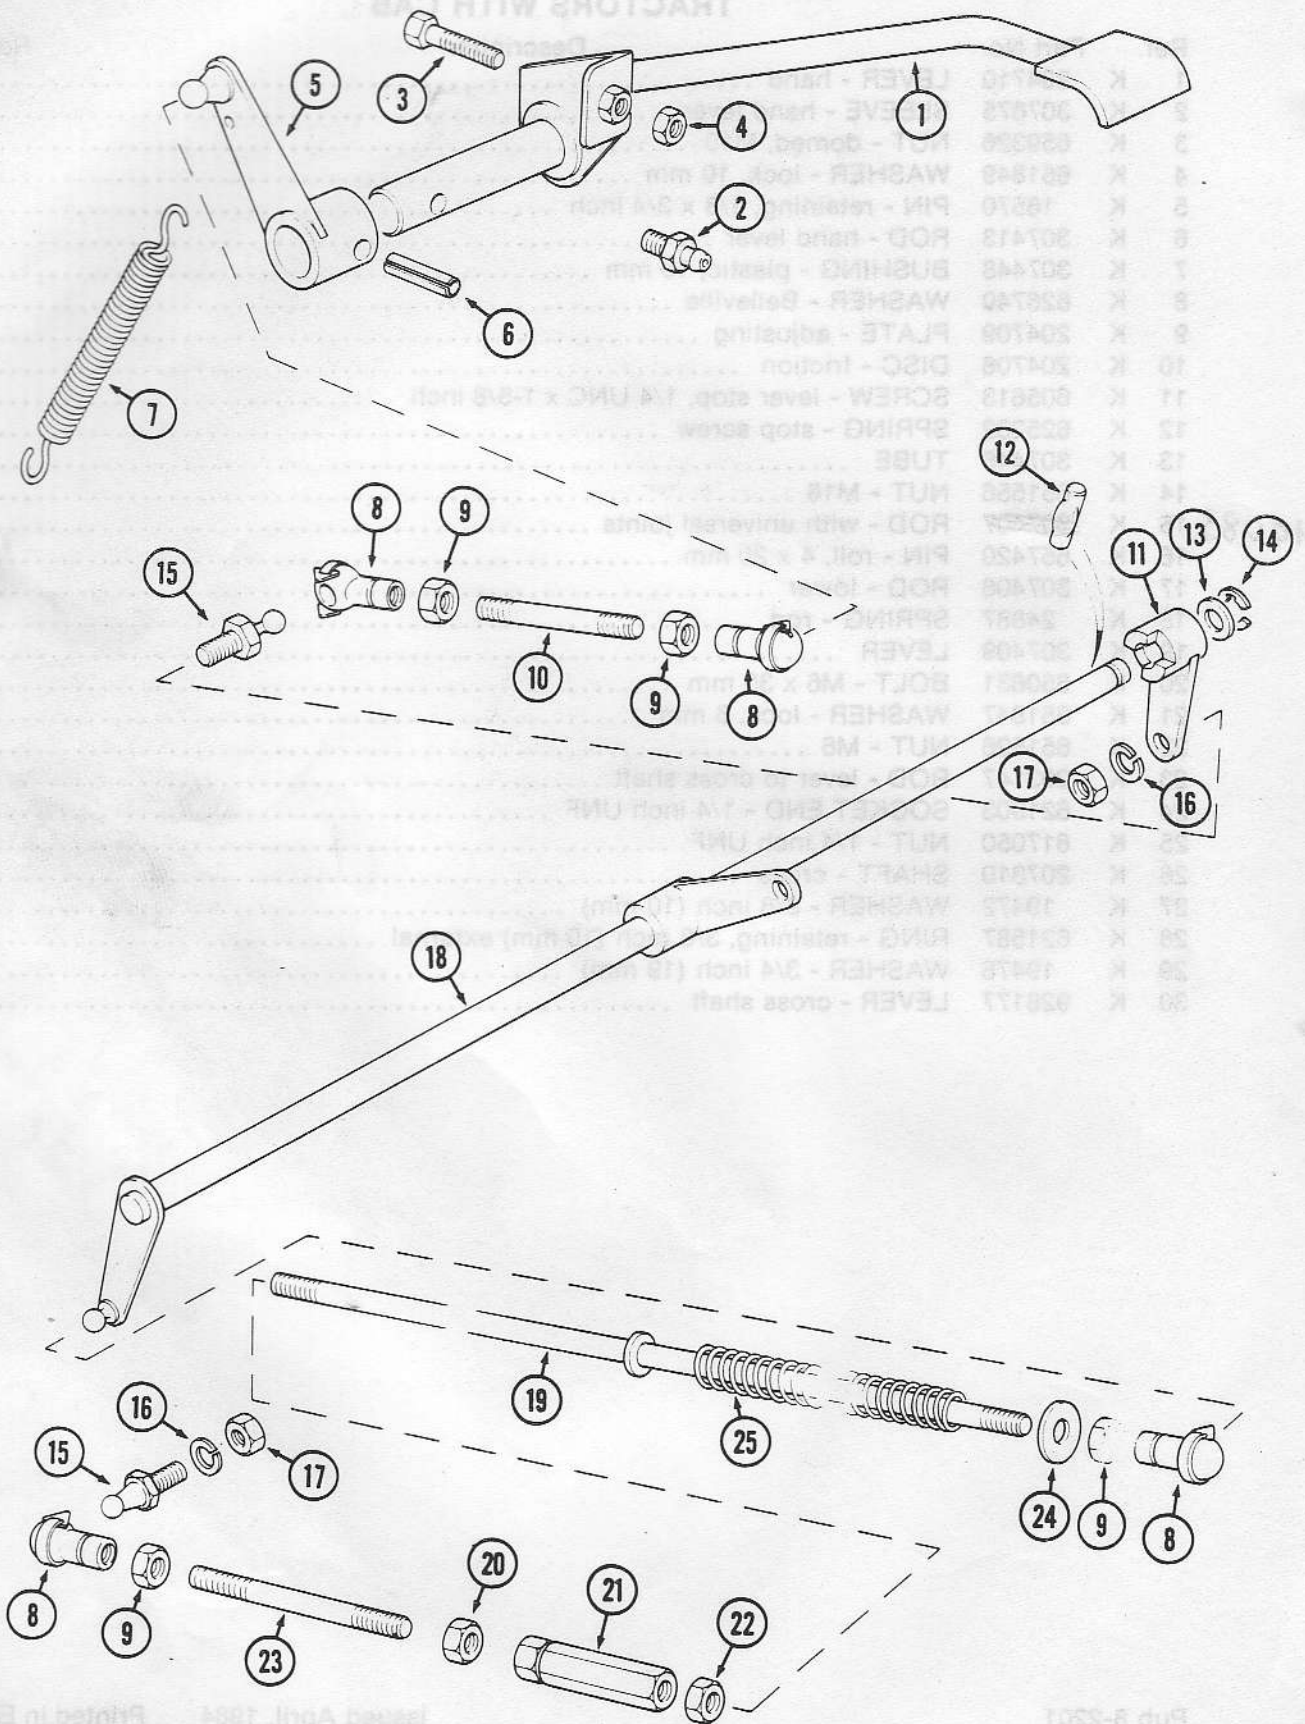

THROTTLE FOOT CONTROL TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 308625	PEDAL	1
2	K 13176	FITTING - grease, 1/4 inch ANF	1
3	K 652480	BOLT - special, M6 x 40 mm	1
4	K 651526	NUT - M6	1
5	K 307476	LEVER	1
6	K 623742	PIN - 1/4 x 1 inch	1
7	K 624914	SPRING - return	1
8	K 621903	SOCKET END	4
9	K 617050	NUT - lock, 1/4 inch UNF	4
10	K 202824	ROD - pedal to cross shaft	1
11	K 928178	LEVER	1
12	K 623747	PIN - lever to shaft	2
13	K 19472	WASHER - 3/8 inch (10 mm)	2
14	K 621587	RING - retaining, 3/8 inch (10 mm) external	2
15	K 621904	BALL END	3
16	K 626341	WASHER - lock, 1/4 inch	2
17	K 616980	NUT - 1/4 inch UNF	2
18	K 207310	SHAFT - cross	1
19	K 203148	ROD - cross shaft to adjusting sleeve	1
20	K 617593	NUT - 1/4 inch UNF, left-hand thread	1
21	K 949065	SLEEVE - adjusting, 1/4 inch UNF	1
22	K 617000	NUT - 1/4 inch UNF	1
23	K 204861	ROD - adjusting sleeve to pump	1
24	K 626661	WASHER - special, return spring	1
25	K 625260	SPRING - return	1

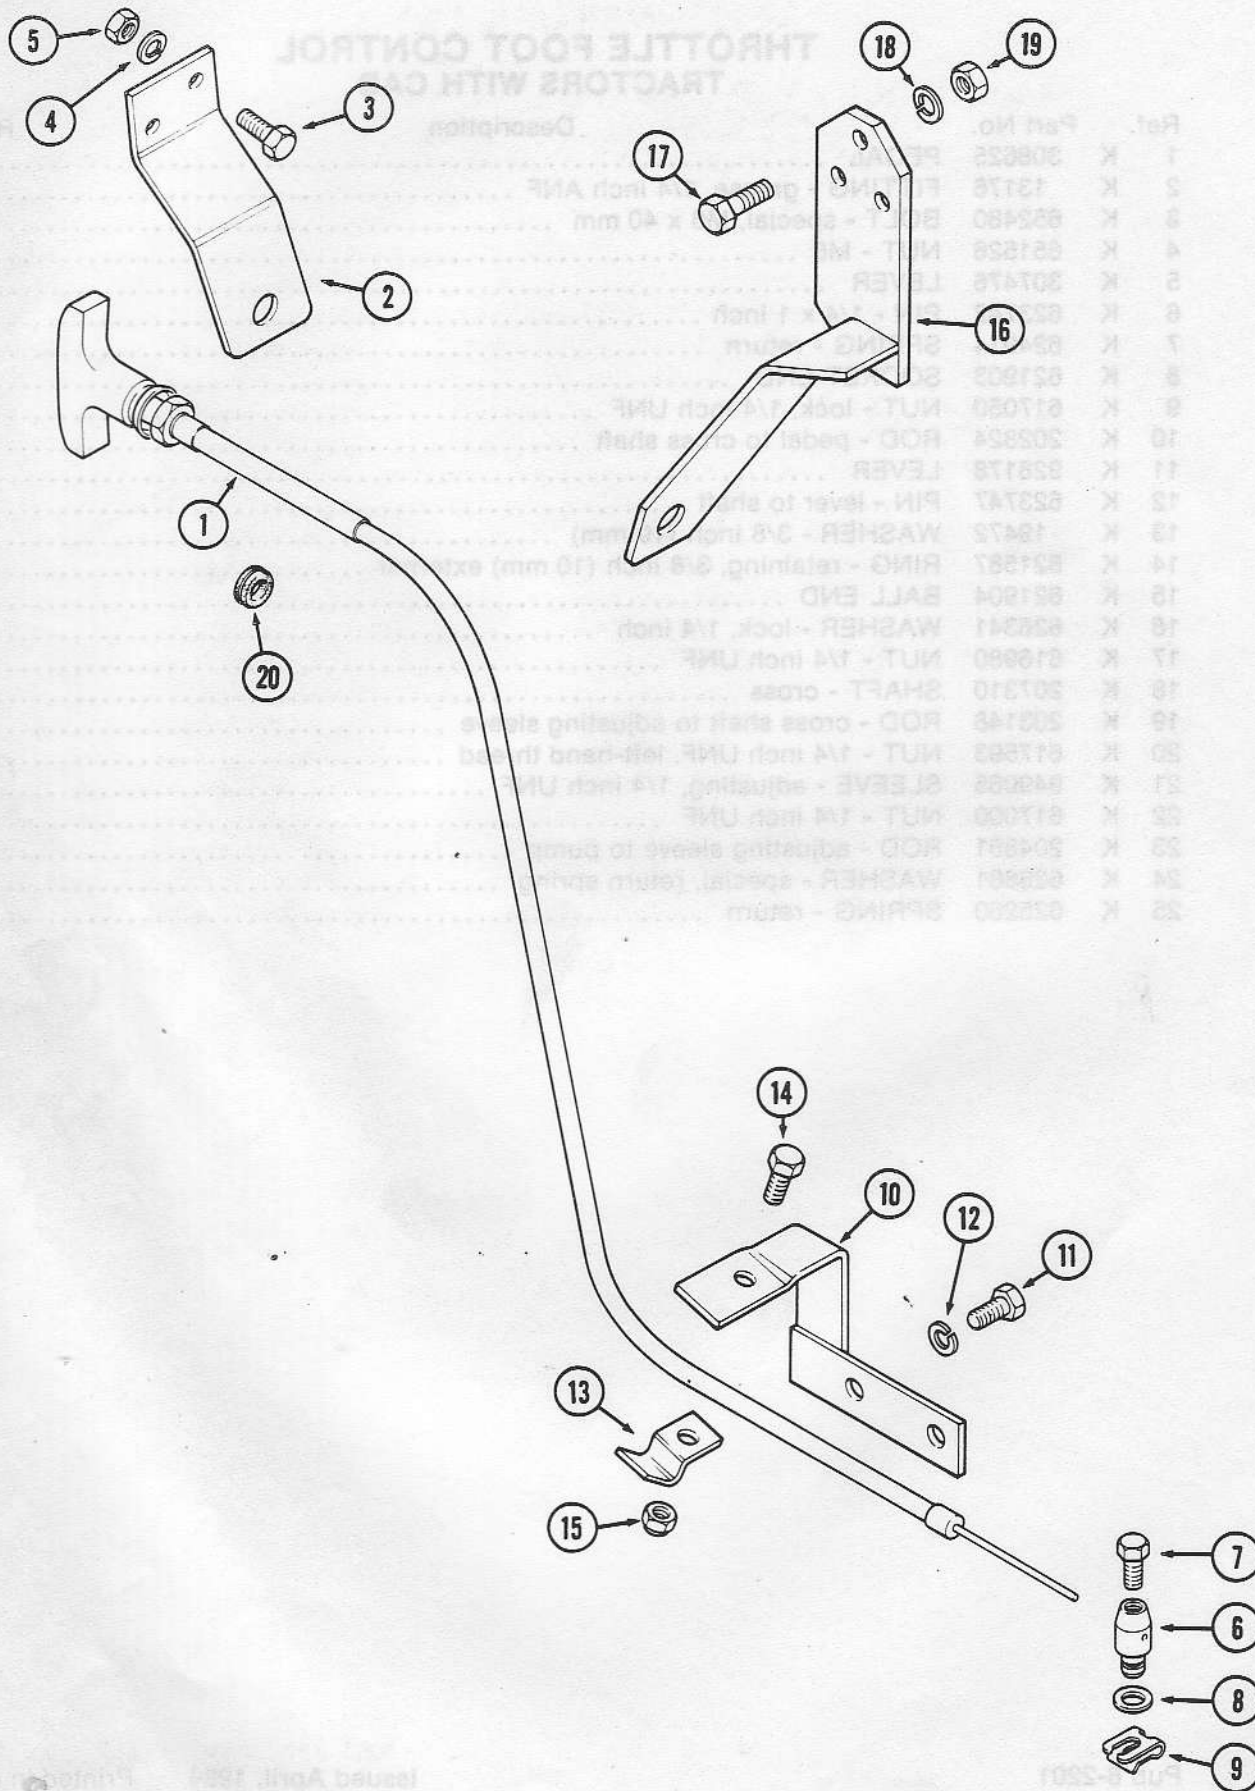


ENGINE STOP CONTROL

Ref.	Part No.	Description	Required
1	K 304813	CABLE ASSEMBLY - stop control (without cab)	1
1	K 307149 309526	CABLE ASSEMBLY - stop control (with cab)	1
2	K 304633	BRACKET - mounting (without cab)	1
3	K 650327	BOLT - M6 x 16 mm	2
4	K 651827	WASHER - lock, 6 mm	3
5	K 651506	NUT - M6	2
6	K 205990	PIN - trunnion	1
7	178- 15	SCREW - hex, No. 10 x 3/8 inch NC	1
8	K 19470	WASHER - 1/4 inch (6 mm)	1
9	K 625039	CLIP - retaining	1
10	K 304437	BRACKET - mounting, front	1
11	K 612701	BOLT - hex, 1/4 NF x 1/2 inch	1
12	K 626341	WASHER - lock, 1/4 inch	2
13	K 657014	CLAMP - cable	1
14	K 602701	BOLT - hex, 1/4 NC x 1/2 inch	1
15	K 607325	NUT - hex, self locking, 1/4 inch NC	1
16	K 304580	BRACKET - mounting (with cab)	1
17	K 612703	BOLT - 1/4 UNF x 3/4 inch	2
18	K 19480	WASHER - lock, 1/4 inch	2
19	K 617000	NUT - 1/4 inch UNF	2
20	K 627723	GROMMET - cable	1

1934 TRACTOR ENGINE STOP CONTROL

Ref.	Part No.	Description
1	304813 K	CABLE ASSEMBLY - stop control (without cap)
1	304813 K	CABLE ASSEMBLY - stop control (with cap)
2	304813 K	mounting (without cap)
2	304813 K	mounting (with cap)
3	304813 K	lock, 6 mm
3	304813 K	lock, 6 mm
4	304813 K	lock, 6 mm
5	304813 K	lock, 6 mm
6	304813 K	lock, 6 mm
7	304813 K	lock, 6 mm
8	304813 K	lock, 6 mm
9	304813 K	lock, 6 mm
10	304813 K	lock, 6 mm
11	304813 K	lock, 6 mm
12	304813 K	lock, 6 mm
13	304813 K	lock, 6 mm
14	304813 K	lock, 6 mm
15	304813 K	lock, 6 mm
16	304813 K	lock, 6 mm
17	304813 K	lock, 6 mm
18	304813 K	lock, 6 mm
19	304813 K	lock, 6 mm
20	304813 K	lock, 6 mm

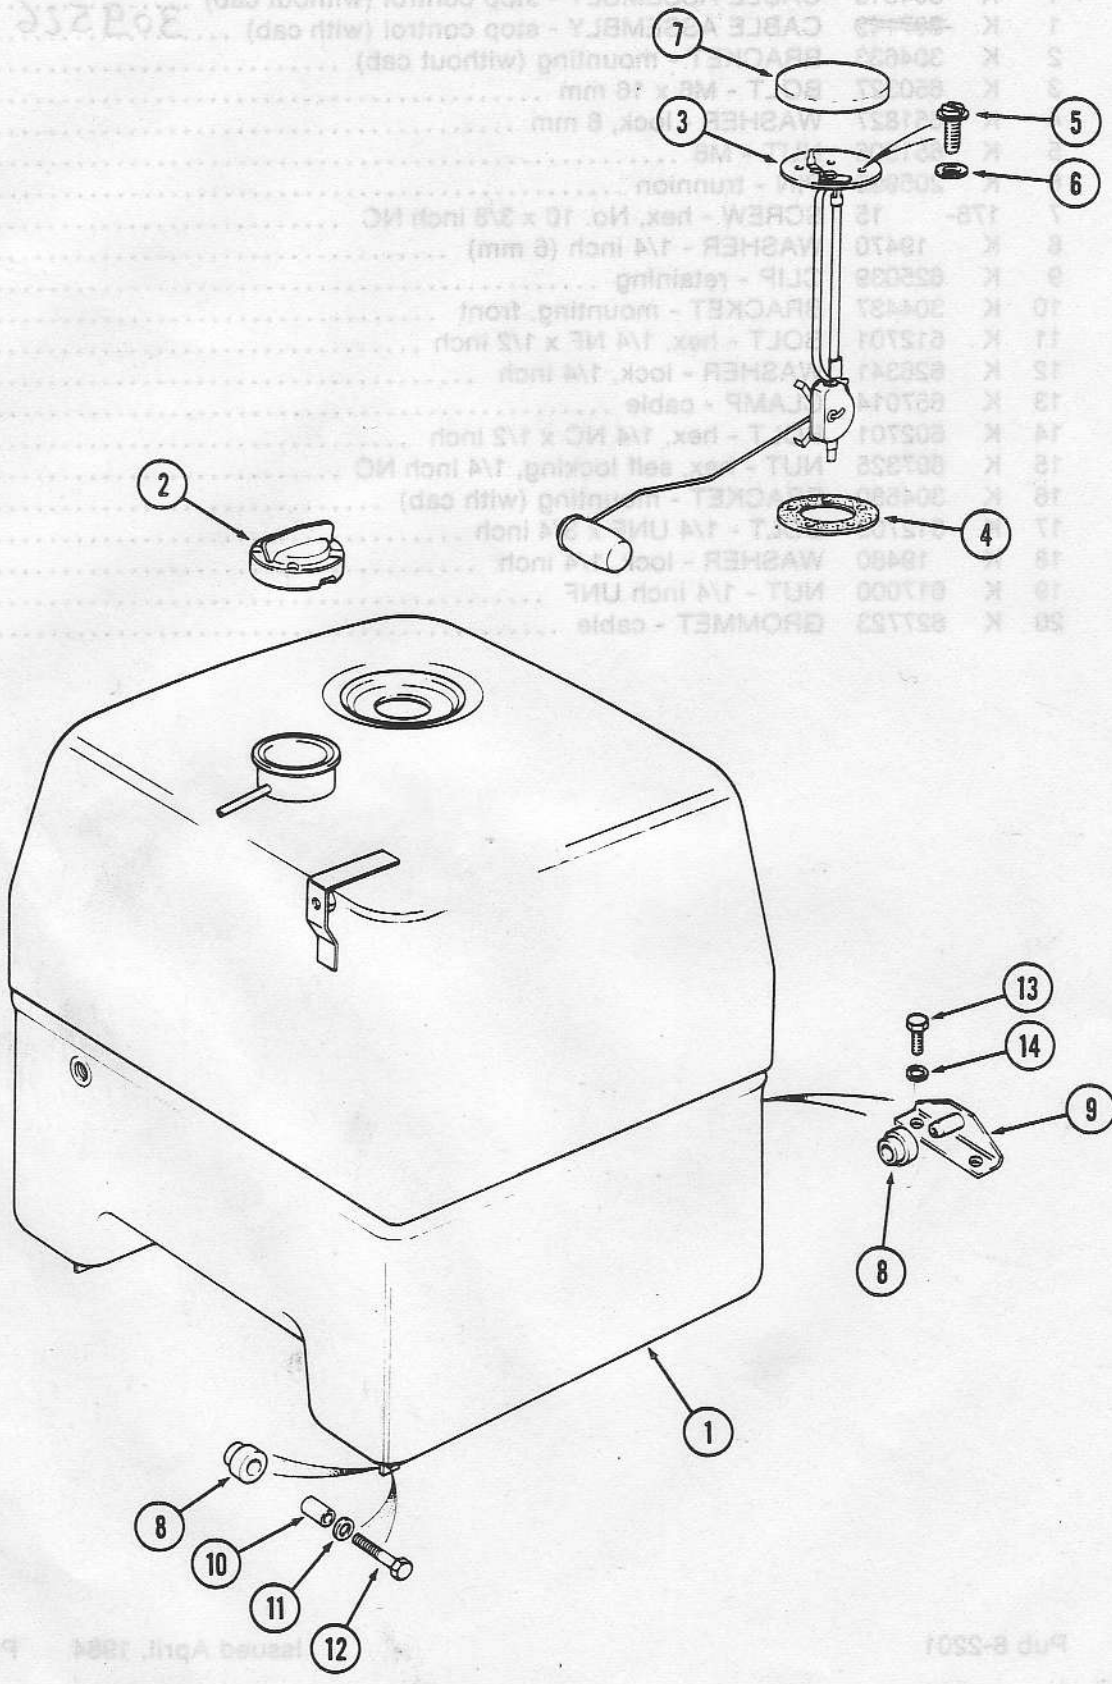

27


FUEL TANK AND SUPPORTS TRACTORS WITHOUT CAB

Remplacé par K 370 544

Ref.	Part No.	Description	Required
1	K 306168	TANK - fuel <i>K 370 544</i>	1
2	K 304590	CAP - filler	1
3	K 301063	SENDING UNIT - fuel gauge	1
4	K 946159	GASKET - tank sending unit	1
5	K 614965	SCREW - No. 10 UNF x 5/8 inch	5
6	K 627479	WASHER - sealing, 3/16 inch (5 mm)	5
7	K 304807	PLUG - plastic	1
8	K 200826	BUSHING - plastic	3
9	K 200825	BRACKET - fuel tank support	1
10	K 627323	SPACER - mounting	2
11	K 19472	WASHER - 3/8 inch (10 mm)	2
12	K 600561	BOLT - 3/8 UNC x 1-5/8 inch	2
13	K 602982	BOLT - 3/8 UNC x 3/4 inch	2
14	K 19482	WASHER - lock, 3/8 inch	2

*a partir du N° 11138410 (1394) et 11059856 (1294)
N° de la jauge OK 309298*

3-44

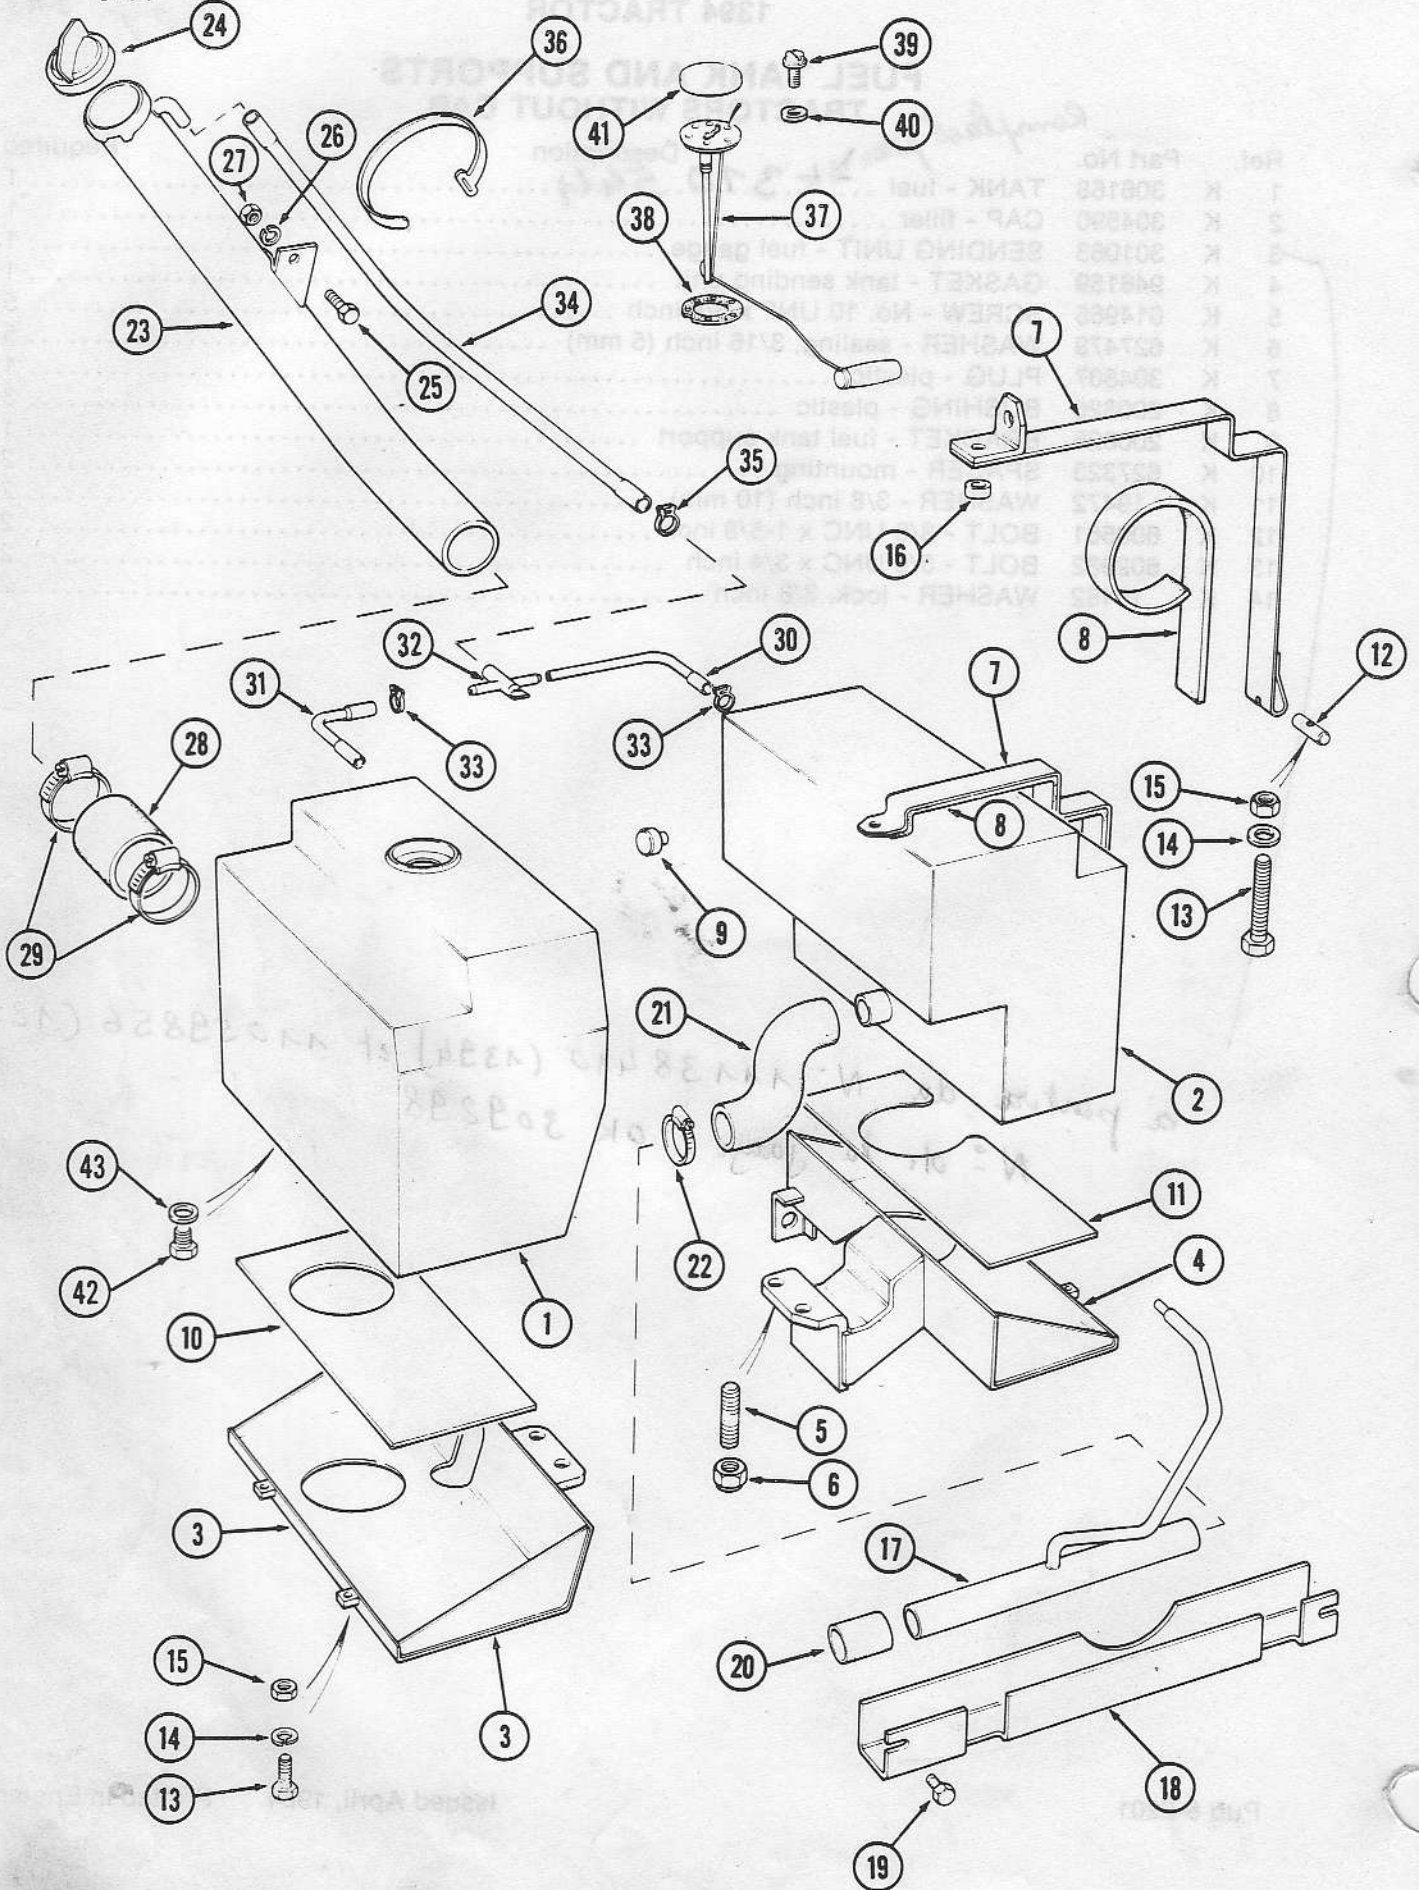

FUEL TANKS TRACTORS WITH CAB

Ref.	Part No.	Description	Required
1	K 207876	TANK - fuel, left-hand	1
2	K 207883	TANK - fuel, right-hand	1
3	K 307954	BRACKET - tank support, left-hand	1
4	K 307955	BRACKET - tank support, right-hand	1
5	K 608610	STUD - 5/8 UNC x 2-1/2 inch	4
6	K 607306	NUT - self-locking, 5/8 inch UNC	4
7	K 306434	STRAP - fuel tank (Synchromesh)	4
7	K 308059	STRAP - fuel tank (Power Shift)	3
7	K 308062	STRAP - fuel tank, RH front (Power Shift)	1
8	K 302680	STRIP - tank strap (order in meters)	UAR
9	K 304542	PAD - rubber, tank strap	4
10	K 202713	PAD - rubber, left tank	1
11	K 202714	PAD - rubber, right tank	1
12	K 951539	PIN - tank strap	4
13	K 602749	SCREW - 1/4 UNC x 3 inch	4
14	K 19470	WASHER - 1/4 inch (6 mm)	4
15	K 607300	NUT - lock, 1/4 UNC	4
16	K 202903	SPACER - tank strap	4
17	K 308214	TUBE - tank balance	1
18	K 308506	GUARD - balance tube	1
19	K 602851	BOLT - 5/16 UNC x 1/2 inch	2
20	K 304000	HOSE - balance tube to left-hand tank	1
21	K 307956	HOSE - balance tube to right-hand tank	1
22	K 622028	CLIP - hose, 1-1/2 inch (38 mm)	4
23	K 207874	TUBE - filler	1
24	K 901983	CAP - fuel filler 3.04590	1
25	K 602849	SCREW - 5/16 UNC x 7/8 inch	1
26	K 19481	WASHER - lock, 5/16 inch	1
27	K 607044	NUT - 5/16 inch	1
28	K 206936	HOSE - filler tube	1
29	K 622032	CLIP - hose, 2-3/4 inch (70 mm)	2
30	K 308427	TUBE - tank breather, right-hand	1
31	K 308426	TUBE - tank breather, left-hand	1
32	K 307871	FITTING - tee, breather tube	1
33	K 656901	CLAMP - breather tube	4
34	K 308428	TUBE - filler breather	1
35	K 656905	CLAMP - breather tube	2
36	K 628387	CABLE TIE - breather tubes	1
37	K 301062	TANK UNIT - fuel gauge	1
38	K 946159	GASKET - tank unit	1
39	K 614965	SCREW - No. 10 UNF x 5/8 inch	5
40	K 627479	WASHER - sealing, 3/16 inch (5 mm)	5
41	K 304807	COVER - tank unit	1
42	K 19591	PLUG - 1/8 BSP, fuel drain	2
43	K 19504	WASHER - sealing, 3/8 inch (10 mm)	2

à partir du N° 11059856 (1294)
11138410 (1394)

N° de la nouvelle jauge OK 309297

TRACTORS WITH CAB FUEL TANKS 1304 TRACTOR

24

Part No.	Description	Required
307878	TANK - fuel, left-hand	1
307883	TANK - fuel, right-hand	1
307954	BRACKET - tank support, left-hand	1
307955	BRACKET - tank support, right-hand	1
808610	STUD - 5/8 UNC x 2-1/2 inch	4
607306	NUT - self-locking, 5/8 inch UNC	4
308434	STRAP - fuel tank (Synchronmesh)	4
308059	STRAP - fuel tank (Power Shift)	3
308055	STRAP - fuel tank, RH front (Power Shift)	1
302690	STRIP - tank strap (order in meters)	1
304542	PAD - rubber, tank strap	4
302713	PAD - rubber, left tank	1
302716	PAD - rubber, right tank	1
302530	PIN - tank strap	4
602749	SCREW - 1/4 UNC x 3 inch	4
19470	WASHER - 1/4 inch (6 mm)	4
607300	NUT - lock, 1/4 UNC	4
302603	SPACER - tank strap	4
308214	TUBE - tank balance	1
308208	GUARD - balance tube	1
602851	BOLT - 5/16 UNC x 1/2 inch	2
304000	HOSE - balance tube to left-hand tank	1
307956	HOSE - balance tube to right-hand tank	1
622026	CLIP - hose, 7-1/2 inch (50 mm)	4
307874	TUBE - filler	1
601983	CAP - fuel filler	1
602643	SCREW - 5/16 UNC x 1 7/8 inch	1
19481	WASHER - lock, 5/16 inch	1
607064	NUT - 5/16 inch	1
306926	HOSE - filler tube	1
622022	CLIP - hose, 2-3/4 inch (50 mm)	2
308437	TUBE - tank breather, right-hand	1
308436	TUBE - tank breather, left-hand	1
307871	FITTING - tee, breather tube	1
656901	CLAMP - breather tube	4
308433	TUBE - filler breather	1
656905	CLAMP - breather tube	2
656387	CABLE TIE - breather tubes	1
307062	TANK UNIT - fuel gauge	1
646159	GASKET - tank unit	1
614065	SCREW - No. 10 UNF x 5/8 inch	8
627473	WASHER - sealing, 3/16 inch (2 mm)	2
304807	COVER - tank unit	1
19691	PLUG - 1/8 BSP, fuel drain	2
19604	WASHER - sealing, 3/8 inch (10 mm)	2

No. 91 to Newell's Land or 302321
a part of the 1304 tractor (1304)